


Doro Tablet

English

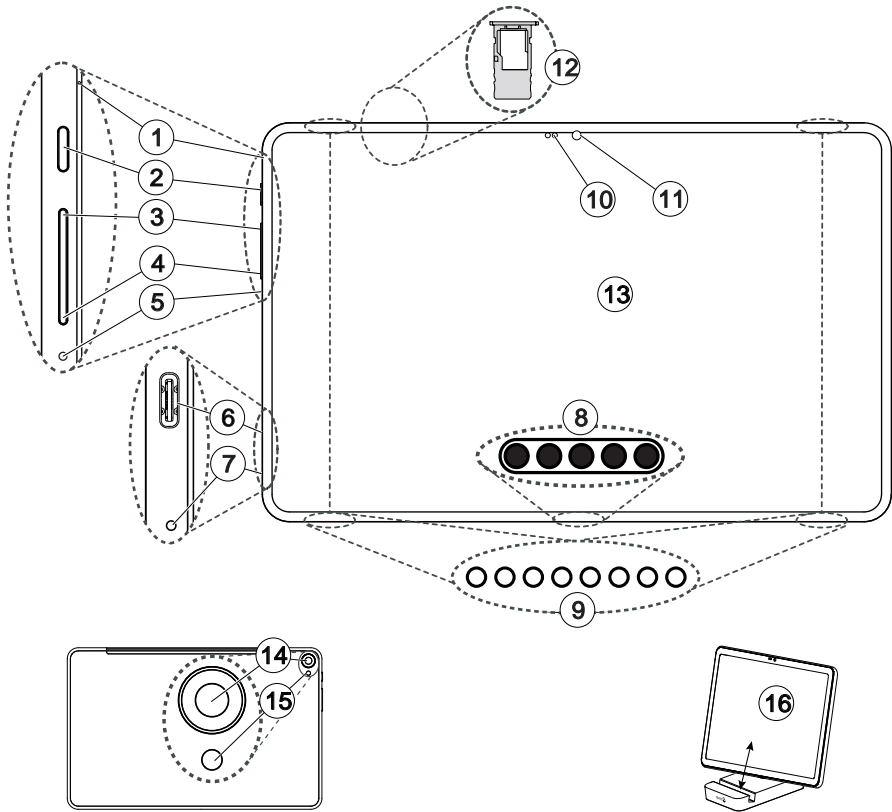





 





This guide is for reference only. The actual device, including but not limited to the colour, size, and screen layout, may vary. The actual device and the items supplied may vary depending on the software and accessories available in your region or offered by your service provider. Your local Doro dealer provides additional accessories. The supplied accessories provide the best performance with your tablet.





Note! All illustrations are for illustrative purposes only and may not accurately depict the actual device.

Overview

1. **First microphone**
2. **Power button**, press and hold to turn tablet on/off
3. **Volume UP button**
4. **Volume DOWN button**
5. **Reset pinhole**, press with a paper clip or similar to reboot the hardware.
6. **USB Type-C**, for battery charging or connection to other devices like a computer or headset
7. **Second microphone**
8. **Keyboard connector** (for the compatible keyboard accessory)
9. **4 x loudspeaker**
10. **Proximity/light sensors**, adjusts the display based on the ambient light and turns off the display when covered.
11. **Front camera**, selfie camera
12. **Memory card tray**
13. **Touch screen**
14. **Rear camera**
15. **Flash**
16. **Desk stand**
Thin slot: Tablet only
Wide slot: Tablet with protection cover accessory

Contents

How to set up your Doro Tablet	1
Unbox your new tablet	1
Getting started	2
Insert memory card.....	3
Charge your tablet	4
Turn on the tablet.....	5
Get to know your tablet.....	6
Screen protection.....	6
Start-up wizard	6
Sign in to Google™	6
Android™ and Google™	7
Assistive functions.....	7
Touchscreen motion and gestures	8
Sensors	9
Home screen	9
Lock screen.....	10
To use the tablet keys.....	10
Screen lock	12
Face recognition (Face Unlock).....	14
My applications screen	15
Quick and easy way to quiet your tablet 	16
Status bar	16
Notification panel.....	16
Quick settings panel.....	18
Enter text 	18
Keyboard accessory.....	20
Capture a screenshot	22
Connect to the Internet	22
Battery.....	23
Navigate your tablet	25
Meet “EVA” – “Enkel, Vänlig och för Alla” (Swedish) 	25
 View	26
 Send	26
 Search	26
 Add	27
 Help	27

 Set	27
Tablet settings	28
Where to find the settings	28
Date and time	28
Homepage/display settings 	29
Sound settings 	31
Improve accessibility further	32
The Bluetooth connection®	33
Aeroplane mode	34
Connect the tablet to a computer	34
My tablet information	36
Backup	36
Updating your device	36
Reboot the tablet	37
Reset the tablet	38
Memory and storage	39
Google™ Play Store	43
Install applications	44
Uninstall applications	44
Headset	45
Contacts	45
Add new contact	45
Manage your contacts	45
Add a contact shortcut to the home screen	46
Import and export contacts	46
Assistance options	46
The remote help 	46
Google search	47
To use the web browser	47
Applications	48
Email	48
Camera	49
Handle pictures in the Gallery	51
Internet (Web browser)	52
Music	52
Calendar	52
Alarm	53
Timer	54

My notes	54
Torch.....	54
Calculator	54
Google apps.....	55
The cloud.....	56
Location based services	56
Status icons	57
Safety instructions.....	57
Network services and costs	57
Operating environment	57
Medical units.....	57
Areas with explosion risk	58
Li-Polymer battery.....	58
Protect your hearing	59
GPS/Location based functions	59
Protect your personal data	59
Malware and viruses.....	60
Care and maintenance	60
Warranty	61
Device OS software warranty	61
Specifications	62
Copyright and other notices	63
Specific Absorption Rate (SAR)	64
Correct disposal of this product	65
Correct disposal of batteries in this product	65
EU Declaration of Conformity.....	65
UK Declaration of Conformity.....	65
Ecodesign declaration, energy efficiency for external power supply	66

How to set up your Doro Tablet

When you first get your tablet, there is a few actions that you need to take before starting to use it.

Unbox your new tablet

The first step is to unbox the tablet and assess the items and equipment included in the delivery. Make sure to read through the manual so you can familiarise yourself with the equipment and the basic functions. For more information about accessories or other Doro products please visit www.doro.com or contact our Helpline.

- The items supplied with the device and any available accessories may vary depending on the region or service provider.
- The supplied items are designed for this device and may not be compatible with other devices.
- Appearances and specifications are subject to change without prior notice.
- You can purchase additional accessories from your local Doro retailer. Make sure they are compatible with the device before purchase.
- Only use chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the tablet's type approval and warranty.

Getting started

Before you start using your new tablet you may need:

- **Google account.** To be able to fully use your new tablet you need a Google account. If you don't have one yet, no worries, as you will be guided through a account setup when starting the tablet for the first time. It can however be a good idea to think of a Username and Password as these will be used for many services, such as Gmail, Google Drive, Google Photos and more.
- **Memory card (optional).** You can select to use a memory card (microSD) as extended internal memory or as a portable memory.
- **Wi-Fi access.** If you have a Wi-Fi access point available, it's always good to connect to that to reduce costs for data traffic and possibly increase data speed.

Insert memory card

Memory card is optional and not included


CAUTION

Turn off the tablet and disconnect the charger before removing the memory card tray.

You can use an external memory card to get more internal storage space or as a portable memory.

Eject the memory card tray

1. Use the supplied ejection pin tool to eject the card tray by carefully pressing the thin side into the hole. Make sure that the pin is perpendicular to the hole to not damage the device or pin.
2. Gently pull out the tray from the tray slot.
3. Place the memory card in the tray. Make sure that the memory card's gold-coloured contacts are facing downwards, as shown. Compatible card type: microSD, microSDHC, microSDXC.
4. Gently insert the card tray back into its slot.

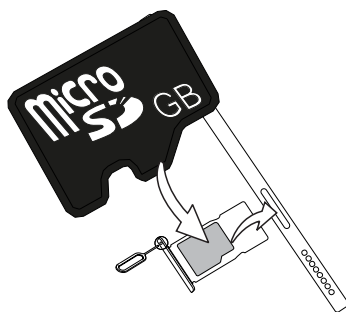

Note! You might need to restart the tablet in order for the memory card to be detected.

⚠ CAUTION

Use only compatible memory cards with this device. Compatible card type: microSD, microSDHC, microSDXC.

Incompatible cards may damage the card itself, the device and corrupt any data stored on the card. Some tablets may have a pre-installed memory card.

Take care not to scratch or bend the contacts on the memory card when inserting it into the card tray.


 

See *External memory*, p.40 for additional info.


Charge your tablet

While it's possible that your tablet will already come with enough charge to be powered on right out of the box, we recommend to fully charge it before first use.

⚠ CAUTION

Only use chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the tablet's type approval and warranty.

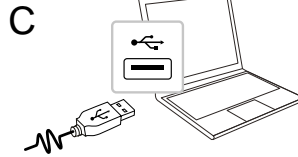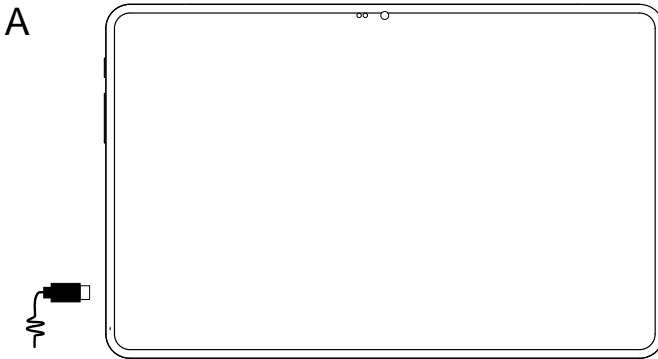

A. Insert the small end  of the included USB cable into the charging port on the tablet.

B. Insert the other end of the included USB cable into the wall charger that you plug into to a wall socket.

C. You can also plug the included USB cable into a USB port on your computer. Generally charging is quicker if plugged into the wall socket.

If the tablet is turned off during charging, the tablet is still charging. Press the **Power button** to view charging status.

Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall socket.

Note! To save power, the screen is locked after a while. Press the **Power button** to activate the screen, see *Lock screen*, p.10

If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected. Allow a depleted battery to charge for a few minutes before turning on the device.

Turn on the tablet

Note! When turning on your tablet, the installed applications may need to be updated. Application updates requires Internet connection and can take a few minutes. A Wi-Fi internet connection is needed. The tablet may appear a bit slow during the update.

- Once you've fully charged the device, turn it on by pressing and holding the **Power button**. Keep it pressed until the tablet vibrates and the display lights up.
- Wait for the tablet to start.

To turn off the tablet

- Press and hold the **Power button** until the options menu opens.
- In the options menu, tap **Power off** (optionally, press **Restart** to re-start the tablet).

Get to know your tablet


Screen protection

Before you start to use your new tablet, remove the protection film that covers the device.

Start-up wizard

The first time you start your device, a Start-up wizard helps you to setup basic settings, customise your device and sign in to your accounts, for example a Google™ account.

The device display language is the first thing you need to set. All settings presented in the Start-up wizard can also be changed later if you are unsure what to do.

You will also get some quick tutorials of how to handle your tablet. Find more tutorials at  *Help*, p.27.

Sign in to Google™

IMPORTANT!

You need an Internet connection to use this service. See *Connect to the Internet*, p.22.

To be able to fully use your new tablet you need a Google™ Account. One free account gives you access to free Google products like Gmail™, YouTube™, Google Maps™, Google Drive™, Google Photos™ and other Google product. It's a convenient way to manage your tablet's applications, contacts, calendar events, reminders and more. You can also back up your information in case you should lose your tablet. You don't have to use any of the specific Google services like Gmail on a daily basis if you don't want to, and you can add other email accounts to your tablet.

Create Google™ account

1. From the Home screen, select  **Play Store**.
2. Follow the on-screen instructions to complete the account setup.

IMPORTANT!

It is crucial that you remember your Google account username and password. During a factory settings restoration or microSD card-based update, Google's anti-theft mechanism requires you to enter the Google account your tablet last logged in to on the startup navigation screen for identity authentication. Your tablet can properly power on only after the identity authentication passes. Also, if you have more than one Google account, make sure to enter the details for the relevant account.

Android™ and Google™

Your new tablet runs on Android™. Android™ is a mobile operating system developed by Google™. It is based on a version of Linux and other open source software, and is designed primarily for touchscreen mobile devices such as tablets.

You can find more help regarding Android™ on support.google.com/android/.

Android™ is also associated with a suite of software developed by Google™, called Google Mobile Services (GMS), that are pre-installed on this device. This includes apps such as Gmail, the application store Google Play, the Google Chrome web browser and Google Search app.

You can find more help regarding the apps in Google Mobile Services (GMS) on support.google.com. Select the app you need help with.

Assistive functions

Use the symbols to guide you through supporting sections in the manual.



Seeing



Handling




Hearing



Safety

Touchscreen motion and gestures

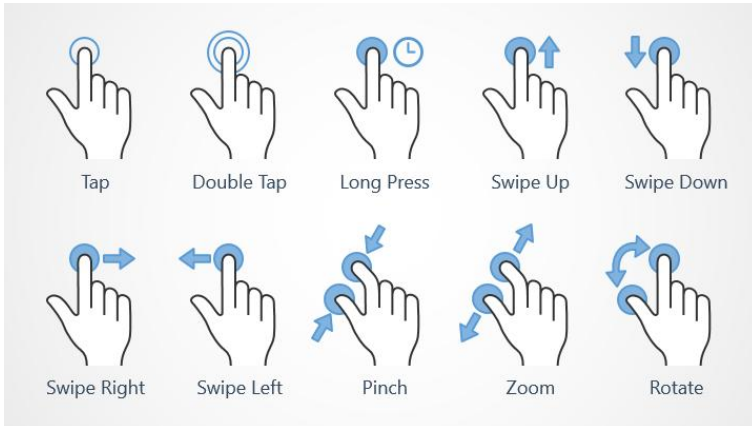

Tap

- Tap an item, such as a button or a program icon, to select it or to open it. Tap can be used to select or deselect a relevant tick box in a list of options.

Double tap

- Touch the same item twice to zoom in on a map or an image.

Long press

- Touch and hold an item on the screen. Some actions, such as to move an icon on the Home screen, begins with a long press.

Swipe

- A swipe is when you press your finger to the screen and drag it, the screen moves. Swiping to the left on the Home screen, for example, moves you to the next Home screen. Drag or flick your finger on the screen in the direction you want to go. Think of it as using the left- or right-arrow keys on a computer keyboard. **Flick** means to swipe more quickly on a page, quickly flick your finger on the screen in the direction you want to move.

Pinch

- Place two fingers separated on the screen and pinch them together to zoom out of a map. This function is not always applicable.

Zoom

- Place two fingers together on the screen and spread them to zoom in. This function is not always applicable.

Rotate view in maps

- Using two fingers, rotate the map clockwise or counterclockwise. Touch the Compass Pointer icon to reorient the map with north at the top of the screen.

Drag and drop

- Dragging and dropping is a way of moving something – for example, an app on your desktop – from one place to another. To drag, put your finger on an app and hold down. As you move your finger across your screen, the app is dragged across the screen, or across several screens. Place your finger where you want the app to go and release your finger. The app drops.




CAUTION

Avoid scratching the touch screen, do not tap it with anything sharp or allow the touch screen to come into contact with water. Do not touch the screen if the glass is cracked or shattered.

Sensors

Your device has sensors that detect light and proximity next to the front camera. The sensors are not visible, but it can be good to know that the sensors are located next to the selfie camera lens.

- Light sensor** to detect light and adjust the brightness of the screen, if set to automatic.
- Proximity sensor (touch sensor)** to detect motions. It can turn the touch screen off to prevent unintentionally activating other functions.

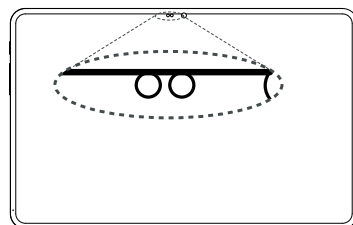


Home screen

The Home screen is your start screen on your Doro Tablet, and here you can collect the apps and your favourite contacts that you use most often.

You can also set your favourite picture as wallpaper. Use the Google™ search bar to quickly find what you are looking for. To manage shortcuts on the Home screen see *My widgets*, p.29.

Go to the Home screen

- Tap the home display icon .

Lock screen

The screen turns off and locks when you are not using the tablet. The lock screen can show time and date as well as notifications like missed calls or messages.

Note! Your tablet continues to run while it's sleeping. Mail is received, social networking updates are made, and so on. Your tablet also continues to play music while the screen is locked.

Activate the screen


- Briefly press the **Power button**.

Lock the screen



- Briefly press the **Power button**.

See more on *Screen lock*, p.12.

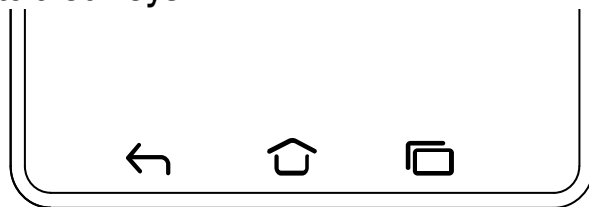To use the tablet keys



Home key

- Tap the  to return to the Home screen.
- Tap and hold  to launch **Google Assistant**. **Google Assistant** is an intelligent personal assistant developed by Google, that is available within the Google search mobile application.

IMPORTANT!

You need an Internet connection and a Google account (see, *Sign in to Google™*, p.6) to use this service.

To set up Wi-Fi, see *Connect to Internet using wireless networks (Wi-Fi)*, p.22.


Back key 

Tap to return to the previous screen, or to close a dialog box or menu.

Close keyboard key 

Tap to close the keyboard.



Recents key (overview key) 

- Tap  to view recently used applications.
 1. To open an application, tap it.
 2. Tap the app icon on top for app information.
- Double tap to switch to the previous used app.

Volume keys

- From standby the volume keys adjust the media volume. Tap the options icon **•••** on the bottom for more sound and volume options.
- To adjust the volume level for music and videos when in an application that plays music or other audio (like games or video players).
- To zoom in Camera mode. See *Camera*, p.49 for alternative settings for the volume keys.

Gestures

You can also use gestures to handle the tablet. The settings for gestures can be found via  **Set** →  **Advanced settings** → **System** → **Gestures**.




Quickly open camera

Activate this to turn on the screen when you pick it up.

System navigation

You can select to hide the navigation button bar and instead use swipe gestures to control your device navigation.

With **Gesture navigation** activated:

- To go Home (same as ) , swipe up from the bottom of the screen.
- To switch apps (same as ) , swipe up from the bottom, hold, then release.
- To go back (same as ) , swipe from either the left or right edge.

Select **3-button navigation** to revert back to traditional system navigation.



Lift to check tablet

Activate this to turn on the screen when you pick it up.


Soft keys


Android smart tablets like your Doro Tablet, as well as most Android applications, feature common icons. Many icons that you see on-screen are actually buttons on the touchscreen. If you don't see the text, images or information that you want, try to touch the screen or to tap an icon for a pick list or to reach another menu.

To access further options

 more options (available in the action bar or in apps).
or


To enable and disable features and functions

 enabled functions.



 disabled functions.


Screen lock

The screen lock prevents unwanted actions on the touch screen when you are not using the tablet and also protects your data if your tablet should be lost or stolen.

Screen lock settings

You can change the way that you unlock the screen to prevent others from accessing your personal information.

1. To activate the screen lock or change the type of screen lock, tap  **Set** →  **Advanced settings** → **Security**.
2. Tap **Screen lock**. If you already have a screen lock activated you need to enter the unlock code or pattern.
Tap to select one of the following:

- **None** to unlock, press the **Power button**. This option gives no security.
- **Swipe** to unlock you slide  up with your finger. This option gives no security.
- **Pattern** to unlock you trace a pattern with your finger on the screen. This option gives medium security.

Note! You can trace over the dots in any order, but you can trace over the same dot only once. The pattern must cover at least four dots.

- **PIN** (default setting) to unlock you type a PIN. A PIN consists of numbers only. Enter at least four numbers, and then enter the password again to verify it. This option gives medium to high security.
- **Password** to unlock you type a password. A password can consist of characters and/or numbers. Enter at least four characters including numbers and symbols, and then enter the password again to verify it. This option gives high security.

Note! You can also use face recognition (**Face Unlock**) to unlock your device. The face recognition unlock method requires an additional way of securing your device, like **Pattern**, **PIN** or **Password** as well. See more at *Face recognition (Face Unlock)*, p.14. This option is less secure than **Pattern**, **PIN** or **Password**.

IMPORTANT!

It makes sense to choose a password, PIN code or a pattern that is easy to remember, but try to make it difficult enough so that others can't guess it. The password, PIN code or pattern screen lock, together with your Google account login is the basis for the anti-theft features on this tablet. Enabling a secure screen lock and having a Google account on your tablet will make it difficult for a thief or other person getting access to your personal data or even resetting your tablet. Keep the secure screen lock information and Google account login stored in a safe place!, see *Reset the tablet*, p.38.

Face recognition (Face Unlock)

Note! You can set to use your face to unlock your device, authorize purchases, or sign in to apps.

- If you use your face recognition as a screen unlock method, your face cannot be used to unlock the screen the first time after turning on or restarting the device. You must then first unlock the screen using the pattern, PIN, or password you set when registering the face. Be careful not to forget your pattern, PIN, or password.
- If you change the screen lock method to Swipe or None, which are not secure, also your face recognition data will be deleted. If you want to use your face recognition data in apps or features, you must register your face recognition data again.

IMPORTANT!

Before using the face recognition to unlock your device, keep the following precautions in mind.



- Your device could be unlocked by someone or something that looks like your image.
- Face recognition is less secure than Pattern, PIN, or Password.
- In the dark, low light or backlighting conditions, the success rate with facial recognition to unlock your device will decrease.

For better face recognition

Consider the following when using face recognition:

- Make sure your appearance is in normal conditions when registering your face, such as wearing glasses, hats, masks, beards, or heavy makeup.
- Make sure that you are in a well-lit area and that the camera lens is clean.
- Make sure that the picture is not blurry for better match results.

Register a face image for the first time



1. Tap  **Set** →  **Advanced settings** → **Security** → **Face Unlock**.
2. Enter your pattern, PIN or password if needed.
If you don't already have screen lock method, such as **Pattern**, **PIN** or **Password**, then you need to select **Face Unlock + pattern**, **Face Unlock + PIN** or **Face Unlock + password**.
3. Follow the on-screen instructions to complete the face registration by positioning your face inside the detection area on the screen.
4. Tap **Done** when ready.

Note!

Please be aware that if you use face unlock to unlock your device, sign in to apps, and confirm payments:

- Looking at the tablet can unlock it when you don't intend to.
- Your tablet can be unlocked by someone else if it's held up to your face, even if your eyes are closed.
- Your tablet can be unlocked by someone who looks a lot like you.

Delete face unlock


1. Tap  **Set** →  **Advanced settings** → **Security** → **Face Unlock**.
2. Enter your pattern, PIN or password.
3. Tap **Delete face model** to permanently delete your face unlock data and confirm with **Delete**. After removal, you will need your PIN, pattern, or password to unlock your tablet, sign in to apps, and confirm payments.

My applications screen

Application is another word for program or software, a common way to shorten the term application is App. The application screen contains the applications that come pre-installed on your Doro Tablet and any other

apps that you choose to install. The applications screen extends beyond the regular screen, so you need to scroll down to view all content.

Open the application screen

- From the Home screen swipe up or tap the arrow .
- Swipe up or down to view all installed applications.





Tip: You can also swipe up or down to open and close the extended Home screen.

Close the application screen

- Tap  or .

To install/uninstall applications, see *Google™ Play Store*, p.43.

Quick and easy way to quiet your tablet

- Use the volume keys to adjust the media (music, video) volume.
- Drag the on-screen slider to adjust the sound level.
- Tap the icon on the top switch the tablet's notification mode:
 - Tap  to enable ring mode.
 - Tap  to enable **Silent mode**.
 - Tap  to enable **Vibration mode**.
- Tap the settings icon  on the bottom for more sound and volume options.

Status bar


The status bar, located at the top of your screen, shows signal strength, on-going and new applications as well as battery status.



Notification panel


Open the notification panel to view more information about the icons in the status bar, to view your notifications and manage the quick settings like **Wi-Fi** or **Torch**.

Open and close the notification panel

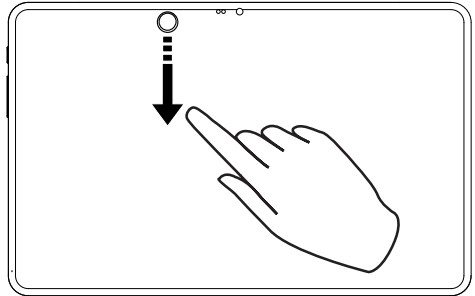To open the notification panel, swipe the status bar down.



To close the notification panel, swipe up twice, or tap  twice, or tap  to return to the Home screen.

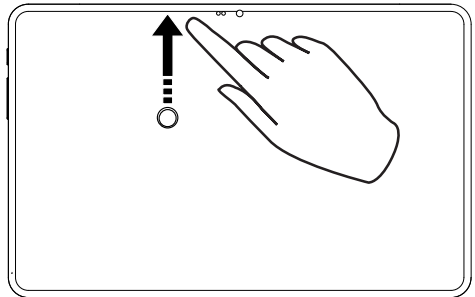


Clear the notifications

- To clear all the notifications, tap **Clear all**.
- To close one by one, swipe to the left or right.

Notifications on lock screen

All app notifications appear on the lock screen ready for viewing. Not only that, but you can interact with them as well. Depending on the notification in question you can:





- **Swipe** to dismiss.
- **Tap** to reply.
- **Double tap** to go to the relevant app.

Note! To hide sensitive alerts, swipe the status bar down twice and tap  **→ Notifications → Notifications on lock screen → Show conversations, default and silent, Hide silent conversations and notifications or Don't show any notifications.**

Quick settings panel



Use the quick setting buttons

Swipe the status bar down to open the Quick settings panel. Tapping an icon enables you to manage the feature directly within the Quick Settings panel, like toggling the flashlight on and off, or enable/disable the Wi-Fi. Long pressing an icon jumps into the corresponding page within Android's Settings for full control.

Tip: Swipe down again and use the shortcut  to reach  **Set**   **Advanced settings.**

Customise the Quick settings panel

Swiping down once from the top of your tablet's screen shows your notifications as well as a quick access bar containing the first five tiles in your Quick Settings panel.

1. Swipe down from the top of the screen to reveal the Quick settings panel.
2. Swipe down again and tap  **Edit**.
3. Long press on any tile to move, add or remove it from the Quick Settings panel.
4. Tap the  to exit Edit mode.

You can get more help at support.google.com/android/answer/9083864.


Enter text

You can enter text, numbers and other characters using the on-screen keyboard. Select a text field to open the on-screen keyboard. You can adjust your on-screen keyboard in various ways to improve readability.

Activate keyboard

- Tap a text field.

Hide the keyboard


- Tap the icon .

Special characters and numerals


1. Tap **?123** for more characters.

2. Select the desired character or select =\< to view additional characters.
3. To return, select **ABC**.





Move the cursor within text

- Tap somewhere in the text to get the marker. Put your finger on the marker  to move the cursor within the text. As you move your finger, the marker is dragged over the text. Place your finger where you want the marker to go and release your finger. The marker drops.



Switch between upper case and lower case letters

The **Shift-key**  is found to the lower left of your keyboard. Capitalisation is activated when you start entering text. Capitalisation means writing a word with its first letter in uppercase and the remaining letters in lowercase.

Note! Double tap **Spacebar** to make a full stop followed by a space.

- Tap **Shift key**  twice to type ALL CAPS .
-  to type only lower case letters.
-  to type with capitalisation.

Smileys & Emojis

1. Tap  for a list of pictures.
2. Select the desired picture.
3. To return, select **ABC** or tap .

Enter text with word predictions

Start entering text and the dictionary suggests words based on the keys you have selected. When you're done typing something, you can go back and tap a misspelled or mistakenly autocorrected word. Tap the misspelled or mistakenly autocorrected word to select other possible auto corrections. This is the easiest way to fix mistakes — if you don't find the word you wanted, use the Backspace key to erase and type a new word.




Enter text

1. Start to type a word, your keyboard may provide predictions as you type. You can tap a predicted word below the entered text to automatically complete it.
2. Tap the **Spacebar** to keep the word you typed and continue with the next word.

Cut, copy, share and assist



Cut, Copy, Share, Select all and **Paste** are features available when writing an email, text message/box, or basically anywhere.

Note! Long pressing on any action bar icon will help to identify them by popping up a text bar describing the action.

1. Touch and hold the text you want to copy.
2. The selected text is highlighted   . Move the marker on either end to increase or decrease the highlighted area.
3. When the highlighted area is the size you want, select **Cut** or **Copy**.
4. Touch and hold where you want to paste. The text box **Paste** will be displayed. Tap the text box to paste the text.

Select keyboard and personalise your keyboard

You can select to personalise your keyboard, depending on the selected keyboard.

1. Tap  **Set** →  **Advanced settings** → **System** → **Languages & input** → **On-screen keyboard**.
2. Tap wanted keyboard and make the wanted personalisations to the keyboard.


Keyboard accessory

For easier typing, you can attach a keyboard, sold as an accessory.

Note! The keyboard accessory is only available for some markets/countries. Keyboard layouts vary from country to country, so make sure you get the keyboard that is matching your language.


Keyboard overview

- A. Camera hole
- B. Foldable stand cover
- C. Tablet connector
- D. Reinforced tablet holder corners
- E. Keyboard
- F. Trackpad

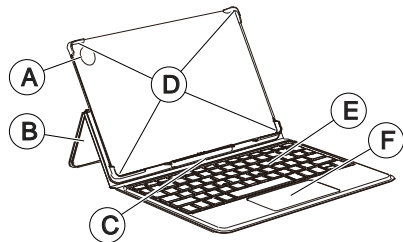


Attaching keyboard

- A. Slide in the tablet from the top and make sure that:
- B. The lower left corner slides into the lower left holder corner.
- C. The lower right corner slides into the lower right holder corner.
- D. The keyboard pins are aligned with the tablet connectors.
- E. Push the upper left corner of the tablet into the holder corner.
- F. Push the upper right corner of the tablet into the holder corner.

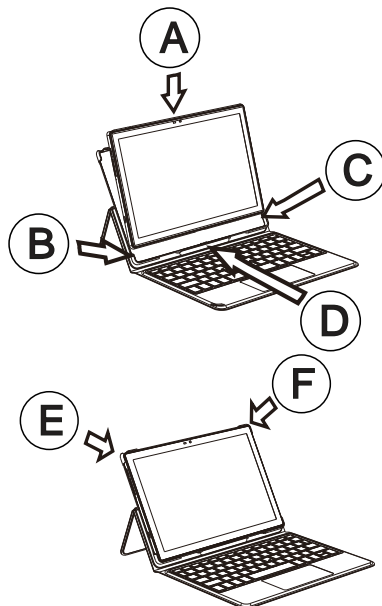

Detaching keyboard


- A. Push the tablets upper left corner out of the holder.
- B. Push the tablets upper right corner out of the holder.
- C. Lift the tablet gently out of the holder.

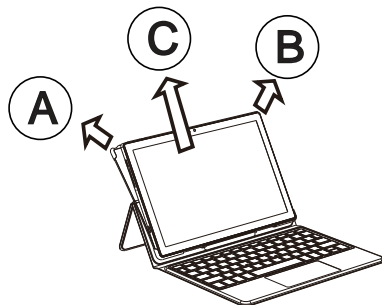

Set keyboard language

When the keyboard is connected you will get a notification to set the keyboard language to match the keyboard.

If you don't get the notification, press:

 **Set** → **Advanced settings** → **System** → **Languages & input** → **Physical keyboard** → **Doro Keyboard™** → **Set up keyboard layouts** → Select and activate the wanted keyboard language.

For more help, see support.google.com/gboard/answer/7068494.

Capture a screenshot

It's easy and often useful to get a snapshot of your tablet's screen, a screenshot. To view the screenshot, see *Handle pictures in the Gallery*, p.51.

Take a screenshot





1. Find the screen you want to get a snapshot of.
2. Simultaneously press and hold the **Power button** and the **Volume minus key**.

Connect to the Internet

Your Doro Tablet is just like any other tablet. you can also access the Internet, send and receive emails, install apps and games, and check your social networking sites, like Facebook and Twitter, for this you need to be connected to Internet. Unless you configured an internet access in the startup wizard, when first starting your tablet, here are the instructions on how to do it.

Connect to Internet using wireless networks (Wi-Fi)

Use **Wi-Fi** to connect your tablet to the Internet. You may already have Wi-Fi in your home and it's often available at workplaces. Take advantage of free networks in coffee shops, hotels, trains and libraries. Connecting to the Internet with Wi-Fi doesn't incur additional data traffic costs, unless you have to pay to get on the wireless network.

1. From the Home screen, tap  **Set** →  **My internet connection** → **Wi-Fi**.
2. Switch  to enable. Available networks are displayed in a list. The networks can be open or secured (.
3. Tap the wanted network and tap **Connect**.
If secured, enter the password. Tap **Show password** to see the password in clear text.
For more information, contact the relevant network administrator.

Tip:  is shown in the status bar when connected.

You can easily turn on and off **Wi-Fi** from the quick settings in the notification panel. To open the notification panel, swipe the status bar down.

Note! Keep in mind that your tablet remembers Wi-Fi networks you connect to. If Wi-Fi is turned on, the tablet automatically connects to the network next time you are within reach. Some open networks require you to log in to a webpage before gaining access to the network.

Use a mobile hotspot

If you have a smartphone that supports Internet connection sharing, you can use that phone's mobile data to connect your tablet to the internet. Sharing a connection this way is called tethering or using a hotspot. Most modern smartphones can share mobile data via Wi-Fi, Bluetooth, or USB.

IMPORTANT!

The use data services may incur additional charges for data services. We recommend that you check your data rates for your subscription with your service provider.

Some mobile service providers limit or charge extra for tethering. We recommend checking with your service provider.

Battery



Increase the charging speed

1. To increase the charging speed, turn the device or its screen off when you charge the battery. Press the **Power button** to view charging status.
2. The device can be used during charging, but it may take longer to fully charge the battery.
3. If the device heats up or the ambient air temperature rises, the charging speed may automatically decrease. This is a normal operating condition to prevent damage to the device.

Battery saver mode

Once activated, the battery saver mode, helps to increase battery life. The battery saver is designed to start functioning when the battery level of your tablet reaches a certain level. To save battery many features are slowed



down, such as: background syncing, vibrations (vibrate on touch will be lost), email and/or message processes and more.

1. From the Home screen, tap  **View** →  **My tablet information** → **Battery info** → **Battery Saver** → activate **Use Battery Saver**.
2. When activated, the colour of the battery in the status bar at the top of the screen turns orange. This lets you instantly know that the mode is activated.
3. To automatically activate power saving mode when the remaining battery power reaches the set level, tap **Set a schedule** → **Based on percentage**.
4. If needed, adjust the battery level remaining percentage when the battery saver should turn on automatically.

Note! You will be prompted to enable the battery saver feature when the battery level reaches the set level. The battery saver feature will turn off automatically when you charge your device.

Reduce battery consumption

Here are some tips on how you may extend the tablet's battery power by reducing battery consumption.

- Charge your tablet often, preferably every day. Charging does not affect the lifetime of the battery.
- When not downloading data from the Internet, which is power consuming, disable data connections over mobile networks. Data is still transmitted over Wi-Fi.
- Turn off **Wi-Fi** when not in use. Use the notification panel to disable the features.
- Turn off **Bluetooth** when not in use. Use the notification panel to disable the features.
- Deactivate auto-syncing of apps and synchronise your applications manually, like your email, calendar and contacts.
- Use the menu in  **View** →  **My tablet information** → **Battery info** → **Battery usage** to see which applications use the most power.
- Decrease the screen brightness, see *Brightness level*, p.30.
- When in areas with no Wi-Fi coverage, turn off your device or activate the **Aeroplane mode**. The device repeatedly scans for available networks which consumes power. See *Aeroplane mode*, p.34.

- The GPS is also quite battery consuming. If you want to stop apps reporting on your location automatically, make sure that Location reporting is off, see *How to turn off GPS location services*, p.56.
- Use handsfree devices to listen to music. Handsfree devices consume less battery than your device's own loudspeakers.
- Lock the screen when not in use, press the **Power button** and your display goes to sleep. See *Lock screen*, p.10.

Navigate your tablet






Meet “EVA” – ”Enkel, Vänlig och för Alla” (Swedish)

(Easy, friendly and for everyone)

While Doro tablets offer as true an Android experience as there is, we take simplicity even further thanks to our intuitive, action-based interface, EVA. EVA makes using a tablet even easier. It's like having someone who understands your needs always by your side. Users never need to look around for things they can't find. EVA simply gives them a few clear choices, and then does what the user wishes based on their response. She's also the perfect companion when starting up the tablet for the first time, guiding the user every step of the way. And because she is designed by Doro, EVA makes the technology fun, available and easy for everyone, whether new to Android, or a long-time user and fan.









Doro's unique teletablet menu is action-based and allows you to navigate your tablet, by just asking yourself, What do I want to do?

For example, send an email to a contact that is available in your contact book.

1. Tap the  **Send** button.
2. What would you like to send? Tap  **An email**.
3. Tap **To contact** to select a contact or tap  to search for a contact.
4. Enter a subject followed by the message text.
5. If desired, tap  to access more options.
6. When done, tap  to send the email.




View

To reach many of the most frequently used apps.

-  **My emails** to view emails, create or add an email account, see *Email*, p.48
-  **My pictures and videos** to view stored images and videos, see *Handle pictures in the Gallery*, p.51
-  **My contacts** to see and handle your ICE card (In Case of Emergency), see *Contacts*, p.45
-  **My calendar** to see the calendar and your events, see *Calendar*, p.52
-  **My notes** to see your notes, see *My notes*, p.54.
-  **My location** to go to Google maps and find your location, search for addresses, find your way and more.
-  **My applications** to reach your apps, see *My applications screen*, p.15.
-  **My tablet information** to view information and data about your tablet, see *My tablet information*, p.36.



Send




To send and share messages, email, pictures and more from your tablet.

-  **An email** , see *Write emails*, p.48
-  **A picture or a video** to send a picture or video. To view stored images and videos, see *Handle pictures in the Gallery*, p.51
-  **My location** to send your present location.

Search







To find information on the Internet, your way to a place or find out what music you are listening to.

-  **Something on the Internet** to search the Internet, see *Internet (Web browser)*, p.52.
-  **Directions, an address, a place** to find an address, a place or your way from your current position.

-
-  **Around me** to find useful facilities nearby your current position.
 -  **What song is playing now** to search the name of that of song/melody that you hear.
 -  **Something in my tablet** to search your tablet for contacts, applications and downloaded files.



Add

To add new contacts, notes, alarms, events etc.

-  **A contact** to create a new contact, see *Add new contact*, p.45.
-  **A note** to write a note, see *My notes*, p.54.
-  **An alarm** to set an alarm or reminder, see *Alarm*, p.53.
-  **A timer** to set timer, see *Timer*, p.54.
-  **An event** to book an event and get a reminder at the start time, see *Calendar*, p.52.
-  **An application** to add new applications, see *Google™ Play Store*, p.43.




Help








Step by step tutorials for you to discover more features of your tablet

-  **Tutorials** to find helpful tutorials for your tablet.
-  **Tablet status** to view information and data about your tablet.

Set

To manage the settings of your tablet.


-  **My alarms** to set an alarm, see *Alarm*, p.53.
-  **My vision settings** to adapt the text and icon sizes to best suit your eyesight, see more at *Font size*, p.31 and *Display size*, p.31.
-  **My internet connection** to activate and set up your Internet connection, see *Connect to the Internet*, p.22.

-  **My other connections** to activate and set your connection with **The Bluetooth connection** or **The geolocation options**, see *The Bluetooth connection*[®], p.33 or *Location based services*, p.56.
-  **My homepage** to personalise the Home screen with your own wallpaper and widgets, see *My Wallpaper*, p.29 and *My widgets*, p.29.
-  **An assistance option** to start remote help from this menu when needed, see *The remote help* , p.46.
-  **My messaging apps** to enable or disable the display of additional messaging apps in Send/View messages actions.
-  **My backup settings** to handle backup and restore of the settings of your device, see *Backup*, p.36.
-  **Advanced settings** to set screen's brightness, sounds volume and vibration on/off, Haptic feedback (vibration on/off when you touch the screen), storing in the tablet or on the memory card, the tablet's language, date and time, and the more advanced Android settings.



Tablet settings

Where to find the settings

To reach the most common settings for your tablet



1. From the Home screen, tap  **Set**.


To reach the more and advanced settings for your tablet

1. From the Home screen, tap  **Set**.
2. Tap  **Advanced settings**.


Date and time

Your tablet should already be set to the correct time, date, time format and time zone, these are provided by your network operator. If not, you can set it yourself. Do as follows to reach the settings:

1. From the Home screen, tap  **Set** →  **Advanced settings** → **System**.
2. Tap **Date and time**.
3. Enable **Set time automatically** to automatically update the time and date.

Note! Switch  to disable and manually set time and date.



4. Enable **Use location to set time zone** to automatically update the time zone based upon your location.

Note! Switch  to disable and manually set time zone.

Homepage/display settings

My Wallpaper

Wallpaper is the background on the Home screen and on the Lock screen. You can change the wallpaper image into any image, such as a picture you've taken or pre-loaded images.

1. From the Home screen, tap  **Set** →  **My homepage**.
2. Tap **My Wallpaper**.
3. Tap **Change wallpaper** to select between different themes of backgrounds.
4. Tap an image to select it and confirm with ✓.



Note! You can set wallpaper both for your home screen and lock screen.

My widgets

Widget is a smart feature in Android tablets. A widget works like a mini-application or informative window that is also a shortcut to a larger other app on your device. With a Widget you do not have to open the App, the Widget runs directly on the home screen, showing you the information. Widgets often take the form of on-screen devices such as clocks, event countdowns, auction-tickers, stock market tickers, flight arrival information, daily weather etc..

Find and add a widget in the menu

You can place even more widgets on the Home screen by following these steps.

1. From the Home screen, tap  **Set** →  **My homepage** → **My widgets**.
2. Touch and hold to select your widget. Drag and drop the widget to the Home screen.



Note! You can also drag the widget to the right on your home screen to create an additional home screen.

Note! You can also long press on the home screen and then tap **Widgets** to add a widget.

My home settings




Notification dots

Some apps show a dot, a small marking above the individual app icon, when you get notifications.

1. From the Home screen, tap  **Set** →  **My homepage** → **My home settings** → **Notification dots**.
2. Tap  by **Notification dot on app icon** to enable/disable notification dots.



Add app icons to the home screen

With this feature enabled, you will automatically get an app icon on your home screen when you install a new app.

1. From the Home screen, tap  **Set** →  **My homepage** → **My home settings**.
2. Tap  by **Add app icons to the home screen** to enable this feature.

Brightness level

You can adjust the brightness of the screen or totally let the system handle it. The Adaptive Brightness setting lets the system determine the optimal brightness for your tablet. It's an automatic setting, just enable it and it will raise or lower the brightness depending on the light in your current environment. This is not only intended to save you time manually altering brightness settings, but also to improve battery life; your tablet should always be bright enough for your needs but not so bright that it's consuming more battery than is necessary.



1. From the Home screen, tap  **Set** →  **Advanced settings** → **Display** → **Brightness level**.
2. Drag the slider to adjust the screen brightness manually. The higher value the brighter the screen.

Tip: When **Adaptive brightness** is enabled, the screen brightness will automatically adapt to your current environment.

Swipe the status bar down to open the Quick settings panel. Swipe down again to reach the brightness slider control.



Screen timeout

You can set the length of time the device waits before turning off the display backlight.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Display** → **Screen timeout**.
2. Tap to set the length of time.



Font size

Adjust the text size to make your screen easier to see.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Display** → **Font size**.
2. Drag the slider to adjust the text size.

Display size



Adjust to make items on your screen smaller or larger.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Display** → **Display size**.
2. Drag the slider to adjust the text size.

Sound settings



Volume

Adjust volume levels for various sounds on your device.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Sound**.
2. Drag the slider to adjust the volume:
 - **Media volume** (for music, videos, games)
 - **Alarm volume.**
 - **Notification volume**

Notification tone and other tones

Adjust settings for various sounds on your device.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Sound** → **Default notification sound**.
2. Tap a ringtone to hear the tone.
3. Tap **OK** to confirm.




Tip: You can also set more sounds and other sound settings. Press the volume keys on the side of the tablet to adjust the volume.

Improve accessibility further

Improve accessibility further with features that make the device easier to use for users who have impaired vision, hearing, and reduced dexterity.




Colour correction

The colour correction setting enables your device to compensate for colour blindness.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Accessibility** → **Text and display** → **Colour correction**.
2. Tap  by **Use colour correction** to enable this feature.
3. Tap **Correction mode** to select colour mode for persons with colour vision deficiency to see things more clearly:
 - **Deuteranomaly** (enhance the perception of green colour, red-green)
 - **Protanomaly** (enhance the perception of red colour, red-green)
 - **Tritanomaly** (enhance the perception of blue colour, blue-yellow)
 - **Greyscale** (black and white display)

Colour inversion

Colour inversion exchanges colour values. For example, black text on a white screen becomes white text on a black screen.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Accessibility** → **Text and display** → **Colour inversion**.
2. Tap  by **Use colour inversion** to enable this feature.

Note! All colours on your screen are inverted and you may get some pretty odd colour combinations.

The Bluetooth connection®

You can connect wirelessly to other Bluetooth® compatible devices such as headsets or other tablets.




Note! Bluetooth can use a lot of battery power. Don't forget to turn off when not using.

Turn Bluetooth on/off

1. From the Home screen, tap  **Set** →  **My other connections** → **The Bluetooth connection** → **Connection preferences** → **Bluetooth**.
2. Switch  to enable.

Tip: Your tablet has a Bluetooth name that other devices see when you connect them via Bluetooth. You can change that name by tapping on **Device name**. Enter the wanted name and confirm with **Rename**.


Pair with other Bluetooth devices

1. From the Home screen, tap  **Set** →  **My other connections** → **The Bluetooth connection**.
2. Tap **+ Pair new device**.
3. Select the unit that you want to connect to.
4. Tap **Pair** to connect. You may be asked to input a password or to press a button. If prompted, input the password or otherwise acknowledge the connection on your tablet or the other device.
5. After you acknowledge the password (or not), the units are connected and communicating. You can begin using the device.
6. If you need more settings for the unit, tap **Previously connected devices**.
7. Tap  next to the device name.

Note! Because the devices are now paired, when you turn on Bluetooth on your device and the other device is on, the connection re-establishes and they'll stay paired until you unpair them.

Unpair devices

1. From the Home screen, tap  **Set** →  **My other connections** → **The Bluetooth connection**.




2. Tap **Previously connected devices**.
3. Tap  next to the device name that you want to unpair.
4. Tap **Forget**.

Note! To disconnect you can turn off the other unit or disable Bluetooth on that device.

Aeroplane mode


In **Aeroplane mode** you can't make or receive calls, surf the web or download emails, or do anything that requires an Internet connection, this is to prevent disturbance to sensitive equipment. You can still play games, listen to music, watch videos and other content, as long as all this content is saved on your memory card or internal storage.

When you take your tablet abroad, you can keep it in flight mode. If you do that, there's no chance of data roaming charges, and you can still enable Wi-Fi. Enable **Aeroplane mode** when in areas with no network coverage to save battery since the tablet repeatedly scans for available networks and this consumes power. You can be notified by alarms, if alarms are activated.

1. From the Home screen, tap  **Set** →  **Advanced settings** → **Network and Internet**.
2. Tap  to activate the **Aeroplane mode**.

Tip:  is shown in the status bar when enabled.

Connect the tablet to a computer

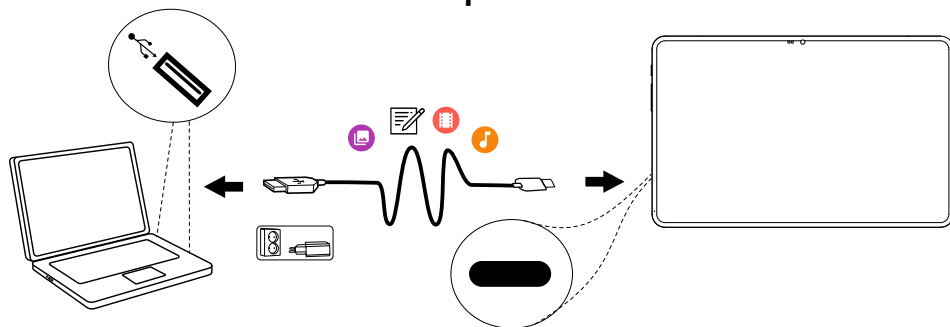

Connect the tablet to a computer and start transferring pictures, music and other file types. All you have to do is connect a USB cable between the

tablet and computer. From your computer's file explorer, you can drag and drop content between your tablet and the computer.

Note! You might not be able to transfer some copyright-protected material.

Tip: If default storage location is set to memory card, all photos and videos taken by the tablet are stored in the **DCIM/Camera** folder on the memory card.

Drag and drop content between tablet and a computer

1. Connect your tablet to a computer using a USB cable.

Note! You might need to wait for the driver to be installed on your computer before you can access the tablet.

Mac users, see <https://www.android.com/filetransfer/>.



2. Open the notification panel on the tablet by swiping down from the status bar. The current connection type is displayed and the normal state is **Charging this device via USB**. Tap **Charging this device via USB/Android System** and tap again for more options (**Tap for more options.**) and select **Media device (MTP)**.
3. You can be prompted, on the computer screen, to choose what to do when you connect your tablet to a computer.
4. Select to open the device and view files in the computer's file explorer.
5. Wait until the tablet/memory card appears as external disks in the computer's file explorer.
6. Drag and drop selected files between the tablet and the computer.
7. If necessary, also use the **Safe to remove hardware** function on your computer.
8. When done, remove the USB cable.

Tip: You can select different connection modes for your tablet when connecting to a computer. Swipe down the status bar and tap to select one of the options.

Note! When the tablet/memory card is mounted to the computer, the tablet cannot access the memory card. Some functionality and applications in the tablet, such as the camera, may not be accessible. You can transfer files by using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.

My tablet information




To access device information such as the current software version, battery status or to update device software.


- From the Home screen, tap  **View** →  **My tablet information**.
 - Battery info** to access information and statistics about battery status and battery usage history.
 - Storage** check the status of the used and available memory.
 - Tablet status** to check system and software versions and more.
 - Device update** to check for available software updates. See *Updating your device*, p.36.
 - Doro apps legal information** to see a list of related software licences.

Backup

Your Google account information is set to back up automatically. Follow below settings to make sure your contacts, system settings, apps, calendar, and email will be restored whenever you set up a new device with that same Google account.

Backup with Google

- From the Home screen, tap  **Set** →  **Advanced settings** → **System**.
- Scroll to and select **Backup** and make sure that the switch is ON  to keep device data safe.

There are many apps that allow you to backup your photos, applications and much more. Some apps even offer cloud storage that allows mobile uploading, and others that allow you to restore your data should you need to. Try searching  **Play Store**, see *Google™ Play Store*, p.43

Updating your device

When your device is connected to a Wi-Fi network it's directly updated to the latest software by the firmware over-the-air (FOTA) service.

Note! During an update your tablet will be temporarily out of service, even for emergency calls. All contacts, photos, settings, etc. will remain safely stored in the tablet. Do not interrupt the update process.

IMPORTANT!

We recommend that you always update your device to the latest software version to get optimal performance and the latest enhancements. When a new software is available, a notification message is shown in the status bar, or as a notification. Select it to start downloading. The download time may vary depending on Internet connection.

By using the device, you accept to install any OS software updates provided by Doro, at earliest possibility after notification.

By updating your device, you help to maintain your device secure.

Doro will keep updates available for the duration of the guarantee/ statutory warranty period, providing that this is possible from a commercial and technical perspective.

Your device checks for available software updates automatically. Please follow the on-screen instructions when you are notified of an OS software update.

Note!

- In some cases, regular OS upgrades may cause delays to planned security updates.
- Doro will always do our best to deliver the security updates at earliest possible time to applicable models. Delivery time of security patches may vary depending on the regions, S/W variants and models.

**CAUTION**

If you neglect to update your device after being notified, it may void your guarantee of the device. For software update planned schedule, refer to website: doro.com/softwareupdates

Reboot the tablet

The reason to perform a reboot might be a persistent problem that is impossible to solve or if your device becomes frozen and unresponsive. This device has an internal battery and therefore the hardware cannot be rebooted by removal of the battery.

Should you need to reboot the tablet

- Press and hold the **Power button** for more than 8 seconds or until you feel a vibration to reboot it. After the reboot, the tablet will restart automatically.
- Alternatively, gently press with a paper clip or similar into the reset pinhole to reboot the hardware.
Make sure that the pin is perpendicular to the hole to not damage the device or pin.

Reset the tablet

IMPORTANT!

Resetting the tablet means that most information, such as downloaded and installed applications, accounts, system and application data and settings, will be erased. Be sure to backup any data and files you want to keep before you perform the reset. A backup is a safety copy of information. Carefully read all the text below before you start.

The reason to perform a factory reset (**Erase all data (factory reset)**) might be a persistent problem that is impossible to solve or if you want to pass the tablet to someone else.

Note! Everything added to the tablet since you got it will be erased!



Exceptions

- Everything saved on an **SD card** if you have one installed (see *Insert memory card*, p.3 and *External memory*, p.40).
- Applications and data by Google™ — if backup is enabled, see *Backup*, p.36.
- Information you have stored in any cloud storages (or on a computer, see *Connect the tablet to a computer*, p.34).

IMPORTANT!

Remember the Google account your tablet last logged in with, including the screen lock pin/code. During a reset Google's anti-theft mechanism requires you to enter the Google account your tablet last logged in to on the startup navigation screen for identity authentication. Your tablet can properly power on only after the identity authentication passes.

Reset the tablet

1. From the Home screen, tap  **Set** →  **Advanced settings** → **System** → **Reset options**:
2. **Reset Wi-Fi, mobile & Bluetooth** to reset all network settings, including Wi-Fi, Mobile data, Bluetooth.. Carefully read the on-screen information, it is **important!**
3. **Reset app preferences** to reset app preferences for:
 - Disabled apps.
 - Disabled app notifications.
 - Default applications for actions.
 - Background data restrictions for apps.
 - Any permission restrictions.

You will not lose any app data or the app itself, only any changed settings for the app.

4. **Erase all data (factory reset)** to erase all data from your tablet's **internal storage**, including:
 - Your Google account.
 - System and app data and settings.
 - Downloaded apps.
 - Music/videos/photos.
 - Other user data.



CAUTION

This is the last step before ALL data from the device, including Google or other account settings, system and application data and settings will be **permanently** erased.

5. After your tablet resets, it will be set back to factory defaults and will be just like it was when it came out of the box.

Memory and storage

Note! When you update the tablet the available capacity may change.

Your tablet has different types of memory and storage possibilities.

Internal storage

The internal storage is used to store downloaded or transferred content along with your personal settings and data. Examples are alarm, volume

and language settings, emails, bookmarks, contacts, calendar events, photos, videos and music.

Note!

External memory

You can use an external memory card to get more internal storage space or as a portable memory. There are many different media card standards, use only compatible memory cards. Compatible card type for this device: microSD, microSDHC, microSDXC max 128 GB. SD stands for Secure Digital. Lower-capacity cards store less information. The tablet works with or without an SD card installed. We suggest you to use a high speed memory card, especially if used as extended internal memory. Most applications can read data from a memory card but only certain apps can save files to this type of memory. You can, for example, set the camera application to save photos directly to the memory card.

Note! If you insert an external memory, it is recommended you change the default storage location. This allows you to save more files on your tablet, like pictures and videos. We recommend that you regularly copy your photos from the tablet's internal storage to your computer as a form of backup, see *Connect the tablet to a computer*, p.34. These files are found in the DCIM folder on your tablet. DCIM stands for Digital Camera Images and it is the default directory structure for digital cameras and for tablet cameras.

Using your external memory as extended internal storage

If you run out of internal memory you can install a external memory card and format it as extended internal storage.



CAUTION

When you format a memory card, all existing data will be deleted and cannot be recovered.




When you format a memory SD card as internal storage:

- You can load files, like photos and videos, on the SD card.
- You can install apps on the SD card, but some apps are restricted for SD card storage.
- You cannot move the SD card between devices.

- The SD card can be used in addition to your device's storage.



Format your SD card as an internal storage

When you install a new SD card you will get a notification for the new card with **SD card/Tap to set up**

1. Tap to open and then tap **Tablet storage**
2. If you don't get that notification, from the Home screen, tap  **Set** →  **Advanced settings** → **Storage** → select **SD card**:
3. Tap  → **Format as internal** to format your SD card as an internal storage.
4. Confirm with **Format** and await completion. It can take some time depending on storage capacity.

Move installed apps

If your SD card is formatted as an internal storage, you can move installed apps to the SD card, but some apps are restricted for SD card storage.

1. Tap  **Set** →  **Advanced settings** → **Apps** → **See all apps** → and select the app you want to move.
2. Tap **Storage and cache** → **Change** → and select the location for the app **Internal shared storage** or **SD card**.

Get more help at support.google.com/android/answer/12153449

Using your external memory as portable memory

If you run out of general memory you can install a external memory card as portable storage.




When you format a SD card as portable storage:

- You can save files, like photos and videos, on the SD card.
- You cannot install apps on the SD card.
- You can transfer the SD card between devices.

Format your SD card as portable storage

When you install a new SD card you will get a notification for the new card with **SD card/Tap to set up**

1. Tap to open and then tap **Tablet storage**



2. If you don't get that notification, from the Home screen, tap  **Set** →  **Advanced settings** → **Storage** → select **SD card**:
3. Tap  → **Format** to format your SD card as a portable storage.
4. Confirm with **Format** and await completion. It can take some time depending on storage capacity.

Get more help at support.google.com/android/answer/12153449

Free up memory space

The memory in your device tends to fill up as a result of normal usage. If your tablet starts to slow down, or applications suddenly shut down, consider the following:

When you are surfing the web or using apps on your tablet, that will create temporary files stored on your tablet in an area of memory called cache. The reason is that the next time you visit the same website or app the tablet will load it from cache memory instead of downloading everything again from the server which, take up time and bandwidth. These files will over-time become obsolete and will then be called **Junk files**. Follow below to delete **Junk files** and other files.

1. From the Home screen, tap  **View** →  **My tablet information** → **Storage**.
2. You are presented with some suggestions of memory cleaning. Select the cleaning method that would suit you best. It's always a good start to clean out the **Junk files**
3. Tap **Internal shared storage** or **SD card** (if installed) to see the different types of data on your memory.



Tip: The **Junk files** will increase again over time, and you should perform this clean regularly

Delete pictures

- If you use your tablet to take a lot of pictures, remember to back them up on your computer every now and again. Not only will this prevent you from losing any photos if anything were to happen to your tablet, but it also gives you the opportunity to delete them from your tablet and free up space. You can access your pictures by simply plugging your tablet into your computer via a USB cable, see *Connect the tablet to a computer*, p.34.

- There are also several services to use if you want to back up your photos – in many cases, automatically. Preloaded to this tablet is the Google application, **Photos**, that supports unlimited storage, photo and video back up, and even create mini-albums for you.

Uninstall applications that you don't use

1. From the Home screen, tap  **View** →  **My applications**.
2. Find the application you don't use anymore and press and hold the icon.
3. Tap **Uninstall**.
4. Tap **OK** to confirm.

Note! Some applications are pre-installed and cannot be uninstalled.

All purchases are managed by your Google account. If you want to install a particular app again later on, as long as you are signed in with your original Google account you won't be charged again for the same app.

Google™ Play Store

IMPORTANT!


You need an Internet connection to use this service. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs.



Note! You need to have a Google™ account to use **Play Store**. Your Gmail account is also your Google Account, so you can use the same Gmail username and password to use other Google products like YouTube, Google Play, and Google Drive.

Browse the available applications and games through different categories or through the lists like Top paid and Top Free. You can also search for a specific application or game.



Some applications need to be purchased. The cost is shown in the application description, the same goes if the application is free. You pay using Google™ Pay, which can be registered when setting up a Google™ account or the first time for a purchase.

Install applications



1. From the Home screen, tap  **Play Store**.
2. Find an item you wish to download by browsing categories or by using the search function.
3. Tap the item to view its details, and follow the instructions to complete the installation/purchase.

Tip: All downloaded applications can be found in  **Play Store**. Tap the account icon  with first letter of your account in the top right of the display, and tap to select **Manage apps and devices**.

Open an installed application




1. In  **Play Store**, tap the account icon  with first letter of your account in the top right of the display, and tap to select **Manage apps and devices** → **Manage**.
2. Select the downloaded application. If needed tap **Open**.

Update an installed application

1. In  **Play Store**, tap the account icon  and tap to select **Manage apps and devices** → **Overview**.
2. You can select to update all applications that needs to be updated, tap **Update all**, or tap **See details** and select a specific application and tap **Update** and confirm.

Note! You will get a notification whenever there's an update for any of your installed apps. Please always update to the latest version for best performance and security of the app.

Uninstall applications

1. In  **Play Store**, tap the account icon  and tap to select **Manage apps and devices** → **Manage**.
2. Tap to select an application, tap → **Uninstall** and confirm.
Alternatively, select one or more apps and tap  → **Uninstall** to uninstall the selected apps.

Tip: You can also press and hold an app icon on the home screen or applications screen and then tap **Uninstall**.

Headset

Headset/earphones (USB Type-C) can be used with this tablet.

If you have a favourite headset/earphone with a 3.5 mm stereo plug that you want to use, you may use a USB-C to 3.5 mm headset jack adapter (both digital-to-analog converter (DAC) or analog are supported).

Note! A digital headset will not work simultaneously with a keyboard accessory.

- Connect a headset to the USB-C connector. The internal microphone in the tablet is automatically disconnected when the headset is connected.





CAUTION


Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

Contacts




Add new contact


Your contacts are automatically synced with your Google account (provided that you are logged onto your Google account). To manage synchronisation for your Google account, see *Backup*, p.36.

1. From the Home screen, tap  **Add** →  **A contact**. You may have to select the account where to save contacts to.
2. Enter contact information and continue to fill in the information you know. Tap **More fields** to add additional information for the contact.
3. Your new contact is created when you tap **Save**.

Tip: To hide the keyboard tap  and to activate the keyboard simply tap a text field once again.

Manage your contacts



1. From the Home screen, tap  **View** →  **My contacts**.
2. Find and tap the wanted contact to open it.
3. Tap  to add as favourite contact.
4. Tap **Edit contact** if you want to change any details.

5. Tap  to add image.
6. Follow the on-screen instructions to complete contact information.
7. Tap **Save**, when you are done. Your contacts are automatically synced with your Google account (provided that you are logged onto and that you saved the contact to your Google account). To manage synchronisation for your Google account, see *Backup*, p.36.

Tip: The favourite-contacts are easily found on the top of the contact list.

Add a contact shortcut to the home screen

You can easily add a shortcut widget for a contact to your home screen.

1. From the Home screen, tap  **Set** →  **My homepage** → **My widgets**.
2. Find **Contacts** and select the type of shortcut you want. Touch & hold to place the shortcut where you want it.
3. Find and tap the wanted contact.

Import and export contacts

For more help about importing and exporting contacts, see support.google.com/contacts/.

Note! For best performance, import your SIM contacts and save them to your Google account. By storing your contacts on your Google account, you minimise the risk of losing them in case of a SIM card failure or a lost tablet.




Assistance options

The remote help

Let somebody you trust manage your tablet remotely, for example, this can be requested when you contact Doro support. Allow access so they can remotely administrate and transfer files, help you to perform maintenance tasks and help with problems should they occur.

The person performing the remote help must have Teamviewer installed. Teamviewer can be downloaded and installed for many different operating systems at <http://www.teamviewer.com/download/>.

To connect a remote support session

1. From the Home screen, tap  **Set** →  **An assistance option** →  **The remote help**.
2. To use the remote help app you have to agree to Teamviewer's terms and conditions. Browse through a short introduction.
3. Share **Your ID** with your personal tech support to allow remote control. Tap **Send my ID...** to select how to share your ID.
4. Follow the on-screen instructions to allow the remote help session.
5. To quit TeamViewer, open the Notification panel, swipe the status bar down. Click QuickSupport and tap **X** in the upper right corner.
6. Confirm with **Close** to close the remote help session.

Note! All TeamViewer connections are highly encrypted and are thus protected from being accessed by third parties. For detailed technical information regarding connections, security and data privacy in TeamViewer, see the security statement at <http://www.teamviewer.com/en/products/security>.



Google search

IMPORTANT!

You need an Internet connection to use this service. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs before activating.


Note! The available options may vary depending on your device settings.

To use the web browser

1. From the Home screen, tap the Google™ search field .
- Note!** The first time you are asked if you want to Sign in with your Google account.
2. Tap next to  to search the Internet, to search you type words, or you can paste text, copied by you.
 3. When you start a search on Google, you can find information faster by looking at search predictions. Search predictions are possible search

terms you can use that are related to the terms you're typing and what other people are searching for.

4. Tap to select the best matching search results.

To go back, tap .

Applications

Applications can be a program or game that you can use on your Doro Tablet. Depending on market and service provider, the pre-installed applications can vary. Some applications need Internet access. Contact your service provider for detailed subscription costs before activating. Some applications need to be purchased. The cost is shown in the application description as well as if it is free. Using downloaded and installed applications does not cost anything, except if an Internet connection is needed.

Use *Google™ Play Store* to download and install all the applications you need.

Email

IMPORTANT!

You need an Internet connection to use this service. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs before activating.




Note! Pay attention to what account is selected if you have more than one account on your device.

Tip: **Gmail** is pre-installed and available under **Google** that you reach from the Home screen. For more help see support.google.com/mail/.




You can of course install other email client apps if you wish.

Write emails




Here we will explain how to send an email to a contact that is available in your contact book.


1. From the Home screen, tap  **Send** →  **An email.**
2. Tap  **To contact.**

Alternatively tap  **To email address.**





3. Tap to select one or several contacts.
4. Compose your text.
5. Enter a subject.
6. Tap  to attach files to the email.
7. Tap  for more options.
8. When done, tap  to send.

Read emails

1. From the Home screen, tap  **View** →  **My emails.**
2. Tap to read an mail.
3. Tap  for more options.

Note! Please note that there are two icons  for more option.

Email settings



1. From the Home screen, tap  **View** →  **My emails.**
2. Tap  →  **Settings.**

Camera

Tip: To get sharp photos, wipe the lens clean with a dry cloth.



Note! Do not take photos or record videos of other people without their permission. Do not take a photo or record a video where prohibited or where you may be violating others' integrity.

How to open the Camera

1. From the Home screen, tap  **Camera.**
2. Use two fingers and spread them apart on the screen to zoom in, and pinch to zoom out.
3. Tap camera button  in the app to take a picture.





How to take a selfie

Selfie means to take a picture of yourself. You can use the front camera to take self-portraits.

1. Tap **⋮** for camera options.
2. Tap  to switch to the front camera for self-portraits.
3. Face the front camera. Move the camera around until you find a pleasing pose.
4. When you see your face in the display, tap  to take a picture of yourself.

Note! To toggle between back and front camera, tap **⋮** and then tap /.

How to record a video

1. On the preview screen, swipe left to right and tap  **Video**.
2. Tap  to record a video. Tap  to stop recording.
3. On the preview screen, swipe left to right and tap  **Camera** to return to camera mode.

Camera options

Focus



- On the preview screen, tap the image on the preview screen where you want the camera to focus.

Zoom

- On the preview screen, place two fingers together on the screen and spread them apart to zoom in and pinch them together to zoom out.
- You can also use the volume keys to zoom, Volume up to zoom in and Volume down to zoom out.


Timer



Timer allows you to use a countdown timer to take a delayed photo shot.

- Tap **⋮** and then the timer icon  to select the photo shot delay timer.
- Tap camera button  in the app to start the countdown for the picture to be taken.

Grid




Grid is a setting on your camera that shows lines/grids, so you will be able to assess the proportions of your object.

Tap **⋮** and then the grid icon  to select grid settings:

-  is displayed when the grid is off.
-  is displayed when the grid is on.


Flash/lamp for video recording

Tap **⋮** and then the flash icon  to select flash settings:

-  to let the camera app automatically choose whether to use the flash or not.
-  to force the camera app to use the flash.
-  to force the camera app to not use the flash.

Camera settings

Settings depending on shooting mode





1. On the preview screen, swipe left to right and tap  to access camera/video settings. Different options may be visible depending on shooting mode.
2. Tap to select and adjust the different settings.

Handle pictures in the Gallery

Tip: You can also access your gallery from camera mode, on the camera preview screen, select the thumbnail in the lower right corner.

View/handle pictures or videos

You can select to use Google Photos or Google Gallery for your picture and video handling, but you can also install some other picture and video handling app of your choosing.

1. From the Home screen, tap  **View** →  **My pictures and videos**.
2. Tap  for more options.
3. Select the photo/video to view/play.
4. Swipe to the left or right for the next or previous image/video. Tap  for more options.




Tip: For more help see support.google.com/photos/

Internet (Web browser)

IMPORTANT!

You need an Internet connection to use this service. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs.

To use the web browser

1. From the Home screen, tap  **Search** →
 **Something on the Internet**.
2. Enter the word or phrase that you would search and tap .

Note! The first time you are asked if you want to Sign in with your Google account.

You can also enter the search word or phrase directly in the Google bar on the homepage.

Tip: For more help see support.google.com/websearch/

Music

You can listen to music and audio files stored on your tablet as well as music from internet.

Play music

1. From the Home screen tap **Google** folder and tap **YT Music**. The first time you start this app you will be asked if you want to subscribe to Google's music.
2. Tap **Library** to search and see your available music.
3. Select from different categories like playlists, artists, albums.



Tip: While you're listening to music you can start and pause the music from the quick settings in the Notification panel. To open the Notification panel, swipe the status bar down. You can also use other features and apps while listening to music.

For more help see support.google.com/googleplaymusic/.






Calendar

Note! Pay attention to what account is selected if you have more than one account on your device.

Add an event

1. Tap  **Add** →  **An event**.
2. Follow the on-screen instructions to complete the event.
3. Tap **Save** to confirm.

To edit or delete events

1. Tap  **View** →  **My calendar**.
2. Browse the calendar to select an entry or tap  to search for the wanted entry.
 - Tap  to edit.
 - Tap  → **Delete** to delete the event.

For more help see support.google.com/calendar/.

Alarm

Set alarms




The tablet must be powered on in order for the alarm to function properly.

Tip: Alarms will sound even in silent mode.

1. From the Home screen, tap  **Add** →  **An alarm** and follow the on-screen instructions.



Tip: To save battery and prevent incoming calls or messages, you can turn on **Aeroplane mode** but still keep the alarm function, see *Aeroplane mode*, p.34.

To edit or delete alarms

1. From the Home screen, tap  **Set** →  **My alarms**.
2. To turn on and off switch .
3. Tap an alarm to edit it.

Stop or snooze an alarm

Slide  to:






-  **Snooze**, to snooze the alarm for 10 minutes.
-  **Stop**, to stop the alarm.

Timer

Use the timer to count down from a specified time interval.

Tip: The timer will sound even in silent mode.




Add a timer

1. From the Home screen, tap  **Add** →  **A timer.**
2. Set the duration of the timer and tap  to start the countdown.
3. Tap  to pause and  to stop.




My notes

This feature uses Google Keep™.

Add a note


1. Tap  **Add** →  **A note.**
2. Enter required information.
3. For more options, tap .

View/edit/delete a note

1. Tap  **View** →  **My notes.**
2. Tap the wanted note and edit if needed.
3. For more options, tap .

For more help see support.google.com/keep/.


Torch


Swipe down the notification panel and tap  **Torch** to turn on the light. Tap again to turn off.

Note! The battery will drain very quickly. Remember to switch off after use.

Calculator

Perform simple calculations.

1. From the Home screen swipe up or tap the arrow  at the bottom of the Home screen and tap the app **Calculator** to open it.
2. Enter the first number, select an operation (+, -, x, ÷) and enter next number. Repeat if needed.
3. Select = to calculate the result.

Tap  to delete the latest entry.

Tap **AC** to clear the result.

Google apps

IMPORTANT!

You need an Internet connection to use this service. It is recommended to use Wi-Fi connections when available to reduce costs for data traffic. Contact your service provider for detailed subscription costs before activating.

All pre-installed Google™ applications can be found in the **Google** folder. Depending on the market, the pre-installed applications can vary. To view more app information, access each app's help menu.

Note! Some apps may not be available or may be labelled differently depending on the region or service provider.

- From the Home screen select **Google** to open the Google™ applications.
 - **Google** quickly search for items on the Internet or on your tablet.
 - **Chrome** search for information and browse webpages.
 - **Gmail** send or receive emails via the Google Mail service.
 - **Maps** find your location on the map, search for locations, and view location information for various places.
 - **YouTube** watch or create videos and share them with others
 - **Drive** store your content on the cloud, access it from anywhere, and share it with others.
 - **YouTube Music** discover, listen to, and share music on your tablet. You can upload music collections stored on your device to the cloud and access them later.
 - **Google TV** download videos to watch from Play Store, see *Google™ Play Store*, p.43.
 - **Duo** chat individually or in groups with your friends.
 - **Gallery** search for, manage, and edit all your photos and videos from various sources in one place.


The cloud

The cloud is not a physical thing. The cloud is a network of servers, and each server has a different function. Some servers use computing power to run applications or "deliver a service." For example, when you take a picture on your tablet, it is stored on your tablet's internal memory drive. However, when you upload the photos to Instagram, you are uploading it to the cloud.

So remember: The Cloud is a network of servers. Some servers provide an online service, and others allow you to store and access data, like Instagram or Dropbox. Chances are, you encounter the cloud daily. From Google Drive to Evernote, any time you store information without using up your tablet's internal data, you're storing information in the cloud.





Location based services

LBS stands for Location-Based Service and is a software application for mobile devices that requires knowledge about where the device is located. The service can be query-based and it can provide you with useful information such as "Where is the nearest restaurant?". The service can also be push-based and send you coupons or let you view commute traffic. By law, location-based services must be permission-based. That means that you must opt in (actively say yes) to the service in order to use it.

Tip:  is shown in the status bar when your tablets location is being used by any app.

Note! Turning off location for your device also turns it off for Google apps and other non-Google apps. This means that apps can't use your tablet's location, and many useful features will be turned off.

How to turn off GPS location services














1. From the Home screen, open the notification panel, tap  **Set** →  **My other connections** →  **The geolocation options.**
2. Switch  to disable location services.



CAUTION

If you turn off location-based services apps such as map, navigation, and weather applications cannot access your location information.

Status icons

	Flight mode		Wi-Fi network
	Google Play Store software updates available		Bluetooth on
	Unread email (in the gmail app)		Data transmission: data in ▼, data out ▲.
	GPS activated		Error occurred or caution required
	Headset connected (without microphone)		Alarm active
	Headset connected (with microphone)		System update available
	Battery level		

Safety instructions



CAUTION

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the WLAN IEEE 802.11 a/b/g/n/ac (2412 - 2472, 5150 - 5250, 5725 - 5850 MHz) networks.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities

instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15 cm between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15 cm from the medical device.
- Should not carry the device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.

If you have any reason to suspect that interference is taking place, turn the device off immediately. If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Li-Polymer battery

This product contains a Li-Polymer battery. There is a risk of fire and burns if the battery pack is handled improperly.



WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Removing/replacing the battery

- To remove/replace the battery, contact an authorised service centre. Please find latest information at www.doro.com.

- For your safety, you must not attempt to remove the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.
- Doro does not accept liability for any damage or loss if these warnings and instructions are not followed.

Protect your hearing

This device has been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.



WARNING

Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided “As is”. No representation or warranty are made as to the accuracy of such location information. Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.



CAUTION

Do not use GPS functionality in a manner which causes distraction from driving.

Protect your personal data

Protect your personal data and prevent leakage or misuse of sensitive information

- While using your device, be sure to back up important data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.
- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.
- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

Malware and viruses

To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service.

- Do not download unknown applications.
- Do not visit untrusted websites.
- Delete suspicious messages or email from unknown senders.
- Set a password and change it regularly.
- Deactivate wireless features, such as Bluetooth, when not in use.
- If the device behaves abnormally, run an antivirus program to check for infection.
- Run an antivirus program on your device before you launch newly-downloaded applications and files.
- Do not edit registry settings or modify the device's operating system.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain, snow, humidity, and all types of liquids can contain substances that corrode the electronic circuits. If the unit gets wet, you should immediately power off the device, remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside and can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop or shake the unit. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- Do not disassemble, open, crush, bend, deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.

- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Never use a damaged or swollen battery. Take it to a service point or to your device retailer for inspection before continuing to use it. A damaged or swollen battery may present a risk of fire, explosion or leakage or other risk.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Improper battery use may result in a fire, explosion or other hazard.

For devices that utilize a USB port as a charging source, the device's user manual shall include a statement that the device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

The advice applies to the unit, battery, power adapter and other accessories. If the device is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 24 months and for original accessories for a period of 12 months (such as the battery, charger, charging cradle or handsfree kit) which may be delivered with your device, from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Please note that this is a voluntary manufacturer's warranty and provides rights in addition to, and does not affect statutory rights of end-users.

This guarantee does not apply if batteries other than DORO original batteries are used.

Device OS software warranty

By using the device, you accept to install any OS software updates provided by Doro, at earliest possibility after notification.

By updating your device, you help to maintain your device secure.

Doro will keep updates available for the duration of the guarantee/ statutory warranty period, providing that this is possible from a commercial and technical perspective.

Your device checks for available software updates automatically. Please follow the on-screen instructions when you are notified of an OS software update.

Please note:

- In some cases, regular OS upgrades may cause delays to planned security updates.
- Doro will always do our best to deliver the security updates at earliest possible time to applicable models. Delivery time of security patches may vary depending on the regions, S/W variants and models.

**CAUTION**

If you neglect to update your device after being notified, it may void your guarantee of the device. For software information and planned update schedule, refer to website: doro.com/softwareupdates

Specifications

Wi-Fi (MHz):	WLAN IEEE 802.11 a/b/g/n/ac, (2412 - 2472, 5150-5250, 5725-5850)
Bluetooth (MHz):	5.0, (2402 - 2480)
GPS receiver:	A-GPS/GPS/BeiDou/Galileo/GLONASS
Operating system:	Android™ 12
Dimensions:	156 x 247 x 8 mm
Weight:	482 g (including battery)
Battery:	3.85 V / 6000 mAh Li-Polymer battery
Image format:	JPG, JPEG, GIF, BMP, PNG
Video format:	H.264 H.265 720p@120fps, 1080p@60fps, MPEG4 1080p 60 fps, H.263 16CIF@30fps, YUV420 1080p 60fps, VP8 VP9 1080p 60fps
Audio format:	MP3, AAC, AAC+, AMR-NB, PCM, A2DP, USB AUDIO
Audio recording format:	AAC, AAC+, AMR-NB, PCM
Rear camera resolution	8 MP
Front camera resolution:	5 MP
Camera digital zoom:	4x
Display Size:	10.4"
Display resolution:	2000 x 1200
RAM:	4 GB

Internal memory:	32 GB
External memory:	microSD, microSDHC, microSDXC max 128 GB
Sensors:	Accelerometer (G-sensor), Light sensor, Proximity sensor, Hall sensor
USB Interface:	USB-C
Headset connector:	USB Typ-C analog/digital
Operating ambient temperature:	Min: 0° C (32° F) Max: 40° C (104° F)
Charging ambient temperature:	Min: 0° C (32° F) Max: 40° C (104° F)
Storage temperature:	Min: -20° C (-4° F) Max: 60° C (140° F)

Copyright and other notices

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

vCard is a trademark of the Internet Mail Consortium.

eZiType™ is a trademark of Zi Corporation.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

microSD is a trademark of SD Card Association.

Java, J2ME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Doro reserves the right to revise this document or withdraw it at any time without prior notice.

Google, Google Maps™, Gmail, Google Calendar, Google Checkout, Hangouts, YouTube, the YouTube logo, Picasa and Android are trademarks or registered trademarks of Google LLC.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and noncommercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See

www.mpegla.com. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

To the maximum extent permitted by applicable law, under no circumstances shall Doro or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Doro does not provide a warranty for or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Doro does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the Copyright Laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright, or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open source licenses

You are entitled to receive a copy of the source code of software licensed under an open source license that gives you the right to receive the source code for that software (for example GPL or LGPL) to you on an appropriate media, against an administrative fee covering Doro AB's cost for handling the distribution and costs for media. Please direct such request to Doro AB, Open Source Software Operations, Jorgen Kocksgatan 1B, SE 211 20 Malmö, Sweden. To be valid, such a request must be made within three (3) years from the date of the distribution of this product by Doro AB, or in the case of code licensed under the GPL v3 for as long as Doro AB offers spare parts or customer support for this product model.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines from the independent scientific organization ICNIRP (International Commission of Non-Ionizing Radiation Protection).

The World Health Organization (WHO) has stated that current scientific information does not indicate the need for any special precautions when using mobile devices. If you are interested in reducing your exposure, they recommend you reduce your usage or use a hands-free accessory to keep the device away from your head and body.

For information about SAR (Specific Absorption Rate) values for your device, please read the documentation provided together with your device.

Correct disposal of this product



(Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or manual indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This product is RoHS compliant.

Correct disposal of batteries in this product



(Applicable in countries with separate collection systems)

The marking on the battery, manual or packaging indicates that the battery in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

EU Declaration of Conformity

Hereby, Doro declares that the radio equipment type DTO-0410 (Doro Tablet) is in compliance with Directives: 2014/53/EU and 2011/65/EU including delegated Directive (EU) 2015/863 amending Annex II. The full text of the EU declaration of conformity is available at the following internet address: www.doro.com/dofc.

UK Declaration of Conformity

Hereby, Doro declares that the radio equipment type DTO-0410 (Doro Tablet) is in compliance with the relevant UK legislation.

The full text of the UK declaration of conformity is available at the following internet address: www.doro.com/dofc

Ecodesign declaration, energy efficiency for external power supply

Hereby, Doro declares the external power supply for this device is in compliance with Commission Regulation (EU) 2019/1782 regarding ecodesign requirements for external power supplies pursuant to Directive 2009/125/EC.

The full information regarding the ecodesign requirements is available at the following internet address: www.doro.com/ecodesign

DTO-0410 (Doro Tablet) (1011)

English

Version 1.0

©2022 Doro AB. All rights reserved.

www.doro.com



REV 20337 – STR 20211102