

AMPLIDECT™ COMBI 595

50dB

Quick User Guide

En

Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !

Congratulations!

Congratulations on purchasing your **Geemarc AMPLIDECT COMBI 595** telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications- DECT standard) together with an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible. It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.

Package contents

1 Telephone base, 1 Corded handset, 1 cordless Handset, 2 power adapters, 1 Charger, 1 Telephone line cord, 3 Ni-Mh batteries, 1 Quick user guide.

Installation

Connecting the telephone

Connect the telephone cable to the telephone line socket **(A)** and to the telephone wall socket **(B)**.
Connect the handset curly cord to the base**(E)**.
Connect the power adapter jack to base and charger **(C)** then connect the power adapter plug in mains power **(D)**.

NOTE: Use only the power adapters supplied with the phone.

Connecting the battery

Slide the battery cover downwards Install the 3 batteries into the socket as indicated, matching correct polarity (+, -).
Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time.

Overview

Base overview

1	LCD DISPLAY
2	IN USE : ON during a call.
3	RING light - Flashes when there is an incoming call. - Steadily on when the answering machine is turned on. Flashes when there are new memos or messages in the answering machine.
4	MENU / OK - In idle mode: Press to access the main menu. - In sub-menu mode: Press to confirm the selection. - In Redial list/Call list: Press to store the number into Phonebook.
5	PHONEBOOK: In idle: Press to access the phonebook.
6	CALLS (CALL LIST) In idle mode: Press to access the call list.
7	Int/ /C INT / MUTE / CLEAR - In main menu mode: Press to go back to idle screen. - In sub-menu mode: Press to go back to previous level. - In sub-menu mode: Press and hold to go back to idle screen. - In editing / predialing mode: Press to clear a character/digit. - In editing / predialing mode: Press and hold to delete all the character / digits. - During a call: Press to mute / unmute the microphone. - In ringing: Press to silence the base ringer. - In idle mode: Press to intercom another system handset.
8	MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 TONE KEY - M4) - In idle mode: Press to dial out to the number stored in the memory key. - During a call: press M4 to increase the high frequency or the low frequencies.
9	SOS/AMPLIFY VOLUME BOOST / SOS - During a call: Press to activate/deactivate the VOLUME BOOST function. - In idle mode: Press and hold for 2 seconds to launch the emergency calling sequence set in your phone. - In SOS mode: press and hold for 2 seconds to stop the emergency call.
10	SPEAKER In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.
11	ALPHANUMERIC KEYPAD, STAR (*), HASH/RECALL (#/R) - In predial or editing mode: Press to insert a digit. 0 key in predial or editing mode: Press and hold to insert a pause. - On line: Press the key R/# to make a recall.

12 NAVIGATION KEYS

UP

- In menu mode: Press to scroll up the menu items.
- In Phonebook list / Redial list / Call list: Press to scroll up the list.
- In editing mode: Press to move the cursor one character to the right.
- During a call or TAM message playback: Press to increase the volume.

REPEAT / OGM

- In Idle mode: Press and hold 2 sec until beep to record OGM.
- Press ►/■ to stop the recording.
- In TAM message playback mode: Press to go back to previous message.

MEMO / SKIP FORWARD

- In Idle mode: Press and hold 2 sec until beep to record a memo and press ►/■ to stop the recording.
- In TAM message playback mode: Press to skip to next message.

DOWN / REDIAL LIST

- In Idle mode: Press to access the redial list.
- In menu mode: Press to scroll down the menu items.
- In Phonebook list / Redial list / Call list view mode: Press to scroll down the list.
- In editing mode: Press to move the cursor one character to the left.
- During a call or TAM message playback: Press to decrease the volume.

13 PLAY / STOP

- In Idle mode: Press to playback messages.
- During TAM message playback: Press to stop playing messages.

14 SLOW

- During TAM MSG playback: Press to playback messages in slow speed.

15 DELETE

- In TAM message playback mode: Press to delete the current TAM message playback.
- In idle mode: Press and hold to delete all old messages.

16 ANS ON / OFF

- In Idle: Press to switch the answering machine **ON** or **OFF**.
- The cassette tape icon is displayed on the screen if activate.

Handset overview

17	EARPIECE
18	LCD DISPLAY
19	CHARGE LIGHT Steadily on when the handset is charging in the charger.
20	MENU / OK - In idle mode: Press to access the main menu. - In sub-menu mode: Press to confirm the selection. - During a call: Press to access Intercom/ Phonebook / Redial list /Call log/Record call.

21 UP / CALL LIST

- In idle mode: Press to access the redial list.
- In menu mode: Press to scroll up the menu items.
- In phonebook list / redial list / call list: Press to scroll up the list.
- In editing mode: Press to move the cursor one character to the right.
- During a call: Press to increase the listening volume.
- During ringing: Press to increase the ringer volume.

22 TALK ON / SPEAKERPHONE

- In idle/pre-dial mode: Press to make a call in earpiece mode.
- In phonebook/redial list /call list: Press to make a call to the selected entry in the list in earpiece mode.
- During ringing: Press to answer a call in earpiece mode.
- On line: Press again to pass in speakerphone mode. Press again to switch to earpiece mode.

23 DOWN / PHONEBOOK

- In idle mode: Press to access the phonebook.
- In menu mode: Press to scroll down the menu items.
- In phonebook list / redial list / call list: Press to scroll down the list.
- In editing mode: Press to move the cursor one character to the left.
- During a call: Press to decrease the listening volume.
- During ringing: Press to decrease the ringer volume.

24 MICROPHONE

25 VOLUME BOOST / SOS

- During a call: Press to activate/deactivate the **VOLUME BOOST** function.
- In idle mode: Press and hold for 3 seconds to enter the emergency calling sequence set in your handset.
- In SOS mode: press and hold for 2 seconds to stop the emergency call.

26 TONE

- During a call: Press this key to increase the high frequency or the low frequencies.

27 CANCEL / MUTE

- In main menu mode: Press to go back to idle screen.
- In sub-menu mode: Press to go back to previous menu.
- In editing/pre-dial mode: Press to delete a character / digit.
- In editing/pre-dial mode: Press and hold to delete all the characters / digits.
- During a call: Press to mute/resume the microphone.
- In idle mode: Press to intercom another handset.

28 TALK OFF

- During a call: Press to end a call and go back to idle screen.
- In menu / editing mode: Press to go back to idle screen.
- During ringing: Press to silence the handset ringer.

29 ALPHANUMERIC KEYPAD, STAR (*), 0, and HASH/RECALL (#/R)

- In predial or editing mode: Press to insert a digit / character * and #.
- During a call: Press and hold #_R to make a Flash (Recall).
- 0 key in idle / pre-dial mode / number editing mode: Press and hold to insert a pause.

First use of your telephone

First use of your handset

After you have inserted the batteries, the display asks you to select your text language with the keys ▼/▲, press to valid.

Then enter the date with the keypad and validate by pressing . Then enter the correct hour with the keypad and validate by pressing .

Then select your talking language with the keys ▼/▲, press to valid.

General menu setting

The phone settings are always set in the same manner:

Press button to open the main menu.

Then use ▼/▲ buttons to select an entry and confirm it by pressing the button.

The factory preset PIN code is **0000**. Example:

Set the display language on the base

Press , then select ▼/▲ language, press .

then select ▼/▲ desired language and then press MENU/OK to confirm.

Set the language on the handset

Press MENU/OK , then select ▼/▲ HS settings, press , then select ▼/▲ language, press , than select ▼/▲ desired language and then press to confirm.

Menu setting

Base menu

CALL LOG: ► Incoming call list

PHOTO MEM: ► M1 ► M2 ► M3 ► M4

PHONEBOOK: ► ALL ► SPEED DIAL ► VIP

CALL BLOCK: ► BLACK LIST ► SETTINGS (BLOCK MODE-W/O NUM)

INTERCOM: HANDSET 1-2-3 or ALL

DATE & TIME: ► DATE FORM ► TIME FORM ► SET DATE

TEXT LANG: ► ENGLISH ► FRANÇAIS ► DEUTCH ► ITALIANO ► NEDERLANDS ► ESPANOL ► PORTUGUES...

BS SETTING: ► RING SETUP ► KEY TONE ► FLASH TIME ► FIRST RING ► DEFAULT

PAGE ALL HS REGISTER

SET SOS: ► SOS NUMBER ► SOS MSG ► SOS LANG

REMINDER: ► ALARM 1 ► ALARM 2 ► ALARM 3 ► ALARM 4 ► ALARM 5 ► ALARM 6 ► ALARM 7 ► ALARM 8 ► ALARM 9 ► ALARM 10

TLK DIGITS: ► OFF ► ON

ANS. SYS: ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF ► SET TAM (TAM LANG, CALL SCREEN, TAM MSG, ANS. DELAY, REC. TIME, REMOTE ACC, CHANGE PIN, MSG ALERT)

Handset menu

CALL LOG: ► RECEIVED

PHOTO MEM: ► M1 ► M2 ► M3 ► M4

PHONEBOOK: ► ALL (ADD-VIEW-EDIT-DELETE-DELETE ALL-ADD VIP-ADD TO PM-ADD TO SD-STATUS) ► SPEED DIAL ► VIP

CALL BLOCK: ► BLACK LIST ► SETTINGS (BLOCK MODE-W/O NUM)

INTERCOM: ► BASE or HANDSET X

BS SETTING: ► BS RINGER ► RING VOL ► FLASH TIME ► FIRST RING

HS SETTING: ► RING SETUP ► TONE SETUP ► AUTO BOOST ► TEXT LANG ► DATE & TIME ► REGISTER ► DEFAULT

SET SOS: ► SOS NUMBER ► SOS MSG ► SOS LANG

REMINDER: ► ALARM 1 ► ALARM 2 ► ALARM 3 ► ALARM 4 ► ALARM 5 ► ALARM 6 ► ALARM 7 ► ALARM 8 ► ALARM 9 ► ALARM 10

TLK DIGITS: ► ON ► OFF

ANS. SYS: ► PLAYBACK ► DEL OLD ► MEMO ► TAM ON/OFF ► SET TAM (TAM LANG, CALL SCREEN, TAM MSG, ANS. DELAY, REC. TIME, REMOTE ACC, CHANGE PIN, MSG ALERT)

Registration

NOTE: Handset and base station are pre-registered. Up to four handsets can be registered to a single base station.

Registration a handset

On Base: Press MENU/OK , select ▼/▲ REGISTER.

Press MENU/OK to see **REGISTERING...** (If the registration is successful, there will be a confirmation beep).

On Handset: Press . Use ▼/▲ to select **HS SETTING**.

Press . Use ▼/▲ to select **REGISTER**.

Press and **REGISTERING** is display.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

Intercom

Internal Call

On Base: Press **Int/ /C**, and ▼/▲ to select **HS 1 - 4**.
Press MENU/OK to call the handset.

On Handset: Press CANCEL MUTE, and ▼/▲ to select the desired handset number, **Base** or **ALL** and press MENU/OK.

Call All Handsets

Base: Press **Int/ /C**, and ▼/▲ to select **ALL**, press MENU/OK to connect.

On Handset: Make point 1 in chapter internal call and choose **ALL**.

Transfer an External Call

On Base: Press MENU/OK twice, and ▼/▲ to select handset number, press on handset. After connection quit the call on base.

On Handset:

- Press  MENU/OK, and ▼/▲ to select **INTERCOM**. Press  MENU/OK.
- Choose the desired handset number, **Base** or **ALL** and press  MENU/OK.

After connection quit the call on handset by pressing .

Conference Call

On Handset or Base: Make procedure in chapter external call and choose the desired handset number with the key ▼/▲.
After connection press and hold  until **CONFERENCE** is shown.

 **NOTE:** Any party that hangs up during a conference call will leave the other party still connected with the external call.

Phonebook

Your phone can store up to 50 private phonebooks with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 10 characters for the name.

Phonebook entries are stored alphabetically by name and are identical in the base and handset.

To add new entry

In idle mode:

On Base:

- Press  MENU/OK, and ▼/▲ to select **PHONEBOOK** and press **twice**  MENU/OK to access the phonebook list (or empty).
- Press  MENU/OK and select **ADD**.
- Press  MENU/OK then enter phone number.
- Press  MENU/OK and enter the name.
- Press  MENU/OK to save.

On handset:

- Press  , and ▼/▲ to select **PHONEBOOK** and press **twice**  to access the phonebook list (or empty).
- Press  and select **ADD**.
- Press  then enter phone number.
- Press  and enter the name.
- Press  to save.

Set Speed Dial Key

On Handset

- Press  MENU/OK and ▲/▼ to select **PHONEBOOK**.
- Press  MENU/OK and ▲/▼ to select **SPEED DIAL**.
- Press  MENU/OK, use. ▲/▼ to select the speed dial key.
- Press  MENU/OK, select **ADD** or **EDIT**.
- Press  MENU/OK then enter the phone number.
- Press  MENU/OK then enter the **NAME**.
- Press  MENU/OK to confirm.

To use one speed dial key, **press and hold** in idle mode the key between 1 to 9 for 3 seconds (you hear a beep of confirmation). It is the same speed dial keys for the base and for the handsets cordless.

SOS emergency call

SOS settings

You need to set the SOS numbers before you can make SOS emergency calls.

On Base:

- Press  MENU/OK, and ▼/▲ to select **SET SOS**.
- Press  MENU/OK, and ▼/▲ to select **SOS NUMBER**.
- Press  MENU/OK and ▼/▲ to select the SOS number to edit (**SOS 1, SOS 2, SOS 3 or SOS 4**).
- Press  MENU/OK and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
- Press  MENU/OK and enter a phone number or edit the number stored already.
- Press  MENU/OK and enter a new name or edit the name stored already.
- Press  MENU/OK to confirm or **Int/☒/C** to delete.

On handset:

- Press  , and ▼/▲ to select **SET SOS**.
- Press  , and ▼/▲ to select **SOS NUMBER**.
- Press  and ▼/▲ to select the SOS number to edit (**SOS 1,**

SOS 2, SOS 3 or SOS 4).

- Press  and select **ADD** to enter a new number or **EDIT** to modify the number stored already.
- Press  and enter a phone number or edit the number stored already.
- Press  and enter a new name or edit the name stored already.
- Press  to confirm or  to delete.

Make SOS emergency calls

On Base

Press and hold 2 seconds  on the base to launch the emergency calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call be will made to the SOS 2 number, and so on. See note.

On handset

Press and hold 3 seconds  on the handset to launch the emergency

calling sequence from the SOS 1 number to SOS 4 number. A call will be first dialed to the SOS 1 number. If the SOS 1 number does not answer in 60 seconds, the call be will made to the SOS 2 number, and so on. See note.

NOTE:

- The other party receiving the SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open else the phone stops the call 10 seconds after.
- To stop the procedure launch by error, press and hold the SOS key until the alarm SOS stop.

Record SOS messages

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

On Base

- Press  MENU/OK, and ▼/▲ to select **SET SOS**.
- Press  MENU/OK, and ▼/▲ to select **SOS MSG**.
- Press  MENU/OK and ▼/▲ to select **RECORD**.
- Press  MENU/OK to start SOS message recording and **“RECORDING ANNC...”** will be displayed.
- Press  MENU/OK to save your SOS message.

On handset:

- Press  , and ▼/▲ to select **SET SOS**.
- Press  , and ▼/▲ to select **SOS MSG**.
- Press   and ▼/▲ to select **RECORD**.
- Press  to start SOS message recording and **“RECORDING”** will be displayed.
- Press  to save your SOS message.

Play SOS messages

On Base

- Press  MENU/OK, and ▼/▲ to select **SET SOS**.
- Press  MENU/OK, and ▼/▲ to select **SOS MSG**.
- Press  MENU/OK and ▼/▲ to select **PLAY**.
- Press  MENU/OK to to start SOS message playback.
- Press  **PLAY/STOP** to stop SOS message playback.

On handset:

- Press  , and ▼/▲ to select **SET SOS**.
- Press  , and ▼/▲ to select **SOS MSG**.
- Press   and ▼/▲ to select **PLAY**.
- Press  to start SOS message playback.
- Press  or **5** key to stop SOS message playback.

Picture big button memories

You have the choice to store 3 picture memories and one direct memory on the base.

On Base:

- Press  MENU/OK, and ▼/▲ to select **PHOTO MEM**.
- Press  MENU/OK, and ▼/▲ to select **M1 to M4**.
- Press  MENU/OK and ▼/▲ to select **ADD** or **EDIT** and **VOICE TAG**.
- Press  MENU/OK then enter number.
- Press  MENU/OK then enter name.
- Press  MENU/OK to save.

On handset:

- Press  , and ▼/▲ to select **PHOTO MEM**.
- Press  , and ▼/▲ to select **M1 to M4**.
- Press   and ▼/▲ to select **ADD** or **EDIT** and **VOICE TAG**.
- Press  then enter number.
- Press  then enter name.
- Press  to save.

You have the option to enter a voice name in choose **VOICE TAG** and **RECORD** at the point 3.

If you receive a call with the number registered with a voice tag, you can hear the voice name on the base and on the handset.

NOTES:

- To use a picture big button memory in idle mode, press the picture on the base.
- If you want to pass the call from the speakerphone to the handset, lift the handset off the base to take the call.
- If the handset is not placed on the base, press  to take the line in speakerphone mode and place the handset on the base.

Answering machine

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

Switching Answering Machine On/Off

On Base:

Press  **ANS ON/OFF** to switch the answering machine **ON** or **OFF**.

On handset:

- Press  , and ▼/▲ to select **ANS.SYS**.
- Press  , and ▼/▲ to select **TAM ON/OFF**.
- Press   and ▼/▲ to select **ON** or **OFF**.
- Press  to confirm.

Play Messages on TAM

If you have new messages, the display will show e.g.2 **NEW MESSAGES**, which means you have 2 new messages. The new messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

On Base: Press  **PLAY/STOP** to start the playback.

On handset:

- Press  , and ▼/▲ to select **ANS.SYS**.
- Press  , and ▼/▲ to show **PLAYBACK**.
- Press  to start message playback and the screen displays the date and hour of the message received.
- During message playback, press ▼/▲ to adjust the message playback volume respectively.
-  **NOTES:** After new message is played, the new message will be saved as an old message automatically unless it is deleted.
 - **STOP:** Stop the current message playback and return to the ANS. MACHINE menu.
 - **SLOW ON:** to reduce the speed of the playback.
 - **FORWARD:** Skip to play the next message.
The date and hour information of the next message will display if there is next message.
 - **PREVIOUS:** Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.
 - **DELETE:** Delete the current message and the next message will be played.
- Press  to confirm the setting.

Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings it means there are no messages recorded and you can hang up before you are charged for the call.

On handset:

- Press  , and ▼/▲ to select **ANS.SYS**.
- Press  , and ▼/▲ to show **SET TAM**.
- Press   and ▼/▲ to select **ANSWER DELAY**.
- Press   and ▼/▲ to choose: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 RINGS** or **TOLL SAVE**.
- Press  to confirm the setting.

REMOTE OPERATIONS

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

- Place a call from a tone-dialing phone.
- When the answering machine answers the call and starts playing OGM, press .
- Enter the 4-digit Remote Access PIN (default PIN is **0000**).
- Press the following keys to carry out your desired function.

KEY	FUNCTION	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
	Enter the 4-digit remote access PIN	

NOTES:

- When your answering machine memory is full, the answer mode will change to **ANSWER ONLY** automatically.
- It will change to **ANS & RECORD** mode automatically after some messages have been deleted.
- You cannot delete new messages until they have been listened to.

FUNCTION MESSAGE ALERT

When you have a new message, you can hear a beep every 10 seconds. If you want deactivate this beep, follow the procedure.

Using the handset:

- Press  , and ▼/▲ to select **ANS.SYS**.
- Press  , and ▼/▲ to show **SET TAM**.
- Press   and ▼/▲ to select **MSG ALERT**.
- Press   and ▼/▲ to select **OFF**.
- Press  to confirm.

Alarm function

You have the choice to enter 10 Alarms.

On handset:

- Press  , and ▼/▲ to select **REMINDER**.
- Press  , and ▼/▲ to select your alarm.
- Press   and ▼/▲ to select **ON/OFF**.
- Press   and select **ON**.
- Press   and enter the time.
- Press   and choose the frequency.
- Press  to confirm.

Talking function

You have the choose to activate or deactivate the function Talking Digits. **Activate:** this function announces the digit dial or the CID number when you receive a call and that you have subscribed to the service.

On Base:

- Press  MENU/OK, and ▼/▲ to select **TLK DIGITS**.
- Press  MENU/OK, and ▼/▲ to select **ON** to **OFF**.
- Press  MENU/OK to confirm.

On handset:

- Press  , and ▼/▲ to select **TLK DIGITS**.
- Press  , and ▼/▲ to select **ON** to **OFF**.
- Press  to confirm.

Function First ring

message on the line. To remove this ringer, you must activate the function.

On the base In idle mode :

- Press  MENU/OK, and ▼/▲ to select **BS SETTING**.
- Press  MENU/OK and ▼/▲ to select **FIRST RING**.
- Press  MENU/OK and select **ON**.
- Press  to save.

MAINTENANCE

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at **www.geemarc.com**.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATIONS

CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive RED 2014/53/UE. The CE declaration of conformity may be consulted at **www.geemarc.com**

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
 - Or, hand the old product to the retailer. If you purchase a new one, they should accept it.
- Thus if you respect these instructions you ensure human health and environmental protection.

Technical specifications

Basic Information	
Valid Range:	Indoor : 50m I Outdoor:300m
Handset	Standby time : 100 hours
Operating Time:	Talk time : 10 hours approx
RF Parameter	
Frequency:	1.88 GHz to 1.9GHz
Nb Channels:	10
Power Supply	
Base:	Input:100-240V 50/60Hz; Output: 6V, 800mA adapter
Charger:	Input:100-240V 5