

User's manual



COMBI DECT 295

TABLE OF CONTENTS

1.	IMP	ORTANT SAFETY INSTRUCTIONS	1
2.	SET	UP THE TELEPHONE	2
	2.1	Package Contents	
	2.2	Location	2
	2.3	Connect the Corded Base Station	
	2.4	Install and Charge the Handset Battery	
	2.5	Base Station Installation options	
		2.5.1 Tabletop to Wall Mount Installation	
		2.5.2 Wall Mount to Tabletop Installation	6
3.	GET	TO KNOW YOUR PHONE	7
	3.1	Overview of the Handset	7
	3.2	Overview of the Corded Base	10
	3.3	Overview of the Handset Charger	12
	3.4	Handset LCD Display Icons and Symbols	
	3.5	Handset Menu Structure	
	3.6	Base LCD Display	
	3.7	Base Menu Structure	
	3.8	Text and Digit Entry Table	
		3.8.1 English Character Set	18
4.	USE	YOUR PHONE	19
	4.1	Make an External Call	19
		4.1.1 Preparatory Dialing	
		4.1.2 Direct Dialing	
		4.1.3 Call from the Phonebook	
		4.1.4 Call from the Call List	
		4.1.5 Call from the Redial List	
		4.1.6 Call Timer	
	4.2	Make a Call from Direct Access Memory	
	4.3	Answer a Call	21
	4.4	Volume Boost Function	
	4.5	End a Call	
	4.6	Adjust Earpiece and Speakerphone Volume	
	4.7	Mute a Call	
	4.8	Set the Handset Silent Mode	
	4.9 4.10	Set the Handset Keypad Lock Emergency Call w ithout Main Pow er	23
	4.10	Redial the Last Number	
	4.11	4.11.1 Redial a Number from the Redial List	
		4.11.1 Redial a Number from the Redial List	
		4.113 Delete a Redial Number into the Phonebook	
		4.113 Delete a Redial Number	
	4.12	Find the Handset	
	4.13	Make an Internal Call	

		4.13.1 4.132 4.133 4.134	Intercom Call All Handsets Transfer an External Call Make a 3-w ay Conference Call	27
5	PHOI 5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8	Add a N Search View a Edit a F Delete a Delete t Check t	Make a 3-way Conference Call	
6	6.1 6.2 6.3 6.4	View the Store a	BPLAY (NETWORK DEPENDENT) The Call List	34 35 35
7	DIRE 7.1		MORIES KEYSect Memory Keys in Handset	
		Oot and	ot world y rego in riandot	
8	8.1	Clock S	FTINGS	38
8		Clock S Alarm S Handse 8.3.1 8.3.2 8.3.3 8.3.4 8.3.5 8.3.6 8.3.7	Settings Settings (Handset only)	
8	8.1 8.2	Clock S Alarm S Handse 8.3.1 8.3.2 8.3.3 8.3.4 8.3.5 8.3.6 8.3.7 8.3.8 8.3.9 Base S	Settings	
8	8.1 8.2 8.3	Clock S Alarm S Handse 8.3.1 8.3.2 8.3.3 8.3.4 8.3.5 8.3.6 8.3.7 8.3.8 8.3.9 Base S 8.4.1 8.4.2 8.4.3 8.4.4 8.4.5 8.4.6	Settings	38 40 40 41 42 42 42 42 44 44 44 45 45 45 45

		8.5.3	Set the Ringer Volume	46
		8.5.4	De-register a Handset	
		8.5.5	Set the Flash Time	47
		8.5.6	Set the Dial Mode	47
		8.5.7	Set the Key Tone	47
		8.5.8	Change the System PIN	
		8.5.9	Set the Memory Keys	48
	8.6	Registra	ation	49
	8.7	Reset Y	our Phone	50
9	ANS	W ERIN	G MACHINE	51
	9.1		ng Answering Machine On/Off	_
	9.2		essages on TAM	
	9.3		all Messages on TAM	
	9.4		Memos on TAM	
	9.5	Answer	ing Machine Settings (Base Only)	55
		9.5.1	Set the Answer Mode	55
		9.5.2	Set TAM language	55
		9.5.3	Record your Outgoing Message (OGM)	56
		9.5.4	Playback the Outgoing Message (OGM)	57
		9.5.5	Delete a Personalized OGM (SET OGM to DEFAULT)	58
		9.5.6	Set the Answer Delay	
		9.5.7	Set the Recording Time of Incoming Message	59
		9.5.8	Turn On or Off the Base Screening	59
		9.5.9	Change the Compression Rate	60
		9.5.10	Activate Remote Access	61
			9.5.10.1 Change the 4-Digit Remote Access PIN	
			9.5.10.2 Activate or Deactivate the Remote access	62
			9.5.10.3 Reset TAM to Default Settings	62
			9.5.10.4 Remote Operations	63
10.	TRO	UBLES	HOOTING	64
11.	TEC	HNICA	L SPECIFICATIONS	67
12.	CAF	REAND	MAINTENANCE INSTRUCTIONS	68
13.		RANTE		
				
14.	DEC	LARAT	IUNS	

1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should alw ays be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Read and understand all the instructions.
- 2. Follow all warnings and instructions marked on the product.
- 3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this product near water (for example, near a bath tub, kitchen sink, sw imming pool).
- Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 7. Unplug this product from the wall outlet and refer servicing to the distributor under the following conditions:
 - When the pow er supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- 8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 9. Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the supplied NiMH (Nickel Metal Hydride) battery pack! The operation periods for the handsets are only applicable with the default battery capacities
- 11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
- 12. Do not use third party charging bays. The battery may be damaged.
- Battery should not be exposed to excessive heat such as bright sunshine or fire and immersed in water.
- 14. For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Disposal warning

- When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products/battery should be disposed of separately from the municipal w aste streamvia designated collection facilities appointed by the government or the local authorities.



3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.

For more detailed information about disposal of your old appliance/battery, please Contact your city office, waste disposal service or the shop where you purchased the product.

2. SET UP THE TELEPHONE

2.1 Package Contents

The package contains the following items:

- Base station
- Corded handset
- Cordless handset
- · Charger with an AC power adapter
- AC pow er adapter (for base unit)
- NiMH rechargeable battery pack (for handset)
- Telephone line cord (for base unit)
- User's manual

2.2 Location

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- place it aw ay from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another pow er outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

2.3 Connect the Corded Base Station


Plug one end of the telephone line cord into a telephone jack or a DSL filter.

If you have DSL highspeed Internet service, a DSL filter (not included) is required.

Route the telephone line cord through this slot.

Click the wall mount bracket securely into the mounting slots for tabletop use.

Plug the other end of the telephone line cord into the telephone jack on the back of the telephone base.

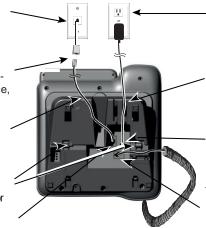

-Plug the large end of the telephone base pow er adapter into a pow er outlet.


Route the pow er adapter cord through this slot.

Plug the small end of the telephone base pow er adapter into the pow er adapter jack on the back of the telephone base.

Plug the corded handset cord into the corded handset jack on the back of the telephone base.

NOTE

• Use only the pow er adapter supplied with the base station.

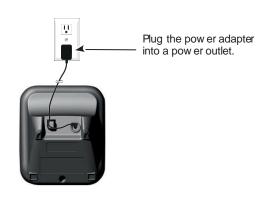

2.4 Install and Charge the Handset Battery



 Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery as indicated.



2. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.



3. Charge the handset by placing it face forward in the charger. You hear a beep when the handset is charging in the charger.

NOTES


- Use only the supplied NiMH rechargeable battery pack.
- If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.

2.5 Base Station Installation options

Your telephone base is ready for tabletop use. If you want to mount your telephone on a wall, follow the steps to connect the telephone base with a standard dual-stud telephone wall mounting plate. You may need a professional to install the mounting plate.


2.5.1 Tabletop to Wall Mount Installation

- 1. Unplug the pow er adapter from the pow er outlet. Unplug the telephone line cord from the wall jack (or DSL filter).
- Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upwards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
- 3. Press down on the tabs of the wall mount bracket to release it from tabletop orientation.
- 4. Rotate the wall mount bracket down and push it into the telephone base until it clicks into place.
- 5. Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into a power outlet. Align the slots on the back of the telephone base with the study of the wall mounting plate.
- 6. Slide the telephone base down until it locks securely. Bundle the telephone line cord and power adapter cord neatly with twist ties.

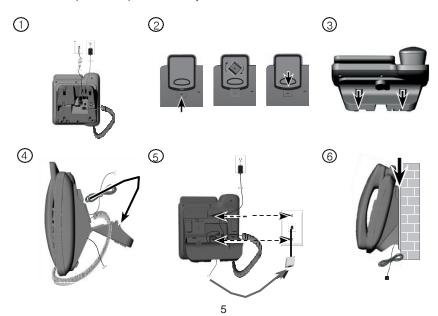


2.5.2 Wall Mount to Tabletop Installation

- Unplug the pow er adapter from the pow er outlet. Unplug the telephone line cord from the wall jack (or DSL filter). If the telephone line cord and pow er adapter cord are bundled, untie them first. Push the telephone base up to remove it from wall.
- Put the corded handset aside. Hold down the switch hook on the telephone base, and then slide the handset tab upw ards to remove it from the slot. Rotate the handset tab by 180 degrees. Then, replace the handset tab into the slot until it locks into position.
- Gently pull upw and to release the wall mount bracket. Rotate the wall mount bracket up to tabletop position and push it into the telephone base until it clicks into place.
- Plug the telephone line cord (or DSL filter) into the wall jack. Plug the power adapter into an power outlet. Bundle the telephone line cord and power adapter cord neatly with twist ties if necessary.

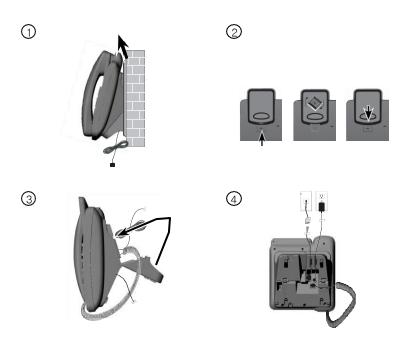

3. GET TO KNOW YOUR PHONE

3.1 Overview of the Handset

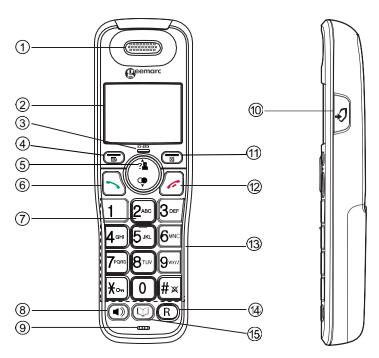

1. EARPIECE

2. LCD DISPLAY

3. CHARGE LIGHT

Steadily on when the handset is charging in the charger.

4. MENU/OK 🖘

In idle mode: Press to access the main menu.
In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom/ Phonebook / Redial list / Call list.

5. UP/CALL LIST (?)

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

TALKON ()

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list/call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answ er a call in earpiece mode.

7. DOWN/REDIAL LIST (🌩)

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

8. SPEAKERPHONE (◀ ≫)

In idle/pre-dial mode: Press to make a call in speakerphone mode. Press again to sw itch to earpiece mode.

In phonebook list/redial list/call list: Press to make a call to the selected entry in the list in speakerphone mode. Press again to switch to earpiece mode.

During ringing: Press to answ er a call in speakerphone mode. Press again to sw itch to earpiece mode.

9. MICROPHONE

10. VOLUME BOOST →

During a call: Press to activate/deactivate the VOLUME BOOST function.

11. CANCEL/MUTE 🖼

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

In sub-menu mode: Press and hold to go back to idle screen.

In editing/pre-dial mode: Press to delete a character/digit. In editing/pre-dial mode: Press and hold to delete all the characters/digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom another handset.

12. TALKOFF ()

During a call: Press to end a call and go back to idle screen.

In menu/editing mode: Press to go back to previous menu.

In menu/editing mode: Press and hold to go back to idle screen.

In idle mode: Press and hold to pow er off the handset.

Press and hold to pow er on when it is off.

13. ALPHANUMERIC KEYPAD, STAR X, HARSH

In predial or editing mode: Press to insert a digit / character / \(\frac{1}{3} / \frac{1}{3} \)

★ key in idle mode: Press and hold to enable or disable the keypad lock.

key in idle mode: Press and hold to turn on/off the ringer.

6 key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.


14. R

During a call: Press to answer a new call if you subscribed to Call Waiting service from your service provider.

15. PHONEBOOK (II)

In idle mode: Press to access the phonebook.

3.2 Overview of the Corded Base

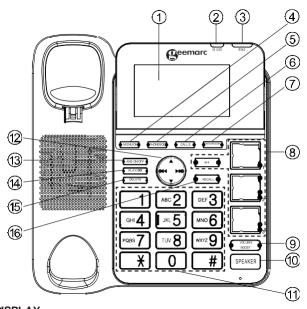

1. LCD DISPLAY

2. IN USE

On during a call.

3. RING light

Flashes when there is an incoming call.

Steadily on when the answering machine is turned on.

Flashes when there are new memos or messages in the answering machine.

4. M ENU/OK

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

In Redial list / Call list: Press to store the number into Phonebook.

5. PHONEBOOK

In Idle: Press to access the phonebook.

6. 🙎 CALLS (CALL LIST)

In Idle mode: Press to access the call list.

7. INT/MUTE/CLEAR

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous level.

In sub-menu mode: Press and hold to go back to idle screen. In editing / predialing mode: Press to clear a character / digit.

In editing / predialing mode: Press and hold to delete all the characters / digits.

During a call: Press to mute / unmute the microphone.

In ringing: Press to silence the base ringer.

In idle mode: Press to intercom another system handset.

8. MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 MEMORY KEY - M4)

In idle mode: Dial your phone number and <u>press and hold the memory key</u> until to hear a beep.

To use: Press to dial out to the number stored in the memory key.

9. VOLUMEBOOST

During a call: Press to activate/deactivate the VOLUME BOOST function.

10. SPEAKER

In Idle mode or Phonebook/ Call list/ Redial list view mode: Press to make a call with speakerphone.

11. ALPHANUMERIC KEYPAD, STAR X, HARSH

In predial or editing mode: Press to insert a digit / character/L/J 0 key in predial or editing mode: Press and hold to insert a pause.

12. NAVIGATION KEYS

UP (▲)

In menu mode: Press to scroll up the menu items.

In Phonebook list / Redial list / Call list: Press to scroll up the list. In editing mode: Press to move the cursor one character to the left. During a call or TAM message playback: Press to increase the volume.

REPEAT/OGM (◀)

In Idle mode: Press and hold to record OGM.

Press to playback OGM.

In TAM message playback mode: Press to go back to previous message.

MEMO/SKIP FORWARD (►►)

In Idle mode: Press and hold to record a memo.

In TAM message playback mode: Press to skip to next message.

DOWN/REDIAL LIST (\$\Pi\$)

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In Phonebook list / Redial list / Call list view mode: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right. During a call or TAM message playback: Press to decrease the volume.

13. ANS OWOFF

In Idle: Press to switch the answering machine ON or OFF.

14. PLAY/STOP

In idle mode: Press to playback messages.

During TAM message playback: Press to stop playing messages.

15. DELETE

In TAM message playback mode: Press to delete the current TAM message playback.

In idle mode: Press and hold to delete all old messages.

16. RECALL

During a call: Press to activate Recall for use with Telephone Network Services

such as Call Waiting during a call.

During message playback: Press to call back the caller if the caller's number is available.

3.3 Overview of the Handset Charger




1

1. CHARGING CRADLE

3.4 Handset LCD Display Icons and Symbols

The screen display gives you information on the current status of the telephone.

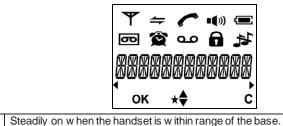

Ψ	Flashes w hen the handset is out of range of the base or cannot communicate w ith the base.
=	Steadily on when an intercomcall is in progress. Flashes when there is an incoming internal call or an internal call is put on hold.
•	Steadily on when a call is in progress. Flashes when there is an incoming call.
I ())	Steadily on when the speakerphone is turned on.
(E	Steadily on when the battery is fully charged.
	Animates when battery is charging.
-	Flashes when low battery is detected to indicate that it needs charging.
Б	Steadily on when the telephone answering machine (TAM) is turned on.
	Flashes when a new message is received in the answering machine.
	Steadily on when an alarm is set.
	Flashes when the alarm time set before reaches.
مه	Steadily on when there are received new Voice Message Waiting (VMWI) not yet read. Disappears when all the voice messages have been read.
6	Steadily on when the keypad is locked.
4	Steadily on when the ringer is switched off.
•	Steadily on when more digits are existed before the text currently displayed.

•	Steadily on w hen more digits are existed after the text currently displayed.
OK	Press to confirmthe current selection if applicable.
*	Steadily on w hen there is (are) new call(s) in call list.
♦	Scroll up / down the menu items / Phonebook / Redial list / Call List.
С	Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

3.5 Handset Menu Structure

In idle mode, pressing **M ENU/OK** will access the menu. Refer to the following for the menu structure.

Key Press MENU/OF	((E)	\longleftrightarrow	▲/ ▼	\longleftrightarrow	▲/ ▼	\longleftrightarrow	▲/ ▼
-------------------	-------	-----------------------	-------------	-----------------------	-------------	-----------------------	-------------


Main Menu	PHONEBOOK	CALL LIST	BS SETTINGS	HS SETTINGS
Main Menu Sub menu	Review phonebook list Under a Phonebook entry: ADD VIEW EDIT DELETE	Review Call List Under a selected Call List entry: ADD TO PB DELETE DELETE ALL DETAILS	BS SETTINGS BS RINGER RING VOLUME DELETE HS DIAL MODE FLASH TIME CHANGE PIN	HS SETTINGS RING SETUP TONE SETUP SELECT BASE LANGUAGE RENAME HS HS DISPLAY AUTO ANSWER
	DELETE ALL PB STATUS FASTDIAL	CATEGORY		



DIRECTMEM	DATE & TIME	ALARM	REGISTRATION	DEFAULT	ANS. MACHINE
M1 M2 M3 M4	DATE FORMAT TIME FORMAT SET TIME SET DATE	ON OFF	BASE 1 BASE 2 BASE 3 BASE 4	PIN?	MSG PLAYBACK DELETE ALL MEMO TAM ON/OFF TAM SETTINGS ANSWER MODE TAM LANGUAGE OGM SETTINGS ANSWER DELAY RECORD TIME COMPRESSION BS SCREENING REMOTE ACC. CHANGE PIN

3.6 Base LCD Display

The screen display gives you information on the current status of the telephone.

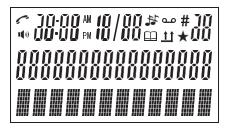

*	This will display when there is a new calls list entry or if one is being viewed.				
~	Indicate a call is in progress.				
\square	This will display when you are in the phonebook menu.				
<u> </u>	This will display when the same caller has called more than once				
•(1))	Indicate that speakerphone is being used.				
#	Indicate the sequence number of the calls list record.				
¥.	Indicate that the ringer is switched off.				
AM PM	Indicate the time format.				

3.7 Base Menu Structure

In idle mode, pressing $\mathbf{MENU/OK}$ will access the menu. Refer to the following for the menu structure.



Main Menu	PHONEBOOK	CALL LOG	DATE & TIME	LANGUAGE
Submenu	VIEW	MISSED	TIME FORMAT	ENGLISH
	ADD	RECEIVED	SET CLOCK	DEUTSCH
	EDIT	DIALED		FRANCAIS
	DELETE			ITALIANO
	DELETE ALL			ESPANOL
	PB STATUS			PYCCKNN
				DUTCH



SETTINGS	PAGE All HS	REGISTRATION	ANS. MACHINE
RING SETUP			MSG PLAYBACK
DELETE HS			DELETE ALL
DIAL MODE			MEMO
FLASH TIME			TAM ON/OFF
KEY TONE			TAM SETTINGS
CHANGE PIN			ANSWER MODE
BS DEFAULT			OGM SETTINGS
			ANSWER DELAY
			RECORD TIME
			TAMLANGUAGE
			BS SCREENING
			REMOTE ACC.
			COMPRESSION
			CHANGE PIN
			TAM DEFAULT

3.8 Text and Digit Entry Table

The follow ing tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text by ▲▼ to amend the text entry.
- Press CANCEL/MUTE on the handset, or INT/MUTE/CLEAR on the telephone base, to delete the last character.
- Press and hold CANCEL/MUTE on the handset, or INT/MUTE/CLEAR
 on the telephone base, to delete the entire text string.

3.8.1 English Character Set

Key	Alphanumeric Editing (For phonebook name editing and renaming hands et)										Number Editing (For phone number editing, date / time editing)
Key press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	Α	В	С	2							2
3	D	Е	F	3							3
4	G	Н	I	4							4
5	J	K	L	5							5
6	М	N	0	6							6
7	Р	Q	R	S	7						7
8	Т	U	V	8							8
9	W	Х	Υ	Z	9						9
0	0										0, P (Pause)
*	*	?	/	\	()					*
#	#	4	,	-		&					#

4. USE YOUR PHONE

4.1 Make an External Call

4.1.1 Preparatory Dialing

Using a handset:

Enter the phone number and press or vital the number. Press CANCEL/MUTE to clear the entry.

Using the base:

Enter the phone number and lift the corded handset or press **SPEAKER** to dial the number. Press **INT/MUTE/CLEAR** to clear the entry when entering the number.

4.1.2 Direct Dialing

Using a handset:

Press or ■) to take the line, and then enter the phone number.

Using the base:

Lift the corded handset or press **SPEAKER** to take the line and enter the phone number.

4.1.3 Call from the Phonebook

Using a handset:

- Press
 □ to access the phonebook list and press
 ▼ to select the desired phonebook entry.
- Press or ■) to dial the selected entry. Press it again to turn on the speakerphone.

Using the base:

Press **PHONEBOOK** to access the phonebook and press ▲/▼ to select the desired phonebook entry. Lift the corded handset or press **SPEAKER** ■) to dial out to the selected phonebook entry.

4.1.4 Call from the Call List

Using a handset:

1. Press ? CALLS to access the call list.

OR

- 1. Press MENU/OK to enter the main menu.
- Press ▲/▼ to select the desired call list entry.
- Press
 ¬ or
 ¬) to dial the selected call list entry. Press it again to turn on the speakerphone.

Using the base:

Press **?** CALLS to access the call list and press △/▼ to select the desired call list entry. Lift the corded handset or press SPEAKER to dial out to the selected call list entry.

4.1.5 Call from the Redial List

Using a handset:

- 1. Press to access the redial list.
- Press ▲/▼ to select the desired redial number.
- Press
 ¬ or ■) to dial the selected redial number. Press it again to turn on the speakerphone.

Using the base:

Press ♀ to access the redial list and press ▲▼ to select the desired redial number. Lift the corded handset or press SPEAKER ■ to dial out to the selected redial number.

4.1.6 Call Timer

Your handset or base automatically times the duration of each call. The call timer will display a few seconds after the call has ended. It is shown in hours, minutes and seconds format (HH:MM:SS).

4.2 Make a Call from Direct Access Memory

Using the base:

In idle mode, press any direct memory key in w hich a number is stored, the phone will automatically dial out the telephone number stored in the selected memory key in speakerphone mode.

OR

Lift the corded handset or press **SPEAKER**, and then press any direct memory key in which a number is stored to dial the number pre-stored into the keys respectively.

NOTES:

- You need to set the direct access number first. See Section 8.5.9 for details.
- If no number is stored, you will hear beeps.

4.3 Answer a Call

Using a handset:

If the handset is not on the charging cradle:

When the phone rings, press \frown or \blacktriangleleft) to answ er a call. Press it again to turn on the speakerphone.

If the handset is on the charging cradle and if AUTO ANSWER is set to be ON: When the phone rings, pick up the handset to answer a call.

Using the base:

When there is an incoming ring, pick up the corded handset or press SPEAKER

to answerthe call.

4.4 Volume Boost Function

The Volume Boost function allows you to amplify the handset earpiece volume to compensate for the ear's limited sensitivity.

Using a handset:

To turn on the Volume Boostfunction:

- Press VOLUME BOOST at any time during a call. "BOOST ON" displays on the handset screen.
- When the Volume Boost function is activated, press ▲/▼ to increase or decrease the earpiece volume.

To turn off the Volume Boost function and return the earpiece volume back to normal:

NOTE:

The audio boost feature will be turned off automatically when the call is ended.

Using the base:

During a call, you can activate the Volume Boost function with the volume of earpiece increased by several dBs by pressing **AMPLIFY**, "BOOSTER ON" displays on the base screen. To cancel it, press **AMPLIFY**, again.

4.5 End a Call

Using a handset:

During a call, press / to end the call.

OR

Put the cordless handset on the charging cradle to end the call.

Using the base:

During a call, put the corded handset on the base station to end the call.

OR

Press **SPEAKER** (1) if you have a call in speakerphone mode.

4.6 Adjust Earpiece and Speakerphone Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece and speakerphone volume.

Using a handset:

During a call:

Press ▲/▼ to select volume 1-5. The current setting is show n. When you end the call, the setting will remain at the last selected level.

Using the base:

During a call:

Press ▲▼ to select **volume 1-5**. The current setting is show n. When you end the call, the settings will remain at the last selected level.

4.7 Mute a Call

With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

Using a handset:

During a call:

Press (a) CANCEL/MUTE to mute the microphone and "MUTED" will be displayed on the handset screen. Your caller cannot hear you. Press (a) CANCEL/MUTE again to resume the microphone.

Using the base:

During a call:

Press **INT/MUTE/CLEAR** to mute the microphone and "MUTED" is displayed on the LCD. Your caller cannot hear you. Press **INT/MUTE/CLEAR** again to resume the microphone.

4.8 Set the Handset Silent Mode

In idle mode, press and hold #xto turn off the handset ringer. The x will be displayed on the handset screen.

In silent mode, press and hold #\implies to turn on the handset ringer. The \(\mathbf{x} \) will disappear.

4.9 Set the Handset Keypad Lock

You can turn on/off the keypad lock of a handset to avoid misoperation.

In idle mode, press and hold X to turn on the keypad lock. The Ω will be displayed on the handset screen.

In keypad lock mode, press and hold **X** - to turn off the keypad lock. The **a** will disappear.

4.10 Emergency Call without Main Power

The corded base unit can make an emergency call with the corded handset when the mains AC power is disconnected.

Pick up the corded handset and wait for several seconds to get the dial tone and then enter the phone number to make a call.

REM ARK:

It is not possible to dial numbers from memories when the mains power is off.

When the mains power is off, you can also answer an incoming call with the corded handset.

When the phone rings, pick up the corded handset to talk to the caller.

4.11 Redial the Last Number

You can redial up to 10 of the last numbers called on the cordless handset or on the corded telephone base. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

4.11.1 Redial a Number from the Redial List

Using a handset:

1. In idle mode, press to access the redial list.

REM ARK:

If the redial entry displays with name, press \bigstar to view the number.

- Press ▲/▼ to brow se the redial list.
- Press
 or
 or

 or
 or
 or
 or
 or
 or
 or
 or
 or

 or
 or
 or
 or
 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 or

 o

NOTE:

If there is no number in the redial list, the display will show "EMPTY".

Using the base:

1. In idle mode, press voview the redial list.

OR

Press MENU/OK and ▲/▼ to select CALL LOG.

Press MENU/OK and ▲/▼ to select DIALED. Press

MENU/OK to view the redial list.

- Press ▲/▼ to brow se the redial list.

NOTE:

If there are no numbers in the redial list, the display will show "EMPTY".

4.11.2 Store a Redial Number into the Phonebook

Using a handset:

- 1. Follow Steps 1 and 2 in section 4.11.1.
- 2. Press to select **ADD TO PB**.
- 3. Press (to enter the name.
- 4. Press to store the redial number into the phonebook.
- 5. Press to select ringer melody.
- Press ▲/▼ to brow se the melody list. The respective melody will be played while you are brow sing the melody list.
- 7. Press to confirm.

Using the base:

- 1. Follow Steps 1 and 2 in section 4.11.1.
- Press MENU/OK to select ADD TO PB?
- 3. Press **MENU/OK** to enter the name.
- 4. Press MENU/OK to edit the number.
- Press M ENU/OK and ▲/▼ to select the melody.
- 6. Press MENU/OK to save the redial number into the phonebook.

4.11.3 Delete a Redial Number

Using a handset:

- 1. Follow Steps 1 and 2 in section 4.11.1.
- Press and ▲/▼ to select DELETE.
- Press to confirm.

Using the base:

- 1. Follow Steps 1 and 2 in section 4.11.1.
- 2. Press MENU/OK and ▲/▼ to select DELETE?
- Press M ENU/OK to confirm.
- Press M ENU/OK to reconfirm.

4.11.4 Delete the Entire Redial List

Using a handset:

- 1. Follow Steps 1 and 2 in section 4.11.1.
- Press and ▲/▼ to select DELETE ALL.
- 3. Press (to confirm.
- 4. Press to reconfirm.

Using the base:

- 1. Follow Steps 1 and 2 in section 4.11.1
- Press MENU/OK and ▲/▼ to select DELETE ALL?
- Press M ENU/OK to confirm.
- 4. Press MENU/OK to reconfirm.

4.12 Find the Handset

This feature helps you find the misplaced handset(s).

You can locate the handset by operation on the base station as below.

- In idle mode, press MENU/OK and ▲/▼ to select PAGE ALL HS.
- 2. Press MENU/OK to confirm. "PAGING" will flash on the base screen.

All the handsets registered to the base will produce the paging tone, and "PAGING" will flash on the screen. You can stop the paging by pressing \(/ \) / \(/ \) (CANCEL/MUTE on any handset or INT/MUTE/CLEAR on the base to stop paging.

NOTE:

If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.13 Make an Internal Call

This feature allows you to make internal calls, transfer external calls and make conference calls. If the called base or handset is not answered within 60 seconds, the called base or handset will stop ringing and the calling one will return to standby mode.

4.13.1 Intercom

Using a handset:

- 1. In idle mode, press (a) CANCEL/MUTE and the numbers of the registered handsets and telephone base will display except the calling handset.
- 2. Enter the desired handset number you want to intercomwith.
- The called handset rings. Press or ■) on the called handset to establish the internal call.

Using the corded base:

- In idle mode, press INT/MUTE/CLEAR and ▲/▼ to select the handset you w ant to call.
- Press M ENU/OK to confirm.
- The called handset rings. Press or ■) on the called handset to establish the internal call.

NOTE:

If only one cordless handset is registered to the base station, press **INT/MUTE/CLEAR** will call the cordless handset immediately.

4.13.2 Call All Handsets

Using a handset:

- 1. In idle mode, press a CANCEL/MUTE and the numbers of the registered handsets and telephone base will display except the calling handset.
- 2. Press **9** to ring to all registered handsets and the telephone base.

Using the corded base:

- In idle mode, press INT/MUTE/CLEAR and ▲/▼ to select ALLHANDSETS.
- Press MENU/OK to confirm.

4.13.3 Transfer an External Call

Using a handset:

During an external call:

- Press MENU/OK and ▲/▼ to select INTERCOM.
- 2. Press to select the desired handset you w ant to intercom w ith.
- 3. The external call is put on hold automatically and the called handset rings.
- Press or or on on the called handset to establish an internal call.
- Press on the calling handset or put the calling handset on the charging cradle or base station to end the current call with the external party.
- 6. The external call is transferred to the called handset.

Using the corded base:

During an external call:

- Press M ENU/OK and ▲/▼ to select the desired handset you w ant to intercom w ith, then press M ENU/OK.
- 2. The external call is put on hold automatically and the called handset rings.
- Press or or on on the called handset to establish an internal call.
- 4. Hang up the corded handset on the calling base to end the internal call.
- 5. The external call is transferred to the called handset.

4.13.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with the corded base and cordless handset or two cordless handsets. The three parties can share the conversation and no network subscription is required.

Using a handset:

During the external call:

- 1. Follow Steps 1 to 4 in section 4.13.3.
- 2. Press and hold X on the calling handset to establish the conference call.

NOTE:

Any party (corded base or cordless handset) hangs up during a conference call will leave the other party still in connection with the external call.

5 PHONEBOOK

Your phone can store up to 50 private phonebook in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringer tones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

Using a handset:

In idle:

- 1. Press MENU/OK to select PHONEBOOK main menu item and then press oaccess the phonebook list.
- 2. Press (to select ADD.
- 3. Press and enter the name.
- 4. Press and enter the number.
- 5. Press and ▲▼ to select the desired ringtone for your phonebook entry.
- 6. Press to store the phonebook entry.

Using the base:

In idle:

- 1. Press MENU/OK to select PHONEBOOK main menu item
- Press MENU/OK and ▲/▼ to select ADD.
- Press MENU/OK and enter the name.
- 4. Press MENU/OK and enter the number.
- Press MENU/OK and ▲/▼ to select the desired ringtone for your phonebook entry.
- 6. Press **MENU/OK** to store the phonebook entry.

5.2 Search for a Phonebook Entry

Using a handset or the base:

In idle:

- 1. Enter the phonebook list.
- 2. Enter the first character of your desired name of the phonebook entries by multi-tap.

5.3 View a Phonebook Entry

Using a handset:

In idle:

1. Press U to display the first phonebook entry in alphabetical order.

OR

- 1. Press The MENU/OK to select PHONEBOOK main menu item and then press to access the phonebook list.
- Press ▲/▼ to select the desired phonebook entry.
- 3. Press and ▲▼to select VIEW.
- Press
 and
 to brow se the name, number and melody of the selected phonebook entry.

Using the base:

In idle:

1. Press **PHONEBOOK** to display the first phonebook entry in alphabetical order.

OR

- Press MENU/OK three times to display the first phonebook entry.
- Enter the first character of your desired name of the phonebook entry by multi-tap.
 OR

Press ▲/▼ to select and view the desired phonebook entry.

5.4 Edit a Phonebook Entry

Using a handset:

In idle:

- Press MENU/OK to select PHONEBOOK main menu item and then press to access the phonebook list.
- 2. Press ▲/▼ to select the desired phonebook entry.
- 3. Press (■) and △/▼to select EDIT.
- 4. Press and the current contents of the selected phonebook entry displays.
- 5. Edit the name with the key and press.
- 6. Edit the number with the key and press.
- 7. Press ▲▼ to select your desired ringtone.
- 8. Press to confirm the setting.

Using the base:

In idle:

- 1. Press MENU/OK to select PHONEBOOK main menu item
- Press MENU/OK and ▲/▼ to select EDIT.
- Press MENU/OK and the display will show the first phonebook entry in alphabetical order.
- Scroll ▲/▼ until you see the contact you w ant to edit and then press M ENU/OK.
- 5. Edit the name with the key INT/MUTE/CLEAR and press MENU/OK.
- 6. Edit the number with the key INT/MUTE/CLEAR and press MENU/OK.
- 7. Press ▲▼ to select your desired ringtone.
- 8. Press **M ENU/OK** to confirm the setting.

5.5 Delete a Phonebook Entry

Using a handset:

In idle:

- Press MENU/OK to select PHONEBOOK main menu item and then press MENU/OK to access the phonebook list.
- 2. Press ▲/▼ to select the desired phonebook entry.
- Press MENU/OK and ▲/▼ to select DELETE.
- Press MENU/OK to confirm.

Using the base:

In idle:

- Press M ENU/OK to select PHONEBOOK.
- Press MENU/OK and ▲/▼ to select DELETE.
- Press MENU/OK and ▲/▼ to select the desired phonebook entry.
- Press MENU/OK and the display shows "CONFIRM?".
- Press MENU/OK to confirm or INT/MUTE/CLEAR to cancel.

5.6 Delete the Entire Private Phonebook

Using a handset:

In idle:

- Press MENU/OK to select PHONEBOOK main menu item, and then press to access the phonebook list.
- 2. Press and ▲/▼ to select DELELE ALL.
- 3. Press to confirm.
- 4. Press to re-confirm.

Using the base:

In idle:

- 1. Press MENU/OK to select PHONEBOOK.
- Press MENU/OK and ▲/▼ button to select DELETE ALL.
- 3. Press MENU/OK and the display shows "CONFIRM?".
- Press MENU/OK to confirm or INT/MUTE/CLEAR to cancel.

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

Using a handset:

- Press MENU/OK to select PHONEBOOK main menu item and then press to access the phonebooklist.
- Press → and /▼ to select PB STATUS. The display show s "XX/50" (XX refer to the number of phonebookentries).
- Press (to confirm.

Using the base:

In idle:

- Press MENU/OK to select PHONEBOOK.
- Press MENU/OK and ▲/▼ to select PB STATUS. The display shows
 XX/50 USED" (XX refer to the number of phonebook entries). Press
 INT/MUTE/CLEAR to Exit.

5.8 Set the Fast Dial Numbers

After setting the fast dial numbers, you can dial to the pre-set numbers by pressing lding the respective digit keys from idle mode.

5.8.1 Add or Edit the Fast Dial Number

Using a handset:

- 1. Press **M ENU/OK** to select **PHONEBOOK** main menu item and then press to access the phonebook list.
- Press
 and
 to select FASTDIAL.
- 3. Press ▲/▼ and MENU/OK to select from KEY 2 to KEY 9.

If there is no number stored in the selected key:

- 4. Press ▲/▼ to select an entry from the phonebook list.
- 5. Press MENU/OK to confirm.

Or if there is already a number stored in the selected key:

- Press M ENU/OK to select EDIT.
- 5. Press MENU/OK to select an entry from the phonebook list.
- Press M ENU/OK to confirm.

5.8.2 Delete the Fast Dial Number

Using a handset:

- 1. Repeat the steps 1 to 3 in section 5.8.1.
- Press ▲/▼ to select an entry from the phonebook list.
- Press M ENU/OK and ▲/▼ to select DELETE.
- 4. Press MENU/OK to confirm.

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 20 received calls on the cordless handset and the telephone base with date/time information in the call list. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number. The phone will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will be displayed.

If the call is an international call or with unknown number, "OUT OF AREA" will be displayed.

In standby, if three unanswered calls are received, "3 CALLS" will be displayed.

6.1 View the Call List

All unansw ered calls are saved in calls log with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unansw ered call w hich has not been read is marked with★ icon.

Using a handset:

1. Press 2 to access the call list.

OR

- Press MENU/OK and A/▼ to select CALL LIST.

Using the base:

1. Press 2 CALLS to access the call list.

OR

- Press MENU/OK and ▲/▼ to select CALL LOG.
- Press MENU/OK and ▲/▼ to select MISSED or RECEIVED.
- 3. Press MENU/OK to see the most recent record in the selected calls list.
- Press ▲/▼ to scroll through the calls list.

6.2 Store a Call List Number into the Phonebook

Using a handset:

- 1. Follow Section 6.1 to access the call list.
- Press MENU/OK (and A / v to select ADD TO PB.
- 3. Press (and enter the name.
- 4. Press (and the selected call list number will be displayed.
- 5. Edit the number if necessary. Use the key 🗊 to delete a number.
- Press (and I very an
- 7. Press (to confirm.

Using the base:

- 1. Follow Section 6.1 to access the call list.
- Press MENU/OK to select ADD TO PB?
- Press M ENU/OK and enter the name.
- 4. Press MENU/OK and the selected call list number will be displayed.
- Edit the number if necessary. Use the key INT/MUTE/CLEAR To delete a number.
- Press MENU/OK and ▲/▼ to select the melody.
- 7. Press MENU/OK to confirm.

6.3 Delete an Entry in the Call List

Using a handset:

- 1. Follow Section 6.1 to access the call list.
- Press MENU/OK and ▲/▼ to select DELETE.
- 3. Press sto confirm.

- 1. Follow Section 6.1 to access the call list.
- Press MENU/OK and then ▲/▼ to select DELETE?
- 3. Press MENU/OK to confirm.
- 4. Press MENU/OK to reconfirm.

6.4 Delete the Entire Call List

Using a handset:

- 1. Follow Section 6.1 to access the call list.
- 2. Press MENU/OK and ▲/▼ to select DELETE ALL.
- 3. Press to confirm.
- 4. Press (to re-confirm.

- 1. Follow Section 6.1 to access the call list.
- 2. Press MENU/OK and ▲/▼ to select DELETE ALL?
- 3. Press MENU/OK to confirm.
- 4. Press MENU/OK to reconfirm.

7 DIRECT MEMORY KEYS

You can store direct memory numbers (M1 to M4) in the handset. Then, you can dial them directly fromidle mode using the Photodect295.

7.1 Set Direct Memory Keys in Handset

- 1. Press LEFT SOFTKEY

 and

 A/▼ to select DIRECT MEM.
- Press LEFT SOFTKEY
 and ▲/▼ to select the memory key to edit (M1 to M4).
- Press LEFT SOFTKEY and enter a new number or edit the number stored already.
- 4. Press **LEFT SOFTKEY to** confirm.

8 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

8.1 Clock Settings

You will need to set the correct date and time so that you know when you received answering machine messages or call list entries.

Using the handset:

8.1.1 Set the Date Format

- Press MENU/OK and ▲/▼ to select DATE & TIME.
- Press to show DATEFORMAT.
- Press sto confirm.

8.1.2 Set the Time Format

- Press MENU/OK and I to select DATE to select DATE to select DATE to select DATE.
- Press and to select TIMEFORMAT.
- Press to confirm.

8.1.3 Set the Time

- Press MENU/OK and ▲ /▼ to select DATE & TIME.
- Press and for to select SET TIME.
- 3. Press and enter the time information. The time entered will be in the format you set in section 8.1.1.
- Press sto confirm.

NOTE:

If time has been set before, the current time w ill display, otherw ise, "HH--MM" w ill be displayed.

8.1.4 Set the Date

- Press MENU/OK and ▲/▼ to select DATE & TIME.
- Press sand ▲/▼ to select SET DATE.
- 3. Press 🖘 and enter the date information. The date entered will be in the format you set in section 8.1.2.
- Press sto confirm.

NOTE:

If date has been set before, the current date will display, otherwise, "DD--MM--YY" will be displayed.

Using the base:

The format for the date is YYYY-MM-DD, and the time is HH:MM in either 12-hour or 24-hour format.

- Press MENU/OK and ▲/▼ to select DATE & TIME.
- Press MENU/OK to show TIMEFORMAT. Select this if you want to change betw een 12-hour and 24-hour formats. Otherwise, press ▲ /▼ to show SET CLOCK.
- Press MENU/OK to confirm and the 4-digit year is displayed. Last two digits of the year will flash to ask for year input.
- Press ▲▼ to set the year.
- 5. Press MENU/OK and the month field will flash to ask for month input.
- Press ▲/▼ to set the month.
- 7. Press **M ENU/OK** and the date field will flash to ask for date input.
- 8. Press **▲** ▼ to set the date.
- 9. Press **M ENU/OK** to and the hour field will flash to ask for hour input.
- Press ▲▼ to set the hour.
- 11. Press **M ENU/OK** and the minutes field will flash to ask for minutes input.
- 12. Press ▲▼ to set the minutes.
- 13. Press **M ENU/OK** to confirm and you will hear a beep with the display back to previous menu.

8.2 Alarm Settings (Handset only)

You can use this phone to set an alarm clock. When an alarm is set, the displays on the screen. When the alarm time is reached, the diam and "ALARMON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes.

NOTES:

- Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- b. The alarm volume level is the same as the settings of the handset ringer volume.
 If the handset ringer is set to OFF, the alarm still sounds at VOLUME 1 level.
- c. During an external call or an internal call, if an alarm is set and when the alarm time is reached, the and "ALARMON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold to disable the alarm, it will revert to the call duration screen.
- d. During paging or ringing, the alarm will not sound when the alarm time is reached. How ever, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it's not ringing or in paging mode at the end of the snooze period.

8.2.1 Turn on/off the Alarm

- Press MENU/OK (and ▲/▼ to select ALARM.
- Press sto confirm.

NOTE:

If ON is selected, you are prompted to set the alarm time.

8.2.2 Set the Alarm Time (if the Alarm is set to be ON)

- 1. Follow Steps 1 to 3 in section 8.2.1.
- 2. Enter the alarm time.
- 3. Press **MENU/OK** . You will be prompt to set the snooze function.
- Press sto confirm.

8.3 Handset Settings

8.3.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your internal ringer. A total of 10 melodies are provided for your selection.

- Press MENU/OK (and A/▼ to select HS SETTINGS.
- 2. Press (■) and △/▼ to select RING SETUP.
- Press (■) and ▲/▼ to select INT RING.

NOTE:

The respective ringer melody will be played while you are brow sing the melody list.

Press (s) to confirm.

8.3.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your external ringer. A total of 10 melodies are provided for your selection.

- Press MENU/OK and ▲/▼ to select HS SETTINGS.
- Press
 and
 to select EXT RING.
- Press
 and
 To select the desired ringer melody for setting ringer melody for external calls.

NOTE:

The respective ringer melody will be played while you are brow sing the melody list.

5. Press sto confirm.

8.3.3 Set the Ringer Volume

You can set the ringer volume level. A total of 6 ringer volume levels including VOLUME OFF are provided for your selection.

- Press MENU/OK and IT to select HS SETTINGS.
- Press and to select RING SETUP.
- Press and ▲/▼ to select RING VOLUME.
- Press
 and
 are to select the desired ringer volume.

NOTE:

- The respective ringer volume will be played during your selection.
- If OFF is selected, 🔰 will be displayed on the handset screen.
- Press sto confirm.

8.3.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

- Press MENU/OK and ▲/▼ to select HS SETTINGS.
- Press MENU/OK and ▲/▼ to select TONE SETUP.
- Press M ENU/OK and ▲/▼ to select KEY TONE / BATTERY TONE OUT OF RANGE.
- 4. Press MENU/OK and △/▼ to select ON or OFF.
- 5. Press MENU/OK to confirm.

8.3.5 Select Base

If you have registered the handset to more than one base, you can select any one of them to use with your handset.

- 1. Press MENU/OK and ▲/▼ to select HS SETTINGS.
- Press MENU/OK and ▲/▼ to select SELECT BASE.
- 3. Press M ENU/OK and ▲/▼ to select the desired base with which your handset operates.
- Press MENU/OK to confirm.

8.3.6 Set the Handset Language

You can choose the language to be displayed on the handset screen from a total of 7 languages English, Français, Dutch, Italiano, Deutsch, Espanol and Pyccknn.

- Press LEFT SOFTKEY
 and ▲/▼ to select HS SETTINGS.
- 3. Press **LEFT SOFTKEY ■** and **△/▼** to select your desired language.
- 4. Press **LEFT SOFTKEY (** to confirm.

8.3.7 Rename the Handset

- Press MENU/OK and I to select HS SETTINGS.
- 3. Press and enter the name of your handset.
- 4. Press (sto confirm.

8.3.8 Choose the Information to be displayed in Idle

You can choose to display time or handset name in your idle screen.

- Press MENU/OK and ▲/▼ to select HS SETTINGS.
- 2. Press
 and
 To select HS DISPLAY.
- 3. Press
 and
 To select HANDSET NAME or TIME.
- 4. Press (to confirm.

8.3.9 Set the Auto Answer

If you turn on the Auto Answer, you can answer a call by lifting the cordless handset from the charging cradle or base without pressing any key.

- 1. Press MENU/OK
 and ▲/▼ to select HS SETTINGS.
- Press
 and
 and
 to select AUTO ANSWER.
- 4. Press (to confirm.

8.4 Base Settings using the Handset

8.4.1 Set the Ringer Melody

You can set special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.

- Press MENU/OK and ▲/▼ to select BS SETTINGS.
- Press (and A/▼ to select BS RINGER.
- Press
 and
 are to select the desired ringer melody.
- 4. Press (to confirm.

8.4.2 Set the Ringer Volume

You can set the base ringer volume level. A total of 6 ringer volume levels including **VOLUME OFF** are provided for your selection.

- Press MENU/OK and ▲/▼ to select BS SETTINGS.
- 2. Press
 and
 ▼ to select RING VOLUME.
- Press
 and
 are to select the desired volume level.
- Press sto confirm.

NOTE:

The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected, **>** icon will display.

8.4.3 De-register a Handset

You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The Υ on the de-registered handset will be off.

NOTE:

You cannot de-register the handset that you are currently using.

- Press MENU/OK
 and
 A/▼ to select BS SETTINGS.
- Press and you are requested to enter the 4-digit system PIN.
- 4. Enter the 4-digit system PIN (0000 by default).
- 5. Press and a list of registered handsets will be displayed.
- Press ▲/▼ to select one of the handsets that you w ant to de-register.
- Press sto confirm.

8.4.4 Set the Dial Mode

The default dial mode is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

- Press MENU/OK
 and
 A ▼ to select BS SETTINGS.
- 3. Press and ▲ ▼ to select your desired dial mode (TONE or PULSE).
- 4. Press (to confirm.

8.4.5 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

- Press MENU/OK
 and
 A/▼ to select BS SETTINGS.
- Press
 and
 To select your desired flash time (SHORT=100ms, MEDIUM=300ms, LONG=600ms).
- Press (s) to confirm.

8.4.6 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN is 0000.

- Press MENU/OK
 and ▲/▼ to select BS SETTINGS.
- Press
 and
 To select CHANGE PIN.
- 3. Press and you are requested to enter the 4-digit system PIN.
- Press and enter the old system PIN.
- 5. Press and you are requested to enter the new 4-digit system PIN.
- 6. Press and enter the new system PIN.
- 7. Press and you are requested to confirm the new 4-digit system PIN
- 8. Press and enter the new system PIN again.

NOTE:

If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

Press sto confirm the setting.

8.5 Base Settings using the Base

8.5.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your base internal ringer. A total of 10 melodies are provided for your selection.

- Press MENU/OK and ▲/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select RING SETUP.
- Press M ENU/OK and ▲/▼ to select INT. RING.
- 4. Press **MENU/OK** and the display will show MELODY.
- 5. Press MENU/OK and ▲/▼ to select the desired ringer melody for internal calls.
- 6. Press MENU/OK to confirm.

NOTE:

The respective ringer melody will be played during your selection.

8.5.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your base external ringer. A total of 10 melodies are provided for your selection.

- Press MENU/OK and ▲/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select RING SETUP.
- Press MENU/OK and ▲/▼ to select EXT. RING.
- Press MENU/OK and the display will show MELODY.
- 5. Press M ENU/OK and ▲/▼ to select the desired ringer melody for external calls.
- 6. Press MENU/OK to confirm.

8.5.3 Set the Ringer Volume

You can adjust the volume level of the ringer for internal call (INT RING) and external call (EXT RING) separately, with settings from 1 (the quietest) to 5 (loudest), or set it to VOLUME OFF.

- 1. Follow steps from 1 to 3 in section 8.5.1 and 8.5.2.
- Press MENU/OK and ▲/▼ to select VOLUME.
- Press MENU/OK and ▲/▼ to select the desired volume level list.
- Press M ENU/OK to confirm.

NOTE:

The respective ringer volume will be played during your selection. If VOLUME OFF is selected,

icon will display.

8.5.4 De-register a Handset

You will need to enter the 4-digit system PIN code in order to de-register a handset from the base station. (The default PIN is 0000.)

- Press MENU/OK and ▲/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select DELETE HS.
- 3. Press MENU/OK and you are requested to enter the 4-digit system PIN.
- 4. Enter the 4-digit system PIN.
- 5. Press MENU/OK and a list of registered handsets is displayed.
- 6. Press ▲/▼ to select one of the handsets that you want to de-register.
- 7. Press MENU/OK to confirm.

8.5.5 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

- 1. Press MENU/OK and ▲/▼ to select SETTINGS.
- 2. Press MENU/OK and ▲/▼ to select FLASH TIME.
- 5. Press MENU/OK and ▲/▼ to select the desired flash time (SHORT=100ms,
- 3. **MEDIUM**=300ms, **LONG**=600ms).
- Press M ENU/OK to confirm.

8.5.6 Set the Dial Mode

The default dial mode is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

- Press MENU/OK and A/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select DIAL MODE.
- 3. Press MENU/OK and ▲/▼ to select the desired dial mode (TONE or PULSE).
- Press M ENU/OK to confirm.

8.5.7 Set the Key Tone

The key tone is a confirmation beep when you press any key. It is set on by default, but can be turned off, if desired.

- Press M ENU/OK and A/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select KEY TONE.
- 3. Press MENU/OK and ▲/▼ to select ON or OFF.
- 4. Press MENU/OK to confirm.

8.5.8 Change the System PIN

- Press M ENU/OK and ▲/▼ to select SETTINGS.
- Press MENU/OK and ▲/▼ to select CHANGE PIN.
- 3. Press MENU/OK and you are requested to enter the 4-digit system PIN.
- 4. Enter the old system PIN.
- 5. Press MENU/OK and enter the new system PIN.
- Press MENU/OK and enter the new system PIN again.
- 7. Press MENU/OK to confirm.

8.5.9 Set the Memory Keys

There are three photo speed dial memory keys 1, 2, and 3 and 1 speed dial memory key M4 on the right side of the telephone base for you to store frequent use numbers.

After a number is stored in any of these memory keys, you can simply press once on one of these memory keys to dial out to the number stored in it directly.


Using the base:


- 1. In idle mode, enter the telephone number you want to store.
- 2. <u>Press and hold</u> any of the memory keys until you hear the confirmation tone to indicate the number has been stored.

To insert a photo:

You can insert a desired photo into the compartment of the three photo speed dial memory keys 1, 2, and 3, or write the contact name on the photo speed dial card.

 - 1. Crop your desired photo to the size as indicated below.
- Put the cropped photo into the photo speed dial compartment. Then flip down the photo speed dial compartment cover.

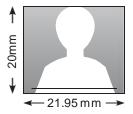

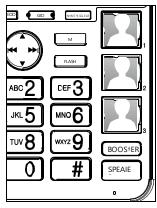

8.6 Registration

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.

If for some reason, the handset is not registered to the base station (T flashes even when the handset is near the base station), register your handset according to the following procedure.

On the cordless handset:

- Press MENU/OK (and A/▼ to select REGISTRATION.
- If you have more than one base, press = and ▲ ▼ to select the base number from BASE 1, BASE 2, BASE 3 and BASE 4. There will be a ★ behind the current registered base number.
- 3. Press to display "PIN?", enter the 4-digit system PIN for the base (default PIN is 0000).
- 4. Press and the display will show "WAITING".
- At the same time, press MENU/OK and ▲/▼ on the base to select REGISTRATION.
- Press MENU/OK to see "PLEASE WAIT" flashing on the base display. After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.
- 7. Press INT/MUTE/CLEAR at any time to cancel.

8.7 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook list remains unchanged.

Using a handset:

- 1. Press MENU/OK
 and
 To select DEFAULT.
- Press = and you are requested to enter the 4-digit system PIN.
- 3. Enter the 4-digit system PIN (default PIN is 0000).
- Press sto confirm.
- Press to re-confirm.

Using the base:

You can reset all of your base settings to their default settings. After a reset, all your personal base settings, call list entries, redial list entries and answering messages will be deleted.

- Press MENU/OK and ▲/▼ to select SETTINGS.Press MENU/OK and / to select BS DEFAULT.
- 2. Press MENU/OK and you are requested to enter the 4-digit system PIN.
- 3. Enter the 4-digit system PIN (default PIN is 0000).
- 4. Press MENU/OK to confirm.

9 ANSWERING MACHINE

Your telephone base includes a telephone answ ering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

9.1 Switching Answering Machine On/Off

Using a handset:

- Press MENU/OK
 and ▲/▼ to select ANS. MACHINE.
- Press (s) and ▲/▼ to select TAM ONOFF.
- Press (s) and ▲/▼ to select ON or OFF.
- 4. Press (to confirm.

Using the base direct key:

You can sw itch on / sw itch off the TAMfunction by pressing ANS ONOFF.

Using the base menu:

Alternatively, you can switch the TAMon or off using the base menu.

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to go to TAM ON/OFF.
- 3. Press MENU/OK and ▲/▼ to select ON or OFF.
- 4. Press MENU/OK to confirm.

9.2 Play Messages on TAM

If you have new messages, the display will show e.g. 02/05 MSGS, which means you have 2 new message out of total 5 messages. New messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.

Using the handset:

- Press MENU/OK and to select ANS. MACHINE.
- Press sto show MSG PLAYBACK.
- Press again to start message playback and the screen displays the date of the message received.
- During message playback, press ▲/▼ to adjust the message playback volume respectively.

NOTE:

After new message is played, the new message will be saved as an old message automatically unless it is deleted.

- - STOP: Stop the current message playback and return to the ANS. MACHINE menu.
 - FORWARD: Skip to play the next message. The date information of the next message will display if there is next message.
 - PREVIOUS: Skip to repeat playing the current message from the beginning.
 The date information of the current message will display.
 - **DELETE:** Delete the current message and the next message will be played.
- 6. Press to confirm the setting.

NOTE:

Alternatively, you can use the following shortcut keys to control different operation during message playback.

- Press 5 to stop message playback.
- Press 4 to skip to repeat playing the current message from the beginning. Press
 4 tw ice to skip backward to the previous message.
- · Press 6 to skip to play next message.
- Press 2 to delete the current message playback.
- Press ▲/▼ to adjust the playback volume.
- Press ■) to turn the speakerphone on or off.

Using the base direct key:

In idle:

- 1. Press PLAY/STOP to listen to messages and memos.
- 2. Press PLAY/STOP if you want to stop the playback.
- 4. Press ▶ if you want to skip forward to the next message during message playback.
- 5. Press **DELETE** if you want to delete the current message being played.

Using the base menu:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK to show MSG PLAYBACK.
- 3. Press MENU/OK to start playing back the messages from speakerphone.

9.3 Delete all Messages on TAM

Using the handset menu:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press (and ▲/▼ to select DELETE ALL.
- 3. Press 📆.
- 4. Press again to confirm delete all old messages.

Using the base menu:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- 2. Press MENU/OK and ▲/▼ to select DELETE ALL.
- 3. Press MENU/OK.
- 4. Press **MENU/OK** again to confirm delete all old messages.

Using the base direct key:

Press and hold DELETE to delete all the old messages.

NOTE:

You cannot delete new messages, so you will have to play them before trying to delete.

9.4 Record Memos on TAM

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

Using a handset:

- 3. Press = to start memo recording and "RECORDING" will be displayed.
- 4. Press to stop memo recording and save the memo.

OR

Press CANCEL/MUTE to stop memo recording w ithout saving and go back to TAM menu.

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select MEMO.
- Press MENU/OK to start recording the memo, and "RECORDING" is shown on the display.
- 4. Press MENU/OK to save and end your memo recording. The new memo will then play back automatically. Let it play to the end or press MENU/OK again to stop the playback. Or press INT/MUTE/CLEAR at any time to stop the memo without saving it.

9.5 Answering Machine Settings

9.5.1 Set the Answer Mode

By default, the answer machine is set in ANS&REC mode which allow scallers to leave a message. This mode can be changed to ANSONLY which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

You can select ANS & REC or ANSWER ONLY for the answering machine.

Using a handset:

- 1. Press MENU/OK (■) and △/▼ to select ANS. MACHINE.
- Press
 and
 A/▼ to select TAM SETTINGS.
- Press and To select ANSWER MODE.
- Press
 and
 are to select ANS & REC or ANSWER ONLY.
- 5. Press to confirm.

Using the base:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- 3. Press MENU/OK to show ANSWER MODE.
- Press MENU/OK and ▲/▼ to select ANS & REC or ANSWER ONLY.
- 5. Press MENU/OK to confirm.

9.5.2 Set the TAM Language

You can choose the voice prompt language of the answering machine from a total of 3 languages.

Using a handset:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press
 and
 ▼to select TAM SETTINGS.
- Press
 and
 and
 to select the desired voice prompt language for the answering machine.
- 5. Press sto confirm

- Press MENU/OK and ▲/▼ to select ANS, MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select TAM LANGUAGE.
- Press M ENU/OK and ▲/▼ to select the desired voice prompt language for the answering machine.
- 5. Press MENU/OK to confirm

9.5.3 Record your Outgoing Message (OGM)

You can record your own OGM for ANS & REC mode or ANSWER ONLY mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

Using a handset:

- Press MENU/OK (and A/▼ to select ANS. MACHINE.
- Press (and I very to select TAM SETTINGS.
- 3. Press (■) and ▲/▼to select OGM SETTINGS.
- Press (and a/ ▼ to select ANS & REC or ANSWER ONLY.
- Press and To select RECORD MSG.
- Press to start recording your personalized OGM and "RECORD'G" will be displayed on the screen.
- Press to stop and save your personalized OGM. Your newly saved OGM will play
 automatically. Alternatively, press CANCEL/MUTE to return to previous screen
 without saving the personalized OGM.

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select OGM SETTINGS.
- 4. Press MENU/OK and ▲/▼ to select ANS & REC or ANSWER ONLY.
- Press MENU/OK and ▲/▼ to select RECORD.
- Press MENU/OK to start recording your personalized OGM and "RECORDING" is displayed on the screen.
- Press MENU/OK to stop and save your personalized OGM. Your new saved OGM
 will playback automatically. Alternatively, press INT/MUTE/CLEAR to return to
 previous screen without saving the personalized OGM.

9.5.4 Playback the Outgoing Message (OGM)

Using a handset:

- 1. Press MENU/OK → and △/▼ to select ANS. MACHINE.
- Press and to select TAM SETTINGS.
- Press and I to select OGM SETTINGS.
- 4. Press (■) and ▲/▼ to select ANS & REC or ANSWER ONLY.
- Press (■) and ▲/▼ to select PLAYBACK.
- 6. Press to play your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING OGM" will be displayed on the screen.
- 7. Press to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM will be played.

Using the base direct key:

Press

◆ briefly to listen to the current OGM (ANS & REC or ANSWER ONLY).

Using the base menu:

- 1. Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- 3. Press MENU/OK and ▲/▼ to select OGM SETTING.
- Press MENU/OK and ▲/▼ to select ANS & REC or ANSWER ONLY.
- 5. Press MENU/OK and ▲/▼ to select PLAYBACK.
- Press MENU/OK to playback your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING OGM" is displayed on the screen.
- 7. Press **M ENU/OK** to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM $\mbox{\it w}$ ill be played.

9.5.5 Delete a Personalized OGM (SET OGM to DEFAULT)

Using a handset:

- 1. Repeat Steps 1 to 6 in the section of Playback the Outgoing Message (OGM).
- Press CANCEL/MUTE to delete your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

NOTE:

If pre-set OGM is playing, you are not allow ed to delete the pre-set OGM.

Using the base:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select OGM SETTING.
- Press MENU/OK and ▲/▼ to select ANS & REC or ANSWER ONLY.
- Press MENU/OK and ▲/▼ to select DEFAULT.
- 6. Press **MENU/OK** and enter the 4-digit system PIN (default PIN is 0000).
- Press M ENU/OK to confirm.

9.5.6 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered - then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

Using a handset:

- Press
 and
 I vo select ANSWER DELAY (Available options: 2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS or TIME SAVER).
- 5. Press to confirm.

- Press MENU/OK and A/▼ to select ANS, MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select ANSWER DELAY.
- Scroll MENU/OK and ▲/▼ to select the desired answer delay.
- Press M ENU/OK to confirm.

9.5.7 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

Using a handset:

- Press MENU/OK (and A / v to select ANS, MACHINE.
- Press (and to select TAM SETTINGS.
- Press (and to select RECORD TIME.
- Press and to select your desired recording time (Available options:
 60S, 120S, 180S, or UNLIMITED).
- Press (s) to confirm.

Using the base:

- Press MENU/OK and ▲ ▼ to select ANS. MACHINE.
- Press MENU/OK and ★ to select TAM SETTINGS.
- 3. Press MENU/OK and ▲ /▼ to select RECORD TIME.
- Press M ENU/OK and ▲ ★ to select your desired recording time.
- 5. Press MENU/OK to confirm.

9.5.8 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base. When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answerdelay.

Using a handset:

- Press MENU/OK
 and
 To select ANS. MACHINE.
- Press
 and
 to select TAM SETTINGS.
- Press
 and
 To select BS SCREENING.
- Press sand ▼ to select ON or OFF.
- 5. Press sto confirm.

- Press MENU/OK and ▼ to select TAM SETTINGS.
- Press M ENU/OK and ▲ ▼ to select BS SCREENING.
- 5. Press MENU/OK to confirm.

9.5.9 Change the Compression Rate

Three different compression rates (HIGH, MID and LOW) are provided for you to select different quality levels of recording incoming message. The low er the compression rate, the higher the recording quality level attained, but the shorter the total recording time available.

Using a handset:

- Press MENU/OK and To select ANS. MACHINE.
- Press
 and
 √▼ to select COMPRESSION (Available options: HIGH, M EDIUM, or LOW).
- 5. Press sto confirm.

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select COMPRESSION (Available options: HIGH, MEDIUM, or LOW).
- 3. Press MENU/OK and ▲/▼ to select your desired compression rate.
- Press MENU/OK to confirm.

9.5.10 Activate Remote Access

Your phone lets you check your messages, or otherw ise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.

9.5.10.1 Change the 4-Digit Remote Access PIN

Using a handset:

- Press MENU/OK and To select ANS. MACHINE.
- Press (■) and ▲/▼ to select TAM SETTINGS.
- Press (and I visite of a select CHANGE PIN.)
- 4. Press (a) twice to enter the old PIN (default remote access PIN is 0000).
- 5. Press twice to enter the new 4-digit PIN.
- 6. Press twice to enter the new 4-digit PIN again.

NOTE:

If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.

7. Press (to reconfirm.

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select CHANGE PIN.
- 4. Press **M ENU/OK** and enter the old PIN (default remote access PIN is 0000).
- 5. Press **MENU/OK** and enter your new 4-digit PIN.
- 6. Press MENU/OK and enter your new 4-digit PIN again.
- 7. Press MENU/OK to confirm.

9.5.10.2 Activate or Deactivate the Remote access

Using a handset:

- 1. Press MENU/OK (■) and ▲/▼ to select ANS. MACHINE.
- Press (and A/▼ to select TAM SETTINGS.
- Press and to select REMOTE ACC.
- Press
 and
 a/▼ to select ON or OFF to turn on or off the remote access respectively.
- Press (s) to confirm.

Using the base:

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select REMOTE ACC.
- Press M ENU/OK and ▲/▼ to select ON or OFF to turn on or off the remote access respectively.
- Press MENU/OK to confirm.

9.5.10.3 Reset TAM to Default Settings

- Press MENU/OK and ▲/▼ to select ANS. MACHINE.
- Press MENU/OK and ▲/▼ to select TAM SETTINGS.
- Press MENU/OK and ▲/▼ to select TAM DEFAULT.
- 4. Press **M ENU/OK** and then enter the correct system PIN (default PIN is 0000).
- 5. Press MENU/OK to restore the TAM settings to default.

9.5.10.4 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

- 1. Place a call from a tone-dialing phone.
- 2. When the answering machine answers the call and starts playing OGM, press X.
- 3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
- 4. Press the following keys to carry out your desired function.

Keys	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press tw ice to skip backw ard to the previous message.
5	Play the message	
6		Skip forward to play the next message
7	Turn on the answering machine	
8		Stop the current message playback
9	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

NOTE:

 When your answering machine memory is full and the answer mode is in ANS & RECORD, the answer mode will change to ANSWER ONLY automatically.
 It will change to ANS & RECORD mode automatically after some messages have been deleted.

10. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem Solutions	
Problem My telephone does not work at all.	 Make sure the battery is installed and charged correctly. For optimum daily performance, return the handset to the telephone base after use. Make sure the pow er adapter is securely plugged into an outlet not controlled by a w all switch. Make sure the telephone line cord is plugged firmly into the telephone base and the telephone w all jack. Unplug the electrical pow er to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize. Remove and re-insert the battery. If that still does not w ork, it might be necessary to purchase a new battery.
	Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Call your telephone service provider.
Low battery shows on screen.	 Place the handset in the telephone base for recharging. Remove and re-install the battery and use it until fully depleted, then recharge the handset in the telephone base. If the above measures do not solve the problem, replace the battery.
The battery do not charge in the handset or the handset battery do not accept charge.	 Make sure the handset is placed in the telephone base correctly. Remove and reinstall the battery, then charge for up to 16 hours. Purchase a new battery.

There is interference during a telephone conversation. My calls fade out when I am using the handset.

- The handset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference
- Try moving the appliance or telephone base to another outlet.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far aw ay as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone w all jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the w iring or telephone service.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service.
- Contact your telephone service provider (charges may apply).

Common to cure for to electronic requipment.

If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed):

- Disconnect the pow er to the telephone base.
- · Disconnect the battery on the handset.
- Wait a few minutes before connecting power to the telephone base.
- Re-install the battery and place the handset in the telephone base.
- · Wait for the handset to synchronize with the telephone base.

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

Please contact the technical support of the network provider for further information.

11. TECHNICAL SPECIFICATIONS

Basic Information		
Handset Valid range	Indoor: 50m *	
	Outdoor: 300m *	
Handset Operating Time	Standby time: 100Hours approx. **	
	Talk time: 10Hours approx.**	
RF Parameter		
Frequency	1.88GHz to 1.9GHz	
Number of Channels	10	
Pow er Supply		
Base	Input 100-240V 50/60Hz; output 6V; 450mA adapter	
Handset Charger	Input 100-240V 50/60Hz; output 6V; 450mA adapter	
Handset	2.4V; 500mAH rechargeable battery pack	

^{*} Values may vary according to environment.

^{**} Depending on initial battery charge.

12. CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you must treat
 it with care.
- · Avoid rough treatment.
- Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

 You can damage your telephone if it gets w et. Do not use the handset in the rain, or handle it w ith wet hands. Do not install the telephone base near a sink, bathtub or show er.

Electrical storms

 Electrical storms can sometimes cause pow er surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
- Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS.

13. GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our w ebsite at **www.geemarc.com**.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in now ay limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

14. DECLARATIONS:

CE Directives
Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 2014/53/UE.

The CE declaration of conformity may be consulted at www.geemarc.com

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our w ebsite at <u>www.geemarc.com</u> telephone 01707 387602 or fax 01707 832529





UG COMBI DECT295_En_v0.1

geemarc™ UNITED KINGDOM

5B Swallow Court Swallowfields Welwyn Garden City Hertfordshire, AL7 1SB For product support: 01707-387602

www.geemarc.com