

swissvoice

Xtra 3155




USER MANUAL

QUICK SETUP

1. Set Language


After first time power up, LANGUAGE? will appear on the screen.

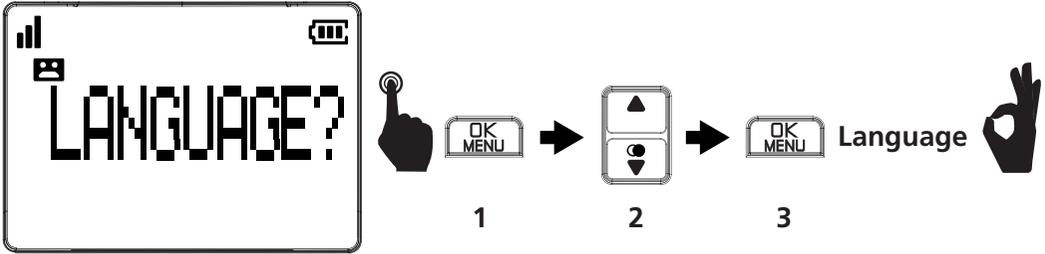

1. Press **OK** on the handset.
2. Press **▲** or **▼** to select the desired language.
3. Press **OK**. You hear confirmation tones and **OK** will appear on the screen.
(For Duo or Trio version, you just set 1 of handsets, the other handset(s) will be changed accordingly)

2. Set Date & Time

1. Input Date, Time directly.

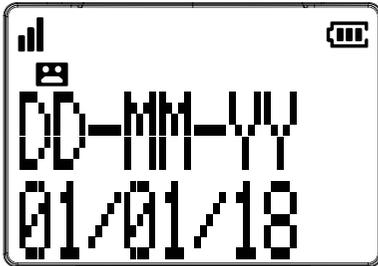

OR

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **DATE&TIME**, then press **OK**.
4. Press **▲** or **▼** to select **SET DATE**, then press **OK**, Input the day, month, year, then press **OK**, input hour (24HR format), and minutes, then press **OK**, You hear confirmation tones.

Note: if digit is input wrong during input Date or Time, you can press **▲** or **▼** to select the right position and input correct digit.

Package Contents of Xtra 3155

The package contains the following items:

- 1) Cordless handset
- 2) Cordless handset charger
- 3) Combo base unit
- 4) Combo Handset unit
- 5) Coil Cord
- 6) AC power adaptors (1 for combo base unit and 1 for cordless handset charger)
- 7) Telephone line cord
- 8) Telephone plug convertor (optional)
- 9) 3pcs of AAA 500mAh NiMH rechargeable batteries
- 10) User Guides
- 11) 8 pcs of spare transparent photo covers

The additional duo and trio package contains the following items:

- 1) Cordless Handset(s)
- 2) Cordless handset charger(s)
- 3) Mains power adapter(s)
- 4) AAA 500mAh NiMH rechargeable batteries

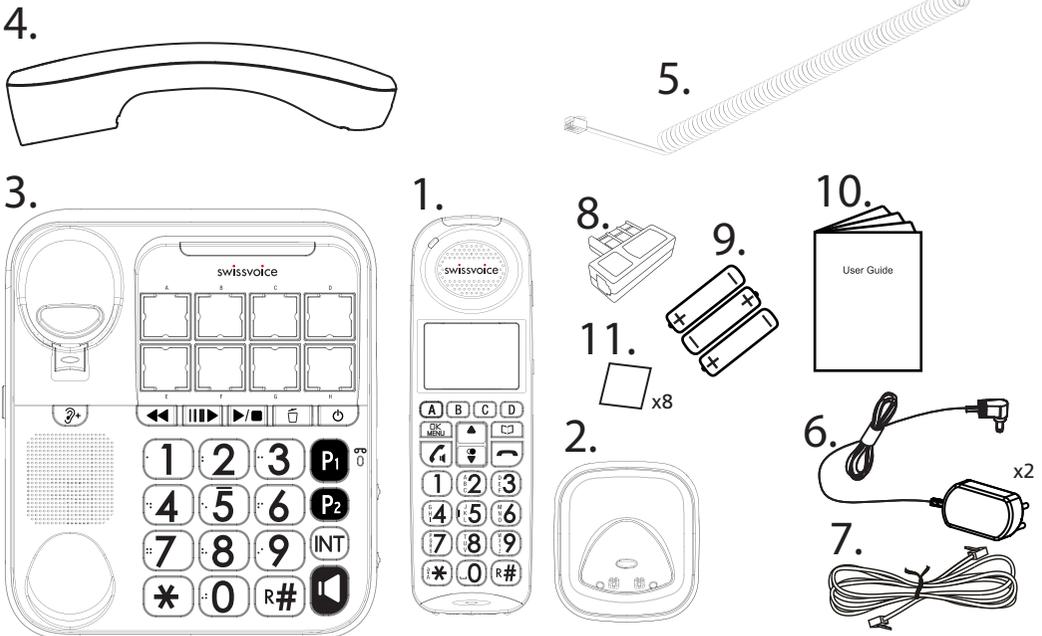


Table of contents

1.	IMPORTANT SAFETY INSTRUCTIONS	5
2.	POWER FAIL BACK-UP	6
3.	LOCATION	6
4.	INSTALLING YOUR PHONE	7
4.1.	Installing and Charging the Batteries	7
4.2.	Connecting the Base Station	8
4.3.	Connecting the Charger	9
5.	GETTING TO KNOW YOUR PHONE	10
5.1.	Handset Overview	10
5.2.	Base station Overview	13
5.3.	Display Icons and Symbols of LCD	16
6.	MENU TREE	17
7.	USING YOUR PHONE	20
7.1.	Set Date & Time and Language	20
7.1.1.	Set Date & Time	20
7.1.2.	Change language	20
7.2.	Make, Answer, End a Call	20
7.2.1.	Make a Call	20
7.2.1.1.	Preparatory Dialing	20
7.2.1.2.	Direct Dialing	21
7.2.1.3.	A, B, C,... or H key Dialing	21
7.2.1.4.	Speed dial key Dialing(Key 1 to Key 9)	21
7.2.2.	Answer a Call	21
7.2.3.	End a Call	21
7.3.	Set Photo A, B, C,... or H key memories	22
7.3.1.	Through handset	22
7.3.1.1.	Input number and name	22
7.3.1.2.	Record your own voice tag	22
7.3.1.3.	Play Voice tag	22
7.3.1.4.	Delete Vocie tag	23
7.3.1.5.	View record of Photo memory	23
7.3.1.6.	Edit record of Photo memory	23
7.3.2.	Through combo base	23
7.3.2.1.	Input number	23
7.3.2.2.	Record your own voice tag	23
7.4.	Adjust Earpiece and Handsfree Volume	24
7.5	Audio Boost	24
7.6	Equalizer	24
7.7	Redial	25

8.	PHONE SETTINGS	25
8.1.	Set Ringer Melody and Volume	25
8.2.	Set Alert Tone	26
8.3.	Set Date and Time Format	26
8.4.	Talking Digit	26
8.5.	Change the Flash Time	27
8.6.	Reset Your Phone	27
8.7.	Registration	27
8.8.	Find the Handset	27
8.9.	Conference call	28
8.10.	Transfer a call	28
8.11.	Intercom	29
8.11.1.	Intercom initiated from cordless handset:	29
8.11.2.	Intercom initiated from base	29
8.12.	Answer a Call	29
8.13.	Forced Ringer	30
8.14.	ECO MODE	30
9.	CALLER DISPLAY (Network dependent)	30
9.1.	View the call list	31
9.2.	Store a Call list Number into the Phonebook	31
9.3.	Store a Call list Number into the Black List	31
9.4.	Delete an entry in the call list	31
9.5.	Delete all entries in the call list	31
9.6.	Call waiting	32
9.6.1.	Using handset or speaker mode from the handset	32
9.6.2.	Using handset or speaker mode from the combo base	32
9.7.	Voice Mail (Network Dependent)	32
10.	PHONEBOOK	32
10.1.	Add a new phonebook entry	32
10.2.	View a phonebook entry	33
10.3.	Search a phonebook entry	33
10.4.	Edit a phonebook entry	33
10.5.	Store phonebook in speed dial	33
10.6.	Delete a phonebook entry	33
10.7.	Add to speed dial key	34
10.8.	Status of phonebook	34
11.	SPEED DIAL KEYS (Key 1 to Key 9)	34
11.1.	Store a speed dial entry	34
11.2.	View a speed dial entry	34
11.3.	Edit a speed dial entry	35
11.4.	Delete a speed dial entry	35

12.	BLACK LIST	35
12.1.	Store a black list entry	35
12.2.	View a black list entry	36
12.3.	Edit a black list entry	36
12.4.	Delete a black list entry	36
12.5.	Delete all black list entries	36
12.6.	Status of black list entry	36
13.	REMINDER	36
13.1.	Turn on alarm reminder, set time and frequency	37
13.2.	Select melody of the alarm reminder	37
13.3.	Rename the alarm reminder	37
13.4.	Record Voice memo of the alarm reminder	37
14.	ANSWERING MACHINE	38
14.1.	Turn on/off the answering machine	38
14.2.	Message Playback	38
14.3.	Delete Old Message in the Answering Machine	40
14.4.	Record a Memo	40
14.5.	Outgoing Message (OGM)	41
14.5.1.	Play your outgoing message (OGM)	41
14.5.2.	Record your own outgoing message (OGM)	41
14.5.3.	Delete your outgoing message (OGM)	41
14.6.	Answering Machine Settings	42
14.6.1.	Set Answer Delay	42
14.6.2.	Recording Time	42
14.6.3.	Call Screening	42
14.6.4.	Activate Remote Access	43
14.6.5.	Message Alert Tone	44
15	TECHNICAL SPECIFICATIONS	45
16	TROUBLESHOOTING	46
17	GUARANTEE	48
18	SAFETY	50
19	ENVIRONMENT	51

1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the followings:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning.
Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) **To avoid hearing damage, please make sure anyone who uses this product is aware that the product can produce loud sound when Audio boost function is on.**
- 5) Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- 6) Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
- 7) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 8) NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area.
- 9) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 10) **Use only the supplied NiMH (Nickel Metal Hydride) batteries!**
The operation periods for the handsets are only applicable with the default battery capacities.
- 11) **The use of other battery types or non-rechargeable batteries/ primary cells can be dangerous.** These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such noncompliance.
- 12) Do not use third party chargers. The batteries may be damaged.

- 13) Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

2. POWER FAIL BACK-UP

Lets you make calls during a mains power interruption with your phone.

During a mains power interruption, you can make use of **your combo base** only to make and receive your calls. Except basic calling functions, other functions (e.g. answering machine,..etc.) will not be working

Make a call

- Pick up combo handset, enter the telephone number or 1 of photo keys (number stored) to dial.

Answer a call

1. When the phone rings, pick up combo handset or press  on base.
2. To end the call, press .

Notes during power fail condition:

- The ringing sound from the base will be less loud as normal condition.
- Cordless handset is not working.

3. LOCATION

For maximum coverage and reduce the interference, here are some guidelines you should consider when you place the base unit,

- place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- avoid plugging it into the same circuit as other major household electrical appliances because of the potential for interference. Try moving the appliance or the base unit to another power outlet.


If the reception for a base unit location is not satisfactory, move it to another location for better reception.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors

4. INSTALLING YOUR PHONE

4.1. Installing and Charging the Batteries

- 1) Slide down to open the battery compartment cover.
- 2) Place the 3 supplied AAA-size NiMH rechargeable batteries as indicated. Pay extra attention to direction of polarity.

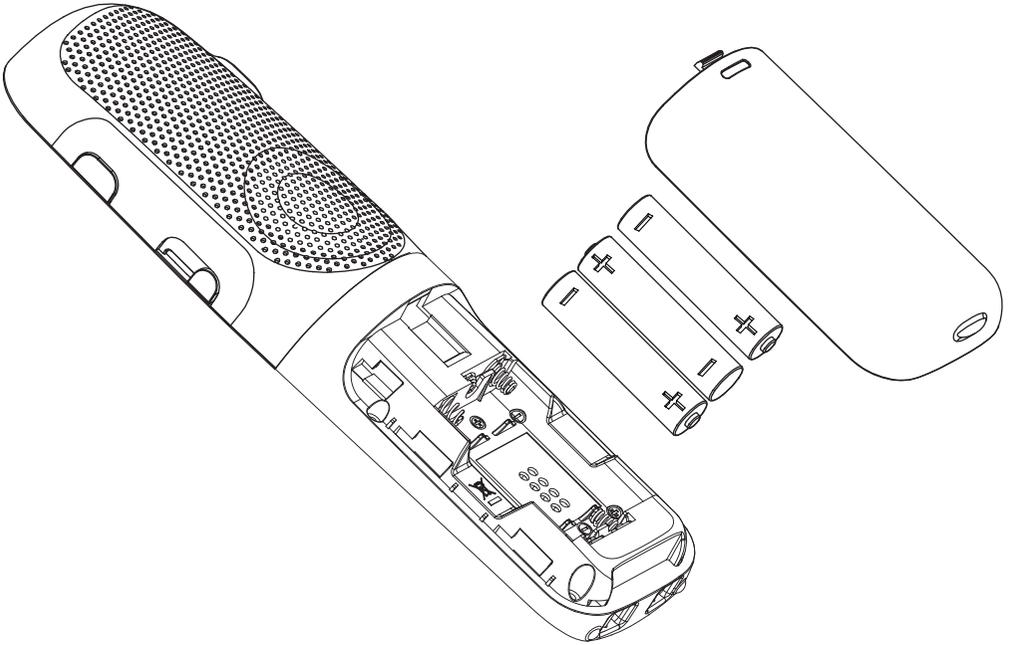


- 3) Slide the battery compartment cover back.
- 4) Put the handset on the base and charge for 15 hours before using the handset for the first time.

Notes:

- 1) Use only the supplied NiMH rechargeable batteries.
- 2) If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

4.2. Connecting the Base Station

- 1) Plug one end of the telephone line cord into the telephone jack on base bottom.
- 2) Plug the small end of power adapter into a power jack on base bottom.
- 3) Plug the large end of power adapter into a wall power outlet.
- 4) Plug the other end of the telephone line cord in to the telephone jack or micro-filter.
- 5) Always use the cables provided in the box.

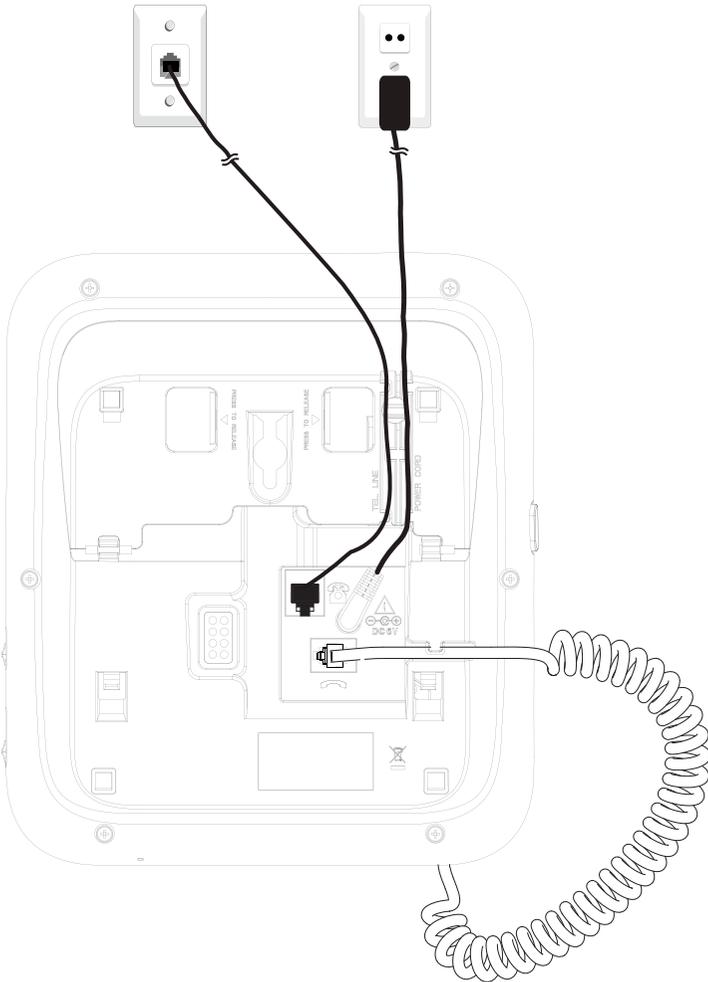

4.3. Connecting the Charger

Plug the power adapter into a mains socket.




If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

In a fixed with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.

5. GETTING TO KNOW YOUR PHONE

5.1. Handset Overview

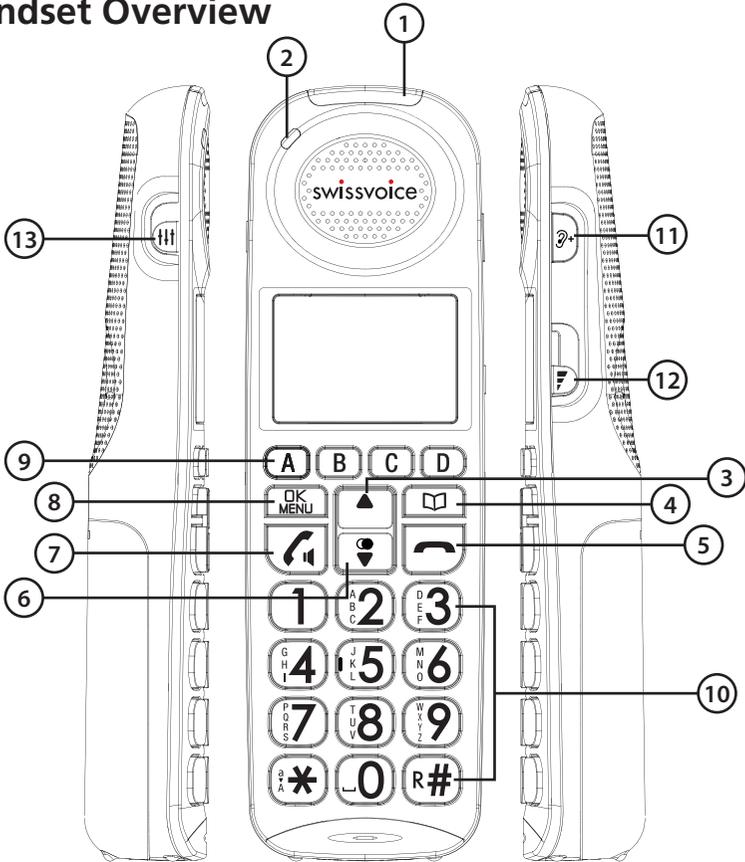

1 INCOMING CALL LIGHT

- Flashes when there is an incoming call/ the base is paging the handset.

2 CHARGE LIGHT

- On when the handset is charging in the charger or base.

3 ▲

- In menu mode: Press to scroll up the menu items.
- In ringing mode: Press to increase ringer volume of handset.
- While entering names or numbers in the phonebook: Press to move the cursor to the left.

4

- In idle mode: Press to access phonebook

5

- During a call: Press to end a call and go back to idle screen.
- **In editing/predialing mode: Press to clear a character/digit.**
- **In menu/editing mode: Press and hold to go back to idle screen.**
- In ringing: Press to suppress handset ringer.

6

- In menu mode: Press to scroll down the menu items.
- In idle mode: Press to access the redial list.
- In ringing mode: Press to decrease the ringer volume of handset.
- While entering names or numbers in the phonebook: Press to move the cursor to the right

7

- In idle/pre-dialing mode: Press to make a call.
- During ringing: Press to answer a call.
- During a call: Press to turn on/off the speakerphone

8 **OK** **MENU**

- Press to select a menu item.
- While in a menu: Press to select an item or save an entry or setting.

9 **A, B, C, D**

- Press to dial out phone number stored in memory A, B, C, or D.

10 **ALPHANUMERIC KEYPAD/ */ #**

- In idle / pre-dial / editing mode / during a call: Press to enter characters /numbers.
- Press any key to answer an incoming call.
- Press ***** to switch between upper case and lower case while entering characters.
- During a call: Press and hold **#** to answer an incoming call when you receive a call waiting alert*.

11

- Press to enhance the clarity and loudness through earpiece during a call.



 
Warning: The product may emit high volume of sound. Take Extra Care when you use audio boost key, recommend you to adjust suitable volume by setting minimum, and then turn on audio boost key.

12


- During a call: Press to increase the volume /decrease the volume.

13


- Sound experience: select "NATURAL", "BASS" or "TREBLE" during a call



BASS (lowest position)

 


NATURAL (mid position)

 

TREBLE (highest position)

5.2. Base station Overview

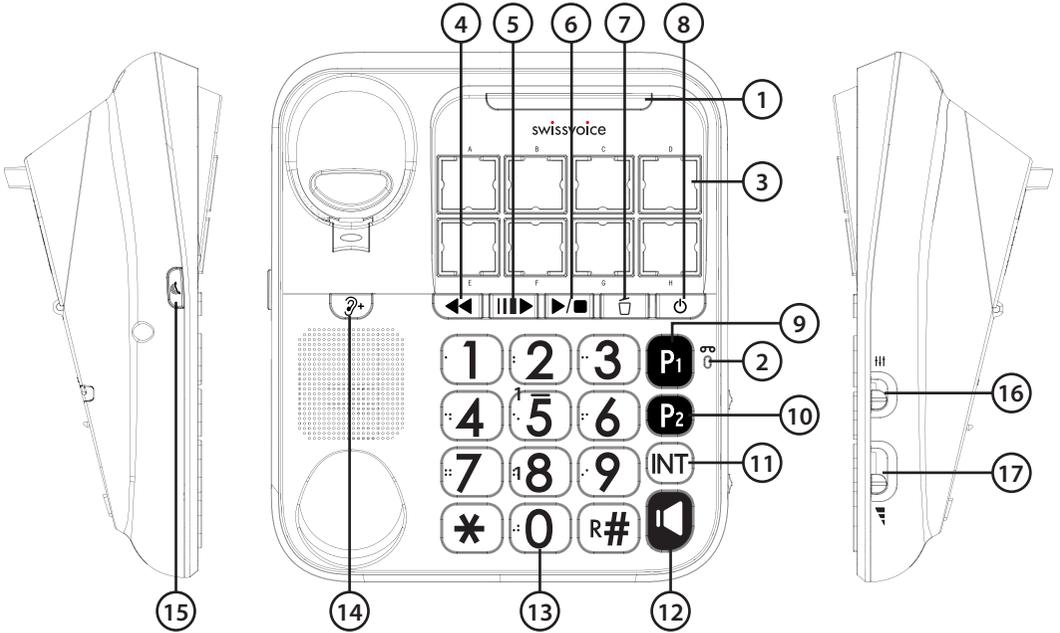

1 INCOMING CALL LIGHT

- Flashes when there is an incoming call.
- On when there the phone is in use.
- On when a device is being registered.
- On when another telephone is in line on the same line.


2 MESSAGE LIGHT (🔊)

- On when when the answering system is on.
- Flashes when there are new messages/memos in the answering system.
- Flashes slowly when pressing **|||▶** for slow play.


3 SPEED DIAL KEYS (A, B, C, D, E, F, G, H)

- Press to dial out phone number stored.


A, B, C, D

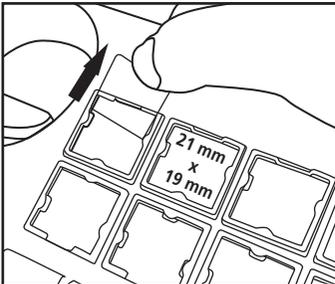


1

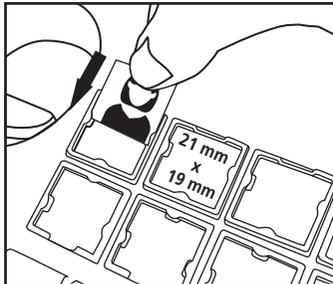


2

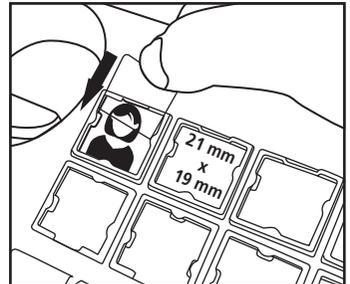


3

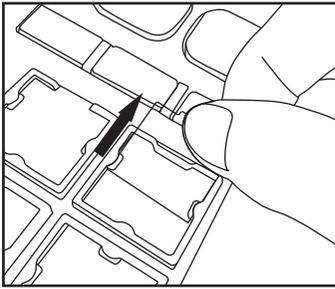

1

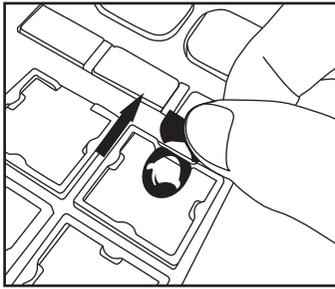

2

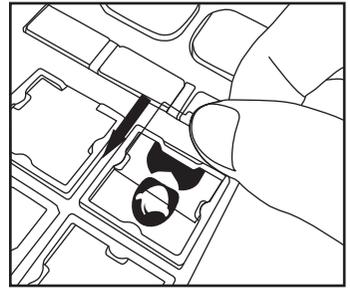

3

4 

- Press to repeat playing the current message from the beginning.
- Press twice to skip backward to the previous message.

5 

- Press to slow down the message playback.

6 

- Press to play the message.
- Press again to stop the message playback.

7 

- Press to delete the message currently playing.
- In idle mode, long press to delete all old messages.

8 

- Press to turn on the answering machine.
- Press again to turn off the answering machine

9 

- It is a program key to store telephone number in 1 of the 8 photo keys, procedures:

1. Press  once, and then press 1 of photo keys (A, B..., H),
2. Enter telephone number through base keys, and then press  again to save telephone number.

10 

- It is another program key to record your own voice in 1 of the 8 photo keys, procedures:

- Press  once, and then press 1 of photo keys (A, B..., H),

- Record your own voice after beep, and then press **P2** again to save your own voice.

Note: 15 seconds approx. recording time per memory.

11

- During standby mode, when press it, it will intercom cordless handset. If more than 1 cordless handset registered to the base, press  and 1 or 2 to call cordless handset 1 or 2.

12

- Press to make, answer or end a call through base speaker.
- Press to switch between the combo handset and the base speakerphone during a call.
- Orange LED is on during speaker mode.

13 ALPHANUMERIC KEYPAD/ */

- During a call: Press to enter numbers.
- Press any key to answer an incoming call.
- During a call: Press and hold **#** to answer an incoming call when you receive a call waiting alert*.

14

- Press to enhance the clarity and loudness through earpiece of the base during a call.



Warning: The product may emit high volume of sound. Take Extra Care when you use audio boost key, recommend you to adjust suitable volume by setting minimum, and then turn on audio boost key.

15

- Long press for 1 second to page your handset. It will ring for approximately 60 seconds.

16

- Sound experience: select "NATURAL", "BASS" or "TREBLE" during a call



BASS (lowest position)



NATURAL (mid position)



TREBLE (highest position)

- During a call: Slide up and down to increase the volume /decrease the volume.
- During message playback: Press to adjust the volume.

*Subject to subscription and availability of the service from the fixed line operator.

5.3 Display Icons and Symbols of LCD

Display icons	Description
	Full battery power level.
	2/3 battery power level.
	1/3 battery power level.
	Flashes when the battery is low and needs charging.
	The speakerphone is in use.
	On: if the handset ringer is turned off.
	On: when there are received new Voice Message Waiting (VMWI) not yet read*. Disappear: when all the voice messages have been read. (Network service dependent)*
	 displays when there the signal strength is strong.  displays when there the signal strength is moderate.  displays when there the signal strength is weak. Off when handset is out of range from the base.
	On: New call list- Missed and new calls.
	On: The answering system (TAM) is turned on. Flashes: when new TAM message is received. Off: The answering system (TAM) is turned off.
	On: when an alarm is set. Off: when an alarm is off.
	On: when audio booster is activated (in earpiece mode). Off: when audio booster is deactivated.
	On: when the telephone line is in use. Flashes: when there is an incoming call.
	On: when the entry in call list is a contact saved in black list.

6. MENU TREE

Main Menu	Level 1	Level 2	Level 3	Level 4	Level 5
CALL LOG	FIRST ENTRY	DETAILS			
	...	ADD TO PB			
	LAST ENTRY	ADD TO BL			
		DELETE	CONFIRM?		
		DELETE ALL	CONFIRM?		
PHONEBOOK	ALL	FIRST ENTRY	ADD	NUMBER	NAME
		...	VIEW		
		LAST ENTRY	EDIT	NAME	NUMBER
			DELETE	CONFIRM?	
			DELETE ALL	CONFIRM?	
			ADD TO SD	KEY 1	
				KEY 2	
				...	
				KEY 9	
			STATUS		
	SPEED DIAL	KEY 1	ADD	NUMBER	NAME
		KEY 2	VIEW		
		...	EDIT		
		KEY 9	DELETE	CONFIRM?	
BLACK LIST	FIRST ENTRY	ADD	NUMBER	NAME	
	...	VIEW			
	LAST ENTRY	EDIT			
		DELETE	CONFIRM?		
		DELETE ALL	CONFIRM?		
		STATUS			
INTERCOM	BASE				
BS SETTINGS	BS RINGER	MELODY 1			
		...			
		MELODY 5			
	RING VOL	VOLUME 5			
		...			
		OFF			
	FORCED	ON			
		OFF			
	FLASH TIME	SHORT			

		MEDIUM		
		LONG		
HS SETTINGS	RING SETUP	EXT. RING	MELODY 1	
			...	
			MELODY 10	
		INT. RING	MELODY 1	
			...	
			MELODY 10	
		RING VOL	VOLUM 5	
			...	
			OFF	
	TONE SETUP	KEY TONE	ON	
			OFF	
		BATT TONE	ON	
			OFF	
		RANGE TONE	ON	
			OFF	
	LANGUAGE	ENGLISH		
		FRENCH		
		GERMAN		
		ITALIAN		
		DUTCH		
		SPANISH		
		PORTUGUE		
	DATE&TIME	DATE FORM	DD-MM-YY	
			MM-DD-YY	
		TIME FORM	24 HR	
			12 HR	
		SET DATE	SET TIME	
	AUTO ANS.	ON		
		OFF		
	ECO MODE	ON		
		OFF		
	REGISTER			
	DEFAULT	CONFIRM?		
ANS. SYS	PLAYBACK			
	DELETE OLD	CONFIRM?		
	MEMO			
	TAM ON/OFF	ON		

			OFF		
		SET TAM	CALLSCREEN	ON	
			OFF		
		TAM MSG	PLAY		
			DELETE		
			RECORD		
		ANS. DELAY	2 RINGS		
			4 RINGS		
			6 RINGS		
			8 RINGS		
			10 RINGS		
			TOLL SAVE		
		REC. TIME	60 S		
			120 S		
			180 S		
			UNLIMITED		
		REMOTE ACC	ON		
			OFF		
		CHANGE PIN	0000		
		MSG ALERT	ON		
			OFF		
DIRECT MEM	A	ADD	NUMBER	NAME	
	..B..C..D	VOICE TAG	PLAY		
			DELETE		
			RECORD		
		VIEW			
		EDIT			
		DELETE	CONFIRM?		
REMINDER	ALARM 1	ON/OFF	ON	TIME	ONCE
	...ALARM 10		OFF		DAILY
					MON-FRI
					SAT-SUN
		MELODY	MELODY 1		
			...		
			MELODY 10		
		RENAME			
		VOICE MEMO	PLAY		
			DELETE		

			RECORD		
TLK DIGITS	ON/OFF	ON			
		OFF			

7. USING YOUR PHONE

7.1 Set Date & Time and Language

7.1.1 Set Date & Time

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **DATE&TIME**, then press **OK**.
4. Press **▲** or **▼** to select **SET DATE**, then press **OK**, Input the day, month, year, then press **OK**, input hour (24HR format), and minutes, then press **OK**, You hear confirmation tones.

Note: if digit is input wrong during input Date or Time, you can press **▲** or **▼** to select the right position and input correct digit.

7.1.2 Change language

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **HS SETTING**⁽¹⁾, then press **OK**.

(1)

EN	FR	DE	IT	NL	ES	PT
HS SETTING	REGL. COMB	MT-EINSTEL	IMP PORTAT	HS INST.	CONF SUPL	CONF TERM

3. Press **▲** or **▼** to select **LANGUAGE**⁽²⁾, then press **OK**.

(2)

EN	FR	DE	IT	NL	ES	PT
LANGUAGE	LANGUE	SPRACHE	LINGUA	TAAL	IDIOMA	IDIOMA

4. Select the desired language and press **OK**. You hear confirmation tones.

Note: When language is changed, texts of LCD screen, talking digit, and default outgoing message of answering machine will be changed accordingly.

7.2 Make, Answer, End a Call

7.2.1 Make a Call

7.2.1.1 Preparatory Dialing

Handset: Enter the phone number and press  to dial the number. Press  to clear the entry.

7.2.1.2. Direct Dialing

Handset: Press  to take the line and enter the phone number.

Base: Take up combo handset and enter the phone number, or press  to take line in speaker mode and enter the phone number.

7.2.1.3. A, B, C, ... or H key Dialing

Press A, B, C, D key on handset or Photo A, B, C ...or H key on base to dial.

Note: Before dialing, programming of A, B, C, ...or H keys is required, refer to Section 7.3.

7.2.1.4. Speed dial key Dialing (Key 1 to Key 9)

Long press Key 1, or,Key 9 on the handset or base to dial.

Note: Before dialing, programming of key 1, ...key 9 is required, refer to Section 10.5 and 11.

7.2.2. Answer a Call

Using Cordless Handset:

If the handset is not on the charging cradle, when the phone rings, press .

Using Telephone Base:

Press  to answer a call.

Take up combo handset

7.2.3. End a Call

During a call connection,

Using Cordless Handset:

Press  OR put the handset on the charging cradle to end a call.

Using Telephone Base:

Press  to end a call.

During earpiece mode, put down the combo handset on cradle.

7.3. Set Photo A, B, C,...or H key memories

This feature is VERY convenient to know who calls you if his/her telephone number is stored and voice is recorded in 1 of 8 photos keys.

You can program telephone number and record your voice through the handset or combo base. For other operations, they are controlled through the handset only. This function requires a subscription to the "Number Presentation" service of your telephone company.

7.3.1. Through handset

7.3.1.1. Input number and name

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK**.
3. Press **▲** or **▼** to select **A, B, C, D...**, then press **OK**.
4. Select **ADD**, then press **OK**, enter the telephone number, then enter his/her name, then press **OK**. You hear confirmation tones.

Note: during entering number or name, you can correct a number or a letter by pressing , then last number or letter will be removed.

7.3.1.2. Record your own voice tag

1. Continue section 7.3.1.1., press **OK**.
2. **VIEW** appears, press **▲** or **▼** to select **VOICE TAG**, then press **OK**.
3. Press **▲** or **▼** to select **RECORD**, then press **OK**.
4. **RECORDING...** will appear, then you can speak (better with louder voice) after beep tone in front of handset microphone area (near key 0).
5. Press **OK** to finish recording.
6. Your recorded voice will be playback automatically.

Note: 15 seconds approx. recording time per memory.

When calling number matched to photo A, B, C, ...or H, ringing sound with recorded voice will be announced from handset and base until you press  on handset or  on base to answer, or take up combo handset from the base .

7.3.1.3. Play Voice tag

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **DIRECT MEM**, then press **OK**.
3. Press **▲** or **▼** to select **A, B, C, D...**, then press **OK**.
4. **VIEW** appears, then press **▲** or **▼** to select **VOICE TAG**, press **OK**,
5. **PLAY** appears, then press **OK**.
6. **PLAYING VOICE TAG...** will appear. The recorded voice will be playback.

7.3.1.4. Delete Voice tag

1. Repeat the step 1 to 4 in Section 7.3.1.3.
2. **PLAY** appears, then press ▲ or ▼ to select **DELETE**, press **OK**.
3. **RESET TO DEFAULT** will display. You hear confirmation tones.

7.3.1.5. View record of Photo memory

1. Press **OK** on the handset in idle mode.
2. Press ▲ or ▼ to select **DIRECT MEM**, then press **OK**.
3. Press ▲ or ▼ to select **A, B, C, D...**, then press **OK**.
4. **VIEW** appears, then press **OK**.
5. Record (name and number) will show.

Press  to return previous menu or long press  to return to standby mode.

7.3.1.6. Edit record of Photo memory

1. Press **OK** on the handset in idle mode.
2. Press ▲ or ▼ to select **DIRECT MEM**, then press **OK**.
3. Press ▲ or ▼ to select **A, B, C, D...**, then press **OK**.
4. **VIEW** appears, then press ▲ or ▼ to select **EDIT**, then press **OK**,
5. Edit number, then press **OK**.
6. Edit name, then press **OK**.

Press  to return previous menu or long press  to return to standby mode.

Note: during entering number or name, you can correct a number or a letter by pressing , then last number or letter will be removed.

7.3.2. Through combo base

7.3.2.1. Input number

1. Press **P1** once, and then press 1 of photo keys (A, B..., H),
2. Enter telephone number through base keys, and then press **P1** again to save telephone number.

7.3.2.2. Record your own voice tag

1. Press **P2** once, and then press 1 of photo keys (A, B..., H),
2. Record your own voice after beep, and then press **P2** again to save your own voice.

7.4. Adjust Earpiece and Handsfree Volume

There are 6 levels to choose from for earpiece volume in Cordless handset and handsfree volume, and combo handset in the base through volume slide switch (refer to Section 5.1 and 5.2).

During a call:

Using Cordless Handset:

Slide up and down  to select volume 1-6. The current setting is shown in LCD.

Using telephone base:

Slide up and down  to select volume 1-6.

7.5. Audio Boost

Use the audio boost feature to enhance the clarity and loudness of your caller's voice on the cordless handset earpiece or combo handset ear piece when you are listening to a message or an announcement.

To turn on Audio Boost:

While you are on a call or listening to a message or an announcement using the handset earpiece.

Using cordless handset, press  on side of handset or

Using combo handset, press  on left front side of base.

To turn off Audio Boost:

Press  on side of handset or on front left side of combo base again.

Note: Audio boost function will be off after end of call.

 


Warning: The product may emit high volume of sound. Take Extra Care when you use audio boost key, recommend you to adjust suitable volume by setting minimum, and then turn on audio boost key.

7.6. Equalizer

The equalizer feature on the handset enables you to change the quality of the handset audio to best suit your hearing.

During a call:

1. Slide up and down  on handset or  on combo base to select Treble, Natural, or Bass.(refer to Section 5.1 item 13 (cordless handset) and Section 5.2 item 16 (for Xtra 3155 combo base) for details).

7.7. Redial

Each Cordless handset stores the last 10 dialed numbers (up to 17 digits each) in the redial list. The redial entries are not shared by all the system handsets.

In idle mode:

1. Press .
2. Press  or  repeatedly to browse the list. The handset beeps twice at the end of the list.
3. When the desired entry displays, press  to dial.

During a call:

1. Press .
2. Press  or  repeatedly to browse the list. The handset beeps twice at the end of the list.
3. When the desired entry displays, press **OK** to dial.

8. PHONE SETTINGS

8.1. Set Ringer Melody and Volume

Set Handset ringer:

During ringing,

- Press  or  in the handset to adjust ringer volume of handset

OR

1. Press **OK** on the handset in idle mode.
2. Press  or  to select **HS SETTING**, then press **OK**.
3. Select **RING SETUP** by pressing **OK**.
4. Press  or  to select **EXT. RING**, **INT. RING** or **RING VOL**, then press **OK**,
5. After selection, press **OK** to confirm setting. You hear confirmation tones.

Set Base ringer:

1. Press **OK** on the handset in idle mode.
2. Press  or  to select **BS SETTING**, then press **OK**.
3. Repeat step 3 to step 5 of the above section.

Notes:

EXT. RING means ring tone (total 10 for handset, 5 for base) will ring when external call.

INT. RING means ring tone (total 10 for handset, 5 base) will ring when internal call (between base and handset, or among 2 or more handsets registered to the base).

RING VOL is **OFF**, **VOLUME 1** to **VOLUME 5**.

When the telephone is ringing, you can temporarily set silence for the ringer of the handset by pressing  only without disconnecting the call. The next call rings normally at the preset volume.

8.2. Set Alert Tone

You can turn on the alert tone in the cordless handset when low battery/out of range is detected and key tone can be on or off.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **PHONE SETUP** then press **OK**.
4. Press **▲** or **▼** to select **KEY TONE, BATT TONE, or RANGE TONE**, then press **OK**.
5. Press **▲** or **▼** to select **ON** or **OFF**, then press **OK**. You hear confirmation tones.

8.3. Set Date and Time Format

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **DATE&TIME** then press **OK**.
4. Press **▲** or **▼** to select **DATE FORM**, then press **OK**, select your desired date format (**DD-MM-YY** or **MM-DD-YY**), OR
5. Press **▲** or **▼** to select **TIME FORM**, then press **OK**, select your desired time format (**24 HR** or **12HR**).
6. Press **OK** to confirm. You hear confirmation tones.

8.4. Talking Digit

You can turn on or off the audible spoken tone that is spoken when you press the dialing key on handset during predialing or on combo base during a call.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **TLK DIGITS**, then press **OK** to select **ON** or **OFF**.
3. Press **OK** to confirm. You hear confirmation tones.

Note: spoken language of talking digit is same as what language has been in Section 7.1.2.

8.5. Change the Flash Time

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **BS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **FLASH TIME**, then press **OK**.
4. Press **▲** or **▼** to select your desired flash time. (**Short, Medium, Long** are for your selection), then press **OK** to confirm. You hear confirmation tones.

8.6. Reset Your Phone

You can reset your phone to the default settings by using handset.

After reset, all your personal settings will be deleted and resumed to default factory settings, but your phonebook and other memories remain unchanged except redial list.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **DEFAULT**, then press **OK**, **CONFIRMED?** is displayed, then press **OK** to confirm. You hear confirmation tones.

8.7. Registration

Your handset and telephone base is pre-registered. If for some reason, the handset is not registered to the base station, **OUT RANGE** will be displayed on the handset screen. If it is out of base and  disappears on the screen, register your handset according to the following procedure.

1. Make sure the handset is out of the base and shows **OUT RANGE** before you begin registration.
2. Press and hold  on the telephone base in idle mode for around 5 seconds until incoming call light LED bar lits on the telephone base.
3. Press **OK** when idle.
4. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
5. Press **▲** or **▼** to select **REGISTER**, then press **OK**, **REGISTRNG** appears and flashes on the screen until the handset can be registered with base.

If registration fails, the telephone base screen displays **OUT RANGE**. Pls. repeat the above procedure.

8.8. Find the Handset

You can locate the handset by long pressing  1 second on the combo base. All the handsets registered to the base will produce the paging tone and **"PAGING"** is displayed on the LCD of the handsets.

You can stop the paging by pressing  ,  , on any handset or  on the base again.

Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

8.9. Conference call

Up to 5 cordless handsets and the telephone base can join an external call at the same time.

To join a call with a cordless handset:

- Press  join the call.
- Press  or place the handset in the charger to exit the call.

To join a call with the telephone base:

- Press  (speaker mode) or take up combo handset to join the call,
- Press  again, or put back combo handset to exit the call.

8.10. Transfer a call

During an external call, you can transfer the call from a cordless handset or the telephone base to another system device.

To transfer a call from a cordless handset:

During a call,

1. Press **OK**, then press **▲** or **▼** to select **INTERCOM**, then press **OK**.
2. If you have two or more cordless handsets, press **▲** or **▼** to select the desired device and then press **OK**.
3. The external call is put on hold and the cordless handset shows **CALLING HS 2** or **CALLING BASE** the destination device rings.
4. To answer the call on the destination handset, press,  , or any dialing key,

OR, To answer the call on the base, press  (speaker mode), or take up combo handset.

5. Press  on the calling handset to transfer the call to extra handset or base.

To transfer a call from the telephone base:

During a call,

1. Press  on cordless handset to start conference call among base and external call. Then, put down combo handset on combo base or if speaker mode, press  on the base to transfer the call to the cordless handset.

8.11. Intercom

Use the intercom feature for conversations between two cordless handsets or between cordless handset and base.

In idle mode,

8.11.1. Intercom initiated from cordless handset:

1. Press , and then press **OK**, then press **▲** or **▼** to select **INTERCOM**, then press **OK**.
2. If you have two or more cordless handsets, press **▲** or **▼** to select the desired device and then press **OK**.
3. The cordless handset shows **CALLING HS 2**, the destination device rings.
4. To answer the call on the destination handset, press, , or any dialing key,

OR, To answer the call on the base, press  (speaker mode) or take up combo handset.

8.11.2. Intercom initiated from base

During idle mode

1. Press **INT** to intercom the cordless handset, or if more than 1 cordless handset registered to the base, press **INT** and key 1 or 2 to intercom handset 1 or handset 2 respectively.
2. Press , on called cordless handset to start intercom with the base.

During a call

1. Press **INT** to intercom the cordless handset, or if more than 1 cordless handset registered to the base, press **INT** and key 1 or 2 to intercom handset 1 or handset 2 respectively.
2. Press , on called cordless handset to start intercom with the base.
3. Press ***** key on the base to start conference call.

8.12. Answer a Call

If the handset is not on the charging cradle:

When the phone rings, press  to answer a call.

If the handset is on the base station and if **AUTO ANSWER** is set to **ON**:

When the phone rings, pick up the handset to answer a call.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **HS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **AUTO ANS.**, then press **OK**.
4. Press **▲** or **▼** to select **ON**.
5. Press **OK** to confirm. You hear confirmation tones.

8.13. Forced Ringer

When first call is not picked up and the same caller calls again within 5 minutes, the ringer level of handset and base will be automatically set to maximum, in order to alert elderly people or people who may be far from the telephone aware of the phone that is ringing.

1. Press **OK** on the handset in idle mode.
2. Press **▲** or **▼** to select **BS SETTING**, then press **OK**.
3. Press **▲** or **▼** to select **FORCED**, then press **OK** to select **ON**.
4. Press **OK** to confirm. You hear confirmation tones.

If disable Forced ringer feature.

1. Repeat the above item to 1 to 2.
2. Press **▲** or **▼** to select **FORCED**, then press **OK** to select **OFF**.
3. Press **OK** to confirm. You hear confirmation tones.

8.14. ECO MODE

1. Press **OK** and **▲** or **▼** to select **HS SETTING**.
2. Press **OK** and **▲** or **▼** to select **ECO MODE**.
3. Press **OK** and **▲** or **▼** to select **ON** or **OFF**.
4. Press **OK** to confirm. You hear confirmation tones.

9. CALLER DISPLAY (Network dependent)

This feature is available if you have subscribed the Caller Line Identification service with your telephone service provider.

Your phone can store up to 30 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed with the number.

If the caller number is disabled to send caller information, **UNAVAIL** will display. If the caller number is not provided, **PRIVATE** will display.

In standby, if three unanswered calls with different calling number are received, **"3 NEW CALLS"** will be displayed. Each time you review a call list entry marked with **★** icon, the number of new calls decreases by one. When you have reviewed all the new calls, the **★** icon no longer shows.

If the incoming telephone number matches the last 7 digits of a telephone number in your phonebook, the name that appears on the screen matches the corresponding name in your phonebook.

9.1. View the call list

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The latest call log is stored only when it is same calling number.

In idle mode,

1. Press **OK**, then press **▲** or **▼** to select **CALL LOG**, then press **OK** to review the calling number display history
2. Press **▲** or **▼** to browse the call log.
3. Press **OK**, **DETAILS** will show.
4. Press **OK** to view the details of the call log including date and time. (Date/Month and Time appears in left and right sides of lower row respectively)
5. Press  to return previous menu or long press  to return to standby mode

9.2. Store a Call List Number into the Phonebook

1. Select a desired entry in the call list, and then press **OK**.
2. Press **▲** or **▼** to select **ADD TO PB**, and then press **OK**.
3. Call number will show, press **OK** to confirm.
4. Call name will show, if there is blank name, you can add the name.
5. Press **OK** to confirm. You hear confirmation tones.

9.3. Store a Call List Number into the Black List

1. Select a desired entry in the call list, and then press **OK**.
2. Press **▲** or **▼** to select **ADD TO BL**, and then press **OK**.
3. Call number will show, press **OK** to confirm.
4. Call name will show, if there is blank name, you can add the name.
5. Press **OK** to confirm. You hear confirmation tones.

9.4. Delete an entry in the call list

1. Select a desired entry in the call list.
2. Press **▲** or **▼** to select **DELETE**, and then press **OK**.
3. **CONFIRM?** will show, Press **OK** to confirm. You hear confirmation tones.

9.5. Delete all entries in the call list

1. Select a desired entry in the call list.
2. Press **▲** or **▼** to select **DELETE ALL**, and then press **OK**.
3. **CONFIRM?** will show, Press **OK** to confirm. You hear confirmation tones.

9.6. Call Waiting

You hear a tone in the handset earpiece if someone calls while you are already on a call.

9.6.1. Using handset or speaker mode from the handset

- Long press **#** key on cordless handset to put your current call on hold and take the new call.
- Long press **#** key on cordless handset to switch back and forth between calls.

9.6.2. Using handset or speaker mode from the combo base

- Long press **#** key on combo base to put your current call on hold and take the new call.
- Long press **#** key on combo base to switch back and forth between calls.

9.7. Voice Mail (Network Dependent)

By subscription to your operator, you can have your calls diverted to a voicemail box when you are absent. For more details, contact your operator.

When new messages are received,  appears on the screen. The  disappears once you have consulted the voicemail messages.

To reset the voicemail indicator:

1. Press **OK** to select **CALL LOG**.
2. Press **▲** or **▼** to select Voice Mail log.
3. Long Press key 4, and then  should disappear.

10. PHONEBOOK

The phonebook stores up to 100 entries, which are shared by all devices.

10.1. Add a new phonebook entry

In idle mode,

1. Press  or,
2. Press **OK**, press **▼** to select **PHONEBOOK**, then press **OK** to select **ALL**, press **OK**.



3. Press **OK**, **ADD** will show, press **OK**.
4. Enter a telephone number, press **OK**.
5. Enter a name, then press **OK**. You hear confirmation tones.

10.2. View a phonebook entry

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** will show, then press **▲** or **▼** to select **VIEW**, press **OK** to review name and number of the entry.

Press  to return previous menu or long press  to return to standby mode.

10.3. Search a phonebook entry

1. Follow the steps in View a phonebook entry above to enter the phonebook.
2. Enter the first character of the name to search.

10.4. Edit a phonebook entry

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** will show, then press **▲** or **▼** to select **EDIT**, press **OK** to edit the number.
3. Press **OK** to edit the name. You hear confirmation tones.

Note: during entering number or name, you can correct a number or a letter by pressing , then last number or letter will be removed.

10.5. Store phonebook in speed dial

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** will show, then press **▲** or **▼** to select **ADD TO SD**, press **OK**.
3. Press **▲** or **▼** to select **KEY 1** to **KEY 9**.
4. Press **OK** to confirm. You hear confirmation tones.

10.6. Delete a phonebook entry

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** will show, then press **▲** or **▼** to select **DELETE**, press **OK**.
3. **CONFIRM?** will display, press **OK** to confirm. You hear confirmation tones.

10.7. Add to speed dial key

1. Select a desired entry in the phone book, and then press **OK**.
2. **ADD** will show, then press **▲** or **▼** to select **ADD TO SD**, press **OK**.
3. Press **▲** or **▼** to select **KEY 1, ... KEY 9**, press **OK** to confirm. You hear confirmation tones.

10.8. Status of phonebook

You can view how many phonebook records are stored out of total 100 records.

1. Press , press **OK**
2. **ADD** will show, then press **▲** or **▼** to select **STATUS**, press **OK**.
3. **X / 100 USED** will display

11. SPEED DIAL KEYS (KEY 1 TO KEY 9)

You can make use of key 1 to key 9 on handset or combo base as speed dial keys, by long pressing it to dial in idle mode or in talk mode.

11.1. Store a speed dial entry

1. Press **OK**, press **▼** to select **PHONEBOOK**, then press **OK**.
2. Press **▼** to select **SPEED DIAL**, press **OK**.



3. Press **▲** or **▼** to select **KEY 1, ... KEY 9**, then press **OK**.
4. **ADD** will display, then press **OK**.
5. Enter a number, then press **OK**.
6. Enter a name, then press **OK**. You hear confirmation tones.
7. Press  to return previous menu or long press  to return to standby mode.

11.2. View a speed dial entry

1. Repeat the step 1 to 3 in Section 11.1.
2. **VIEW** will display, then press **OK**.
3. The record (number and name) can be viewed.

Press  to return previous menu or long press  to return to standby mode.

11.3. Edit a speed dial entry

1. Repeat the step 1 to 3 in Section 11.1.
2. **VIEW** will display, then press ▲ or ▼ to select **EDIT**, then press **OK**.
3. Edit a number, then press **OK**.
4. Edit a name, then press **OK**. You hear confirmation tones.

Note: during entering number or name, you can correct a number or a letter by pressing  , then last number or letter will be removed.

11.4. Delete a speed dial entry


1. Repeat the step 1 to 3 in Section 11.1.
2. **VIEW** will display, then press ▲ or ▼ to select **DELETE**, then press **OK**.
3. **CONFIRM?** will display, then press **OK**. You hear confirmation tones.

12. Black List

This function requires a subscription to the "Number Presentation" service of your telephone company.

Your phone can help you to reject the calls that are treated as blacklist which is total 100 blacklist entries. Once the blacklist call dials in, your phone will help to reject the call silently. The blacklist call will also be recorded in the call log with

 icon, like below screen:

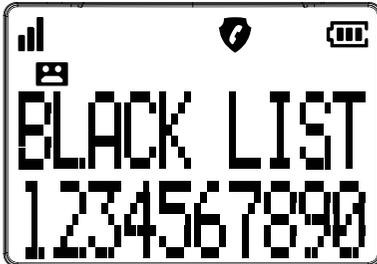

12.1. Store a black list entry

1. Press **OK**, press ▼ to select **BLACKLIST**, then press **OK**.
2. If the entry is empty, it shows **EMPTY** for 3 seconds, then **ADD** will show, or if the entry is not empty, press **OK**. **ADD** will show.
3. Press **OK**, enter the number, press **OK**.
4. Enter a name, then press **OK**. You hear confirmation tones.
5. Press  to return previous menu or long press  to return to standby mode.

12.2. View a black list entry

1. Select an entry in blacklist, press **OK**.
2. **ADD** will show, and then press **▲** or **▼** to select **VIEW**, then press **OK**.
3. The record (number and name) can be viewed.

Press  to return previous menu or long press  to return to standby mode.

12.3. Edit a black list entry

1. Select an entry in blacklist, press **OK**.
2. **ADD** will show, and then press **▲** or **▼** to select **EDIT**, then press **OK**.
3. Edit a number, then press **OK**.
4. Edit a name, then press **OK**. You hear confirmation tones.

Note: during entering number or name, you can correct a number or a letter by pressing , then last number or letter will be removed.

12.4. Delete a black list entry

1. Select an entry in blacklist, press **OK**.
2. **ADD** will show, and then press **▲** or **▼** to select **DELETE**, then press **OK**.
3. **CONFIRM?** will display, then press **OK**. You hear confirmation tones.

12.5. Delete all black list entries

1. Select an entry in blacklist, press **OK**.
2. **ADD** will show, and then press **▲** or **▼** to select **DELETE ALL**, then press **OK**.
3. **CONFIRM?** will display, then press **OK**. You hear confirmation tones.

12.6. Status of black list entry

You can view how many blacklist records are stored out of total 100 records.

1. Press **OK**, press **▼** to select **BLACKLIST**, then press **OK**.
2. Press **OK**, **ADD** will show.
3. Press **▲** or **▼** to select **STATUS**, press **OK**.
4. **X / 100 USED** will display.

13. REMINDER

The reminder feature helps remind you of important events. You can set the reminder to record your voice, or use alarm sound in order to remind you only once, or in daily, Monday to Friday or Saturday to Sunday. Once you set the reminder, the system will alarm you at the alarm time. Each reminder can be up to 2 minutes in length.

13.1. Turn on alarm reminder, set time and frequency.

1. Press **OK** when idle.
2. Press **▲** or **▼** to select **REMINDER**, then press **OK**.
3. Press **▲** or **▼** to select **ALARM 1.. ALARM 10**, then press **OK**.
4. **ON/OFF** will show, then press **OK** to select **ON**.
5. Enter the time then press **OK**.
6. Press **▲** or **▼** to select frequency **ONCE, DAILY, MON-FRI, SAT-SUN**,
7. Press **OK** to confirm. You hear confirmation tones.

13.2. Select melody of the alarm reminder

1. Repeat step 1 to 3 in Section 13.1.
2. **ON/OFF** will show, then press **▼** to select **MELODY**, press **OK**.
3. Press **▲** or **▼** to select desired melody.
4. Press **OK** to confirm. You hear confirmation tones.

13.3. Rename the alarm reminder

1. Repeat step 1 to 3 in Section 13.1.
2. **ON/OFF** will show, then press **▼** to select **RENAME**, press **OK**.
3. Change name from **ALARM** to the name you desire (max. 9 letters or digits)
4. Press **OK** to confirm. You hear confirmation tones.

Note: during entering number or name, you can correct a letter by pressing , then last number or letter will be removed.

13.4. Record Voice memo of the alarm reminder

1. Repeat step 1 to 3 in Section 13.1.
2. **ON/OFF** will show, then press **▼** to select **VOICE MEMO**, press **OK**.
3. **PLAY** will show, then press **▼** to select **RECORD**, press **OK** to start recording.
4. **RECORDING...** will show. After beep sound, you can record your voice.
5. Press **OK** to finish your voice recording. Your voice will replay.
6. Press  to return previous menu or long press  to return to standby mode.

Notes:

1. You can playback your memo voice in step 3 to select **PLAY**, then press **OK**. **PLAYING VOICE MEMO** will appear.
2. You can delete your memo voice in step 3 to select **DELETE**, press **OK**. Then, **RESET TO DEFAULT** will appear after the memo is deleted.
3. If no voice memo in the alarm reminder, only melody will play for 2 minutes at the alarm time.

14. ANSWERING MACHINE

The total storage capacity for the outgoing message, messages and memos is approximately 30 minutes.

Note: Your answering system will answer call after 14 rings even when the answering machine is turned off. This is to allow the remote access feature to work.

14.1. Turn on/off the answering machine

If you turn the answering machine on, it answers calls and records messages.

The red message LED  on the telephone base is on and the  icon on the handset will be on too.

Answer on/off through Cordless handset:

1. Press  in idle mode.
2. Press  or  to select **ANS. SYS**, then press .
3. Press  or  to select **TAM ON/OFF**, then press .
4. Press  or  to select **ON** or **OFF**, then press  to save. You hear confirmation tones.

Answer on/off through base:

Press  key on the base to turn the answering machine on or off.

Note: When Answering machine is off, the red message LED  on the telephone base will be off and the  icon on the handset will be off too.


14.2. Message Playback

If 2 new voice messages are stored in the phone, “**2 NEW MESSAGES**” will appear and the  icon will flash on the handset screen, the red message LED  on the telephone base will flash.

If memory is full, **MEM FULL** will display in the screen.

Listen new messages through the Cordless Handset :

1. Press  in idle mode.
 2. Press  or  to select **ANS. SYS**, then press .
- To play new messages, press  to select **PLAYBACK**.
 - Time and date of the message played will display on the screen if listened through handset.

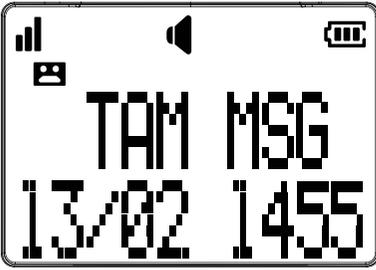

- After end of all messages, “END OF MESSAGES” will appear.

Options during playback:

- Press  to play the messages through the handset earpiece.
- Slide  up or down on side of handset to adjust the speakerphone volume.
- Press 6 to skip to the next message.
- Press 4 to repeat the message currently playing. Press 4 twice to listen to the previous message.
- Press 2 to delete the current message
- Press 5 or  to stop.

OR,

During playback, press  to select options:

STOP

FORWARD

PREVIOUS

DELETE

Listen new messages through the Base:

1. Press  to listen to new messages through base speaker. After playback all new messages, a long beep will emit from the base.
2. To playback old messages, press  again to listen.

Options during playback:

- Slide up/down  on the side of base to adjust the speaker volume
- Press  to repeat the message currently playing.
- Press  to delete the current message. .
- Press  to stop.
- Press  to reduce the playback speed.

14.3. Delete Old Messages in the Answering Machine

Delete all old messages through the Handset:

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. **PLAYBACK** will show, and then press **▲** or **▼** to select **DELETE OLD**, then press **OK**.
4. The handset displays **CONFIRM?** Then press **OK** to confirm.
5. The handset displays **DELETING...** and then **DELETED** is shown. You hear confirmation tones.

Delete a message through the base:

1. Press **▶/■** to listen new or old messages through base speaker.
2. Press **☐** to delete the message being listened. You hear confirmation tones.

Delete all old messages through the Base:

1. During idle mode, long press **☐** to delete all old messages. You hear confirmation tones.

14.4. Record a Memo

You can record your memo message for another user.

1. Press **OK** in idle mode to enter the main menu.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. **PLAYBACK** will show, and then press **▲** or **▼** to select **MEMO**, then press **OK**.
4. **RECORDING** shows on the screen. After the tone, speak towards the microphone.
5. Press **OK** when you finish recording. **PLAYING MEMO...** shows on the screen. Your recorded memo will be playback. then returns to the previous menu.
6. When another user listens the memo (procedure refers to Section 14.2 through handset or base), the time & date of the memo will display on the screen if listened through handset.



Notes:

- MEM FULL will display in the screen if you attempt to record a memo when the memory is full.
- Each memo can be up to 4 minutes in length.
- Memos shorter than two second are not recorded.

14.5. Outgoing Message (OGM)

The telephone is preset with a greeting that answers calls with “please leave a message after the tone.” You can use this default outgoing message, or replace it with your own.

14.5.1. Play your outgoing message (OGM)

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. **PLAYBACK** will show, and then press **▲** or **▼** to select **SET TAM**, then press **OK**.
4. **CALLSCREEN** will show, and then press **▲** or **▼** to select **TAM MSG**, then press **OK**.
5. **PLAY** will show on the screen, then press **OK**, **PLAYING ANNC...** will show, then it will play the default outgoing message.

14.5.2. Record your own outgoing message (OGM)

1. Repeat step 1 to 4 in Section 14.5.1.
2. **PLAY** will show on the screen, then press **▼** to select **RECORD**, and then press **OK**.
3. **RECORDING...** will show, and then you can record your outgoing message after beep tone.
4. After finishing record, press **OK**, **PLAYING ANNC...** will show, then it will playback your own outgoing message.

Notes:

- Your outgoing message can be up to 90 seconds in length.
- Outgoing messages shorter than two seconds are not recorded.

14.5.3. Delete your outgoing message

1. Repeat step 1 to 4 in Section 14.5.1
2. **PLAY** will show on the screen, then press **▼** to select **DELETE**, and then press **OK**.
3. **RESET TO DEFAULT** will show, You hear confirmation tones.

14.6. Answering Machine Settings

14.6.1. Set Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after 2 to 10 rings or TOLL SAVE.

With TOLL SAVE selected, the answering machine answers after 2 rings when you have new messages, and after 4 rings when you have no new messages.

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. Press **▲** or **▼** to select **SET TAM**, then press **OK**.
4. Press **▲** or **▼** to select **ANS. DELAY**, then press **OK**.
5. Press **▲** or **▼** to select **2, 4, 6, 8, 10 rings** or **TOLL SAVE**, then press **OK** to save. You hear confirmation tones.

14.6.2. Recording Time

You can set the maximum length of the recording time of the incoming messages.

1. Repeat step 1 to 3 in Section 14.6.1
2. Press **▲** or **▼** to select **REC. TIME**, then press **OK**.
3. Press **▲** or **▼** to select **60s, 120s, 180s** or **UNLIMITED**, then press **OK** to save. You hear confirmation tones.

14.6.3. Call Screening

When the answering machine is set to ON and when there is an incoming message, the base will start call screening if call screening is set to ON after the preset numbers of rings of answer delay, press **OK** to screen the call on your handset too.

At any time if you want to pick up the call, you can press  on the handset, or press  on the telephone base, or pick up combo handset and the message recording will be stopped automatically. If the answering machine is in the process of recording, the message already stored will be saved.

1. Repeat step 1 to 3 in Section 14.6.1
2. **CALLSCREEN** will display, then press **OK**.
3. Press **▲** or **▼** to select between **On** and **Off**, then press **OK** to save. You hear confirmation tones.

Options while a message is being recorded in the telephone base:

- Slide up/down  on the side of base to adjust the speaker volume.
- Press  to temporarily turn off the feature.

Options while a message is being recorded in the cordless handset:

- Press **OK** to temporarily turn on the feature if it is set to off.
- Slide  up or down on side of handset to adjust the speakerphone volume.
- Press  to temporarily turn off the feature.

14.6.4. Activate Remote Access

You can access the answering machine remotely by dialling your fixed telephone number from any touch-tone telephone.

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 2-digit remote access PIN on a tone-dialing phone.

To activate remote access function:

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. Press **▲** or **▼** to select **SET TAM**, then press **OK**.
4. Press **▲** or **▼** to select **REMOTE ACC**, then press **OK**.
5. Press **▲** or **▼** to select **ON** or **OFF**, then press **OK** to save. You hear confirmation tones.

To change the remote code:

1. Repeat step 1 to 3 as above.
2. Press **▲** or **▼** to select **CHANGE PIN**, then press **OK** to enter a 4-digit number.
3. Press **OK** to save. You hear confirmation tones.

To remotely access your answering machine remotely:

You can ring your phone from another tone-dialing phone to switch on or off the answering machine and listen to your messages remotely.

1. Place a call from a tone-dialing phone to your phone.
2. When the answering machine answers the calls and starts playing the outgoing message, enter ***** key and then 2-digit remote access code (00 is the preset code).
3. Then the following description will operate by pressing the following key in your tone-dialing phone.

Key	Description
2	Delete the message currently being played.
4	Repeat the current message or press twice for the previous message.
5	Play all messages.
6	Skip to the next message.
7	Turn on the answering machine.
9	Turn off the answering machine.

Notes:

- After 5 seconds of key inactivity, the answering machine automatically cuts off communication.
- When the answering machine is turned off, the telephone answers after 14 rings, and plays the outgoing message.

14.6.5. Message Alert Tone

When the message alert tone is set to **On**, the telephone base beeps every 10 seconds to alert you to new messages. The tone stops when all new messages have been reviewed.

1. Press **OK** in idle mode.
2. Press **▲** or **▼** to select **ANS. SYS**, then press **OK**.
3. Press **▲** or **▼** to select **SET TAM**, then press **OK**.
4. Press **▲** or **▼** to select **MSG ALERT**, then press **OK**.
5. Press **▲** or **▼** to select **ON** or **OFF**, then press **OK** to confirm. You hear confirmation tones.

Pressing any telephone base key temporarily silences the message alert tone. The message alert tone plays with the next incoming message.

15. TECHNICAL SPECIFICATIONS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 4
Intercom Mode	Yes
Three-Way Conference	Yes (1 outside correspondent + 2 internal correspondents)
Electrical Connection/Base Mains Adaptor/Charger	<p>Base: Model No.: CS6F060080FGF, CS6F060080FBF, S006AKB0600080 Input: 100-240 V/50-60 Hz/0.2 A Output: 6 V DC/800 mA</p> <p>Charger: RJ-AS060450E002, RJ-AS060450B001, VT04EEU06045, VT04EUK06045 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/450 mA</p> <p>Only use the adaptors supplied with telephone. Single-phase AC, excluding IT install defined by the EN60950 standard.</p> <p>Caution: The network voltage is classified as hazard by the criteria of this standard.</p>
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN60950 standard.
Batteries	AAA NiMH batteries– 1.2 V (3 pieces) Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating Temperature	From 5°C to 40°C

* Values may vary according to environment.

** Depending on initial battery charge.

16. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Phone does not work

- Make sure you installed the batteries correctly.
- Check that the mains power is correctly connected for the charger.

“NO LINE” appears in the screen

- Is the telephone cord plugged into the phone socket?
- Only use the telephone cord supplied with the phone.
- The telephone line cord might be malfunctioning. Install a new telephone line cord.
- Disconnect the telephone and connect a different telephone. If there is no dial tone on this telephone, the problem is in your wiring or local service. Contact your local telephone company.

No dial tone

- Is the telephone cord plugged into the phone socket?
- Check that the mains power is switched on.
- Only use the telephone cord supplied with the phone.
- The telephone line cord might be malfunctioning. Install a new telephone line cord.
- Move the cordless handset closer to the telephone base. It might be out of range.
- Disconnect the telephone and connect a different telephone. If there is no dial tone on this telephone, the problem is in your wiring or local service. Contact your local telephone company.

Cannot dial out or receive calls

- Check that the mains power is correctly connected.
- The battery may need recharging.
- Has there been a power cut? If so, place the handset back on the base for 10 seconds and try again. If it still does not work disconnect the batteries and mains power for 10 minutes, then reconnect and try again.
- If you are connected to a PABX, check whether you need to dial an access code.

Your own voice cannot be announced when the telephone number of incoming call is same as 1 of 8 photo memories stored

- The ringer volume may be switched off.
- Voice recording in 1 of 8 photo memories was not done successfully. Please refer to Section 7.3 to record again.
- Your telephone line may not be subscribed or availability of the service from the fixed line operator.

Cordless handset does not ring

- The ringer volume may be switched off.
- Check that the mains power is correctly connected.
- Make sure the cordless handset is registered to the base.

No display in cordless handset

- The batteries may be flat, dead or incorrectly inserted.
- Recharge or replace the batteries

Handset displays “OUT RANGE”

- Check that the cordless handset is within range of the base.

No voice tag announcement from cordless handset during ringing

- It should become normal after 1 minute in idle mode without any operation of the phone.

You hear the busy tone when you press  key on handset

- Make sure the cordless handset is in range of the base.
- Another cordless handset registered to your telephone base may be on the line.

Buzzing noise on my phone or on other electrical equipment nearby

- Sometimes your phone can interfere with other electrical equipment if it is placed too close. It is recommended that you place your phone at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference.
- If you have an ADSL internet service ensure correct filters are installed to prevent interference.

Answering machine does not record any messages

- Make sure the answering machine is switched on.
- The memory may be full, please delete some old messages to free up space.

Cannot access your messages from another phone

- Have you changed the remote access security PIN code?
- Make sure you are calling from a touch-tone telephone. When dialling a number, there should be tones.
- The answering machine might not detect the remote access code when your outgoing message is playing. Try again to press remote access code quickly.
- There might be interference on the telephone line you are using. Press the dial pad keys firmly when dialing.

Voicemail and  show on the display and I don't know why.

Your telephone has voicemail indication that is separate from the built-in answering system. If  appears on the display, then your telephone has received a signal from your telephone service provider that you have a voicemail message waiting for you to retrieve from your telephone service provider. Contact your telephone service provider for more information on how to access your voicemail.

The store where you bought your telephone can also provide you with information and after-sales support.

17. GUARANTEE

Please read carefully the user guide included in this box. Xtra 3155 is an approved equipment in accordance with the European regulations, attested by the CE marking. The product you just bought is a technological product, it must be handled with care.

Note: You have a legal warranty on this product in accordance with the regulations applicable to the sale of consumer goods in the country in which you made this purchase.

For any information regarding this legal warranty, please contact your dealer. Without prejudice to the legal guarantee of the products, ATLINKS guarantees that the product in this box conforms to its technical specifications contained in the user guide included in the this box, and this during a warranty period, counted from the date of purchase of the new product, the date on your invoice or ticket checkout where is indicated the name of your reseller, and equal to: Twenty four (24) months for the telephone, excluding consumables, accessories and batteries. For any claim under this warranty during the warranty period, you must return the entire Product to your dealer, together with the proof of purchase, the invoice or receipt issued by your dealer, indicating the place of purchase and the serial number of the Product, following the appearance or discovery of the defect. ATLINKS undertakes to repair any defective item due to a defect in design, material or workmanship, at its expense, or to replace, at its expense, by an identical or at least equivalent element in terms of functionalities and performance. If the repair or replacement is impossible under normal commercial conditions, the Product will be refunded or replaced by a Product equivalent. Within the maximum limit allowed by the applicable law, the product or element replacement, which may be new or reconditioned, is warranted during a period of ninety (90) days from the date of repair or until the end date of the initial warranty period, whichever is the earlier greater than ninety (90) days, it being specified that any period of immobilization of the Product of at least seven (7) days will be added to the warranty period remaining to run. This warranty does not apply in the following cases:

- Installation or use not in accordance with the instructions in the guide of the user,

- Incorrect connection or abnormal use of the Product, especially with noncompatible accessories, as indicated in the user guide,
- Product opened, modified or replaced by means of non-approved parts, serial number deleted, illegible, damaged,
- Normal wear, including normal wear and tear on accessories, batteries and displays,
- Failure to comply with the technical and safety standards in force in the area geographical use,
- Product having suffered a shock or a fall,
- Product damaged by lightning, electrical surge, heat source or radiation, water damage, exposure to conditions of temperature, humidity or other excessive ambient conditions or any other cause external to the product,
- Negligence or faulty maintenance,
- An intervention, a modification or a repair carried out by a not authorized by ATLINKS.

If the returned Product is not covered by the warranty, you will receive a quote from repair that will mention the cost of analysis and transportation costs that you will be charged if you want the Product returned to you. This guarantee is valid in the country in which you regularly purchased the Product, provided that the country is a member of the European Union. Subject to the legal provisions in force, all warranties other than described herein are expressly excluded.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW,

- A) THIS WARRANTY IS EXCLUSIVE TO ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE PARTICULAR;
- B) ATLINKS DISCLAIMS LIABILITY FOR LOSS OR DETERIORATION OF DATA, LOSS OF USE LOST TO WIN, LOSS OF CHANCE, DEREVENUES OR INCOME, LOSS OF OPERATION, DAMAGES INDIRECT, CONSEQUENTIAL, CONSEQUENTIAL OR INCIDENTAL;
- (C) ATLINKS LIABILITY IS LIMITED TO THE VALUE OF PURCHASE OF PRODUCT EXCEPT HEAVIL OR UNINTENTIONAL FAULT AND EXCEPT DAMAGE BODY

18. SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

We recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.

It is recommended that you avoid using this device during electrical storms.

Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

Hereby, ATLINKS EUROPE declares that the radio equipment type DECT is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.swissvoice.net

Maximum Output Power (NTP) : 24dBm

Frequency Range : 1880-1900MHz

Swissvoice Xtra 3155



19. ENVIRONMENT



This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.
- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations.

Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!



DECLARATION OF CONFORMITY (DoC)

We,
ATLINKS EUROPE
147, Avenue Paul Doumer,
92500, Rueil-Malmaison
FRANCE

Declare under our sole responsibility that the product(s):

Brand = **SWISSVOICE** Model No = **XTRA 3155, XTRA 3155 Duo, XTRA 3155 Trio, XTRA Extra** Product Description = **DECT**

Comply:

- With the essential requirements and other relevant requirements of the RED directive (2014/53/EU) based on the following standards and other normative documents:
 - EN 60950-1 (2006) + A11 (2009) + A1 (2010) + A12 (2011) + A2 (2013)
 - EN 301496 V2.2.2 (2016)
 - Maximum Output Power (NTP): 24dBm
 - Frequency Range: 1897.344MHz to 1881.792MHz (Remark : $F_c = F_0 - c \times 1.728 \text{ MHz}$, where $F_0 = 1 897.344 \text{ MHz}$; and $c = 0, 1, \dots, 9$)
 - Draft EN 301489-01 V2.2.0 (2017) / Draft EN 301489-06 V2.2.0 (2017)
 - EN 60479 (2010) / EN 50663 (2017) / EN 62311 (2008)
- With Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies
- With the RoHS Directive 2011/65/EU of June 8, 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment

This conformity is understood as being effective if the products for which it is given is installed and used according to the instructions provided in the user's guide.

Rueil-Malmaison, 30 Mar. 2018
Jean-Alexis DUC
Managing Director Alllinks Europe

ATLINKS

147 avenue Paul Doumer
92500 RUEIL-MALMAISON France
RCS Nanterre 508 823 747

www.swissvoice.net

Swissvoice is a trademark of Swissvoice International SA.

©Copyright Swissvoice International SA 2018

The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.

Swissvoice Xtra 3155
A/W No.: 10001893 Rev.1 (EN)
Printed in China